



Instruction Manual

COMPACT TYPE GAS ANALYZER

TYPE: ZSVF



PREFACE

We are grateful for your purchase of Fuji Compact Type Gas Analyzer, TYPE: ZSVF.

- First read this instruction manual carefully until an adequate understanding is acquired, and then proceed to installation, operation and maintenance of the analyzer. Wrong handling may cause an accident or injury.
- The specifications of this analyzer are subject to change without prior notice for further product improvement.
- Modification of this analyzer is strictly prohibited unless a written approval is obtained from the manufacturer. Fuji Electric will not bear any responsibility for a trouble caused by such a modification.
- This instruction manual shall be stored by the person who actually uses the analyzer.
- After reading the manual, be sure to store it at a place easier to access.
- This instruction manual should be delivered to the end user without fail.

Manufacturer: Fuji Electric Co., Ltd.
Type: Described in the nameplate on main frame
Date of manufacture: Described in the nameplate on main frame
Product nationality: Japan

Request

- It is prohibited to transfer part or all of this manual without Fuji Electric's permission in written format.
- Description in this manual is subject to change without prior notice for further improvement.

© Fuji Electric Co., Ltd. 2005

Issued in October, 2005
Rev, 1st edition May, 2006
Rev, 2nd edition October, 2009
Rev, 3rd edition July, 2010
Rev, 4th edition April, 2011

CAUTION ON SAFETY

First of all, read this “Caution on safety” carefully, and then use the analyzer in the correct way.

- The cautionary descriptions listed here contain important information about safety, so they should always be observed. Those safety precautions are ranked in 3 levels, “DANGER,” “CAUTION” and “PROHIBITION.”

 DANGER	Wrong handling may cause a dangerous situation, in which there is a risk of death or heavy injury.
 CAUTION	Wrong handling may invite a dangerous situation, in which there is a possibility of medium-level trouble or slight injury or only physical damage is predictable.
 PROHIBITION	Items which must not be done are noted.

Caution on installation, transport and storage of gas analyzer

 DANGER	<ul style="list-style-type: none"> • This unit is not explosion-proof type. Do not use it in a place with explosive gases to prevent explosion, fire or other serious accidents.
 CAUTION	<ul style="list-style-type: none"> • The gas analyzer is heavy. It should be installed with utmost care. Otherwise, it may tip over or drop, for example, causing accident or injury. • For lifting the gas analyzer, be sure to wear protective gloves. Bare hands may invite an injury. • This unit should be installed in a place which conforms to the conditions noted in the instruction manual. Otherwise, it may cause electric shocks, fire or malfunction of the unit. • During installation work, care should be taken to keep the unit free from entry of cable chips or other foreign objects. Otherwise, it may cause fire, trouble or malfunction of the unit.

Caution on piping



DANGER

Be sure to observe the following precautions while installing piping. Improper piping may result in gas leakage. If the leaking gas contains a toxic component, serious accidents may result. If it contains combustible gases, explosion or fire may result.

- Connect pipes correctly referring to the instruction manual.
- Discharge the exhaust gas outdoors to prevent it from remaining within the sampling device or indoors.
- Relieve the exhaust gas from the analyzer to the atmospheric pressure to prevent buildup of undesirable pressure to the analyzer. Otherwise piping within the analyzer may be disconnected, resulting in gas leakage.
- Use pipes and pressure reducing valves to which no oil/grease is attached for piping. Otherwise, fire may result.

Caution on wiring



CAUTION

- Be sure to turn off all the power before installing wiring. Otherwise electric shock may result.
- Be sure to perform class D grounding work. Otherwise, electric shock or failure may result.
- Select a proper wiring material that satisfies the ratings of the instrument. Otherwise, electric shock or fire may result.
- Be sure to connect a power supply of correct rating. Otherwise, fire may result.

Caution on use



DANGER

- If unusual smell or sound has been produced, immediately stop the instrument. Any discharge produced may cause a fire.



CAUTION

- Leaving the analyzer unused for a long time or restarting it after long-term suspension requires procedures different from normal operation or suspension procedures. Be sure to follow the instructions in each instruction manual. Otherwise, intended performance may not be achieved, or accidents or injury may result.
- Do not operate the analyzer for a long time with its door left open. Otherwise, dust, foreign matter, etc. may stick on internal walls, thereby causing faults.

Caution on use



PROHIBITION

- Do not put stick or finger into the fan (exhaust gas outlet, electronic chiller). You may get hurt by a turning fan.
- Do not allow metal, finger or others to touch the power and input/output connectons in the instrument. Otherwise, faults, electric shock or injuries may be caused.
- Do not smoke nor use a flame near the gas analyzer. Otherwise, a fire may be caused.

Caution on maintenance and check



DANGER

- For correct handling of calibration gas or other reference gases, carefully read their instruction manuals beforehand. Otherwise, carbon monoxide or other hazardous gases may cause an intoxication particularly.
- Before performing work for maintenance and check, be sure to purge completely not only within the analyzer but also measuring gas lines with nitrogen or air. Otherwise, poisoning, fire, or explosion may result due to gas leakage.
- Before replacing the gas filter of the gas analyzer or maintaining the washer, close the calibration gas valve and, if provided, the valve on the sample gas suction port. Otherwise, intoxication or accident may occur.



CAUTION

- If the fuse is blown, eliminate the cause, and then replace it with the one of the same capacity and type as before. Otherwise, shock hazard or fault may be caused.
 - Do not use a replacement part other than specified by the instrument maker. Otherwise, adequate performance will not be provided. Besides, an accident or fault may be caused.
 - Replacement parts such as a maintenance part should be disposed of as incombustibles. For details, follow the local ordinance.
- Be sure to observe the following for safe operation avoiding the shock hazard and injury.**
- Remove the watch and other metallic objects before work.
 - Do not touch the instrument wet-handed.

Others



CAUTION

- If the cause of any fault cannot be determined despite reference to the instruction manual, be sure to contact your dealer or Fuji Electric's technician in charge of adjustment. If the instrument is disassembled carelessly, you may have a shock hazard or injury.

Checking of contents of the package

- Check that all of the following are contained in the delivered package.

- (1) Analyzer main unit
- (2) Sampling unit
- (3) Standard accessories (See “Table 1 Standard accessories.”)

Note: Consumable parts for about 6 months are included.

Table 1 Standard accessories

No.	Name	Q'ty	Used for	Note
1	Tubular fuse (2A)	4	2 for each device	(100V to 250V AC)
2	Power cord	2	1 for each device	The shape varies depending on specifications.
3	Ground wire	2	1 for each device	(5m)
4	Cable for control signals	1	Connection between each device	(1m)
5	Cable for output signals	1	Analyzer unit	(1m)
6	Filter paper for membrane filter (Teflon)	4	Sampling unit	Provided with SO ₂ analyzer.
	Filter paper for membrane filter (glass fiber)	10		Not provided with SO ₂ analyzer.
7	Filter element for zero gas	2	Sampling unit	
8	Water container for zero gas	1	Sampling unit	
9	Pipe for connection	1	Connection between each device	(5m)
10	Instruction manual (English)	1	-	INZ-TN1ZSVF-E

- (4) Gas extractor (option)
- (5) Gas tube (option)
- (6) Spare parts for 1 year (by separate order) (See “6. Spare parts” for details.)

CONTENTS

PREFACE	i
CAUTION ON SAFETY	ii
CONTENTS	vi
1. OVERVIEW	1
1.1 Outline diagram	2
1.1.1 Analyzing block (unit:mm)	2
1.1.2 Sampling block (unit:mm)	3
1.1.3 Power cord and signal cable (unit:mm)	4
1.1.4 Non-fixed type gas extractor (unit:mm)	5
1.1.5 Fixed type gas extractor (unit:mm)	6
1.2 Sampling system diagram	7
1.3 Name of each part and descriptions	9
1.3.1 Name of each part and descriptions	9
1.3.2 Names of external connectors and descriptions	11
1.4 Operation panel and display	12
1.4.1 Names of parts on the operation panel and descriptions	12
1.4.2 Outline of display screen	13
2. BEFORE USE	16
2.1 Installation	16
2.2 Piping in the gas analyzer	17
2.2.1 Piping procedure	17
2.2.2 Connecting gas extractor	17
2.2.3 Connecting sampling unit	19
2.3 Wiring	20
2.3.1 Power supply	20
2.3.2 Output connector	21
2.4 Feeding clear water	22
3. OPERATION	23
3.1 Warm-up operation	23
3.2 Zero/span calibration	24
3.2.1 Calibration time/cycle and concentration value setting (See “4.1.2” for setting method.)	24
3.2.2 Switching ranges (See “4.1.4” for setting method.)	24
3.2.3 Zero/span calibration (See “4.1.1” for calibration method.)	24
3.2.4 Adjusting flow rate	24

3.3	Starting and exiting measurement	25
3.3.1	Starting measurement	25
3.3.2	Exiting measurement	26
3.3.3	Stopping operation	27
4.	SETTING AND MODE	28
4.1	Menu mode	28
4.1.1	Zero/span calibration	28
4.1.2	Setting calibration time/cycle and concentration value	34
4.1.3	Setting gas change and purge time	38
4.1.4	Switching ranges	39
4.1.5	Draining	40
4.1.6	Canceling errors	42
4.1.7	Setting CP calculation condition	43
4.1.8	Parameter setting	45
4.2	Parameter mode	46
4.2.1	Setting date/time	47
4.2.2	Key lock	48
4.2.3	Output hold	49
4.2.4	Resetting average output value	51
4.2.5	Setting indicator lamp OFF time	52
4.2.6	Maintenance mode	53
4.3	Maintenance mode	54
4.3.1	Selecting output type	55
4.3.2	Average output time	56
4.3.3	Selecting output	57
4.3.4	Adjusting output	59
4.3.5	Setting O ₂ reference value	60
4.3.6	Interference (for NO _x and SO ₂ analyzers)	61
4.3.7	Setting transmission station No.	63
4.3.8	Response time	64
4.3.9	Minus display	65
4.3.10	Password setting	66
4.3.11	Sensor input	67
4.3.12	Checking coefficient	68
4.3.13	Error log file	69
4.3.14	Factory mode	70

5.	INSPECTION AND MAINTENANCE	71
5.1	Daily inspection (Be sure to perform daily.)	71
5.2	Periodic inspection.....	72
5.3	Sampling device maintenance procedure	73
5.3.1	Internal composition of sampling unit.....	73
5.3.2	Removing top panel.....	74
5.3.3	Replacing mist filter element.....	75
5.3.4	Replacing filter paper of membrane filter	76
5.3.5	Replacing diaphragm	78
5.3.6	Replacing power fuse	79
5.3.7	Maintenance procedure for NO ₂ / NO converter (When provided with NO _x meter)	80
5.3.8	Cleaning filter at suction port	81
5.3.9	How to mount pressure regulator for standard gas cylinder	82
5.4	Maintaining analyzer unit	83
5.4.1	Internal composition of analyzer unit.....	83
5.4.2	Replacing power fuse	83
5.4.3	Adjusting moisture interference (NO _x and SO ₂ meters)	84
5.4.4	Replacing galvanic O ₂ sensor (when provided with the sensor)	86
5.4.5	Replacing filter within the analyzer unit	87
5.4.6	Cleaning measurement cell	88
5.5	Airtight test	92
5.5.1	Airtight test of analyzer unit	92
5.5.2	Airtight test of sampling unit.....	93
6.	SPARE PARTS	94
6.1	Spare parts for 1-year measurement	94
7.	TROUBLESHOOTING	96
7.1	Troubleshooting for sampling unit	96
7.2	Troubleshooting for analyzer unit	97
8.	SPECIFICATION	99
8.1	Specification	99
8.2	Code symbols.....	102

1. OVERVIEW

The compact type gas analyzer (ZSVF) consists of an analyzing block (infrared sensor and oxygen sensor) and a sampling block.


For gas extractor, either simplified measurement (non-fixed type) or continuous measurement (fixed type) probe is selectable at option.

Because a single beam type high-sensitivity mass flow sensor is adopted for the infrared sensor, long-term stability and maintainability are excellent.

This analyzer is capable of simultaneously measuring max. 5 components among NO_x, SO₂, CO₂, CO, CH₄ and O₂ in sample gas, and is used for flue gas from stationary emission sources such as various boilers, garbage incinerators and heat treatment furnaces, and for plant cultivation and research-purpose chemical analysis.

1.1 Outline diagram


1.1.1 Analyzing block (unit:mm)

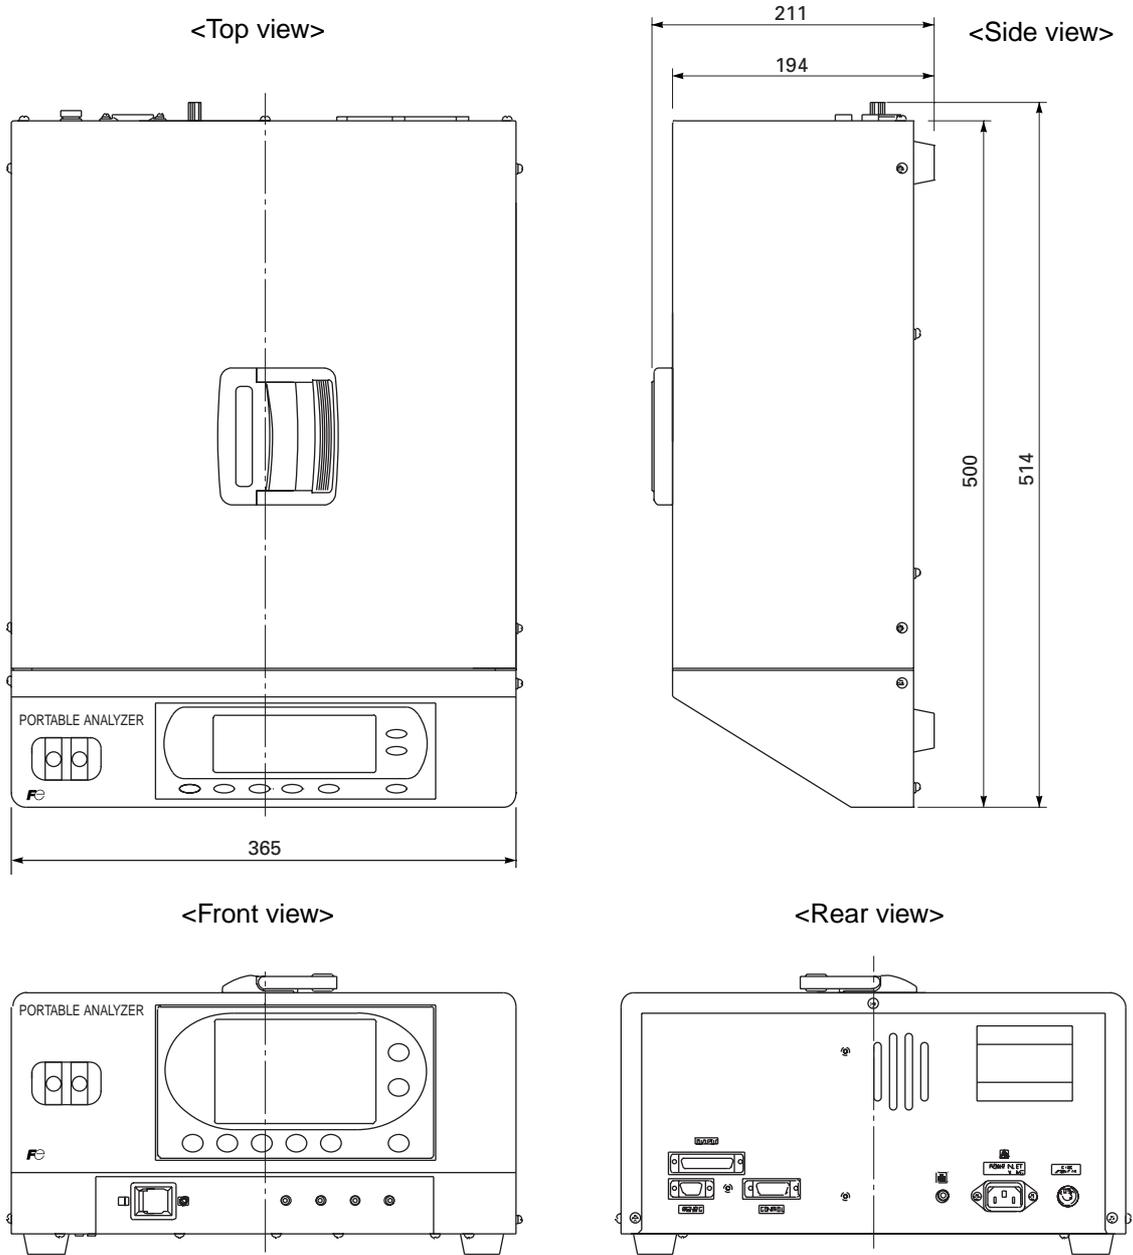


Mass : Approx. 12kg

1.1.2 Sampling block (unit:mm)


<Top view>

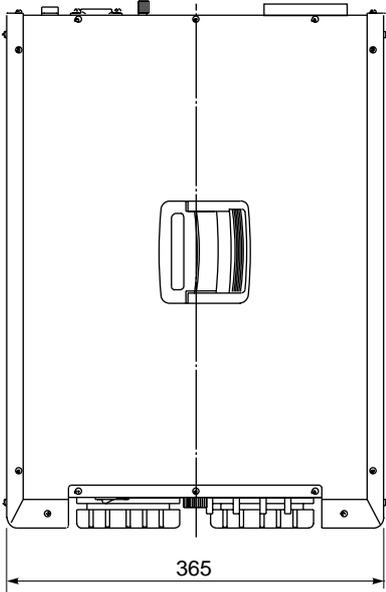


<Side view>

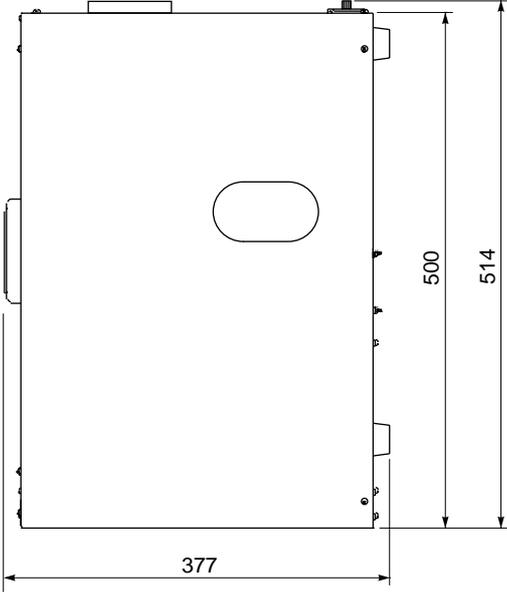

<Front view>

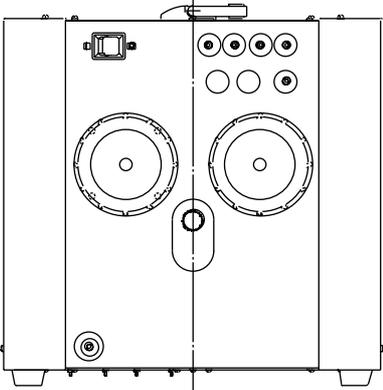

<Rear view>

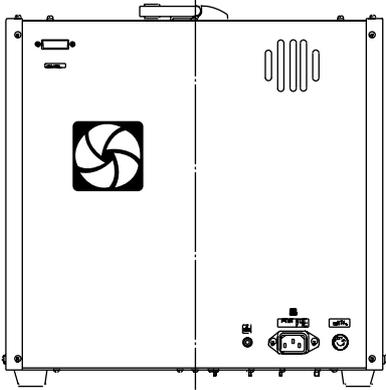


Mass : Approx. 18kg


1.1.3 Power cord and signal cable (unit:mm)

- Power cord for domestic and North American use (North American type), rated voltage 125V AC.


Note: The standards for domestic and North American use are different, but the shape is the same.

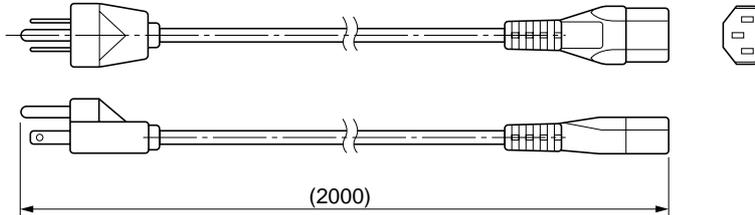


- Power cord for European use (European type), rated voltage 250 V AC

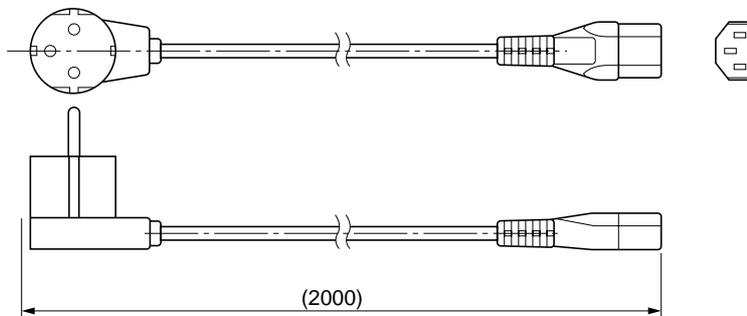


- Output cable

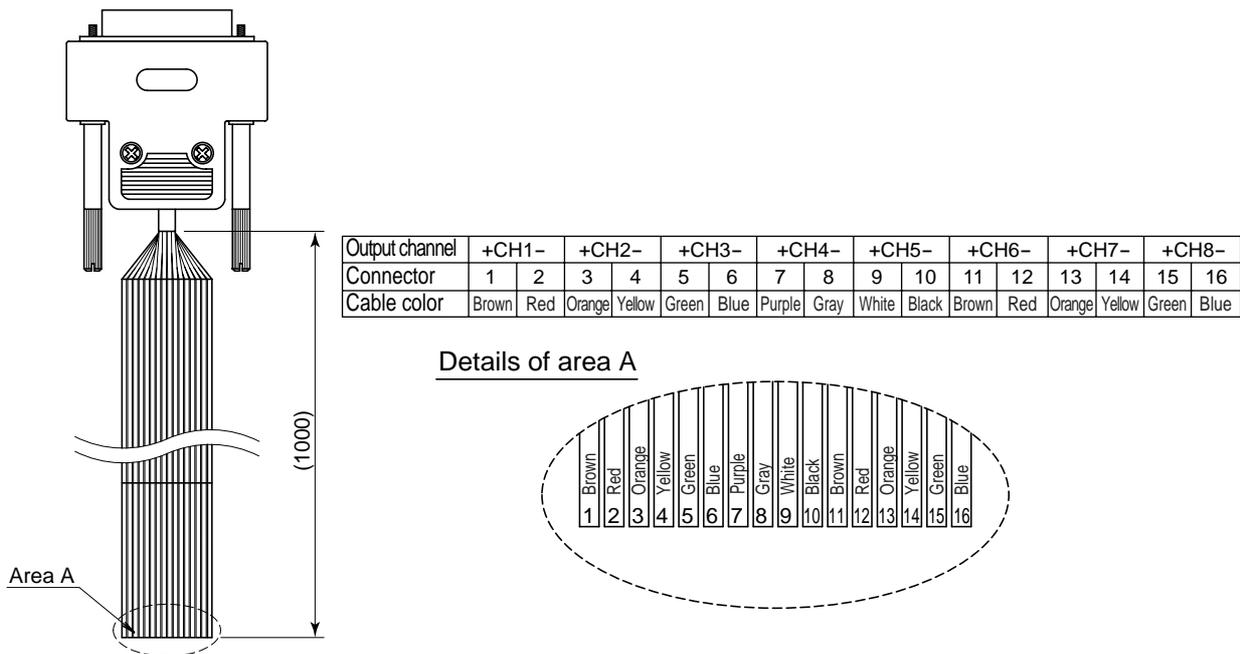

- Control input/output cable

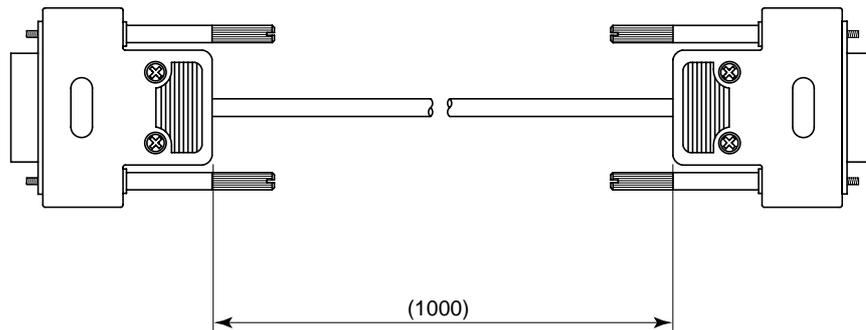


1.1.4 Non-fixed type gas extractor (unit:mm)

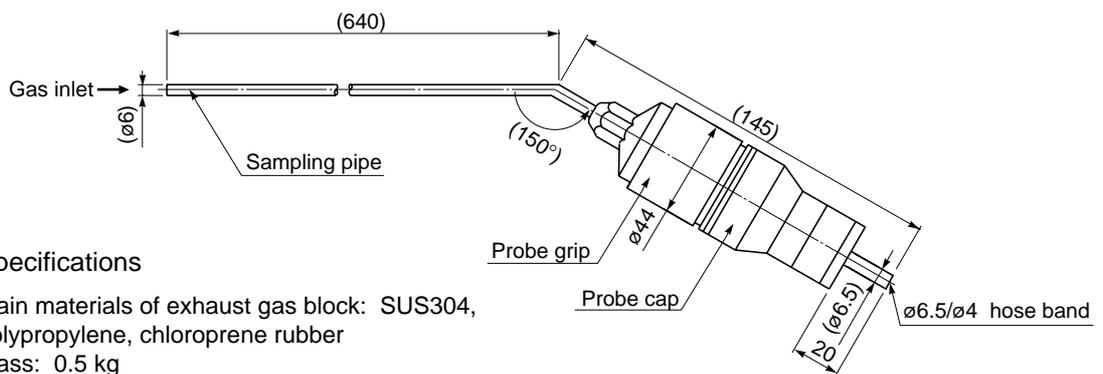


Specifications

Main materials of exhaust gas block: SUS304,
polypropylene, chloroprene rubber
Mass: 0.5 kg

1.1.5 Fixed type gas extractor (unit:mm)

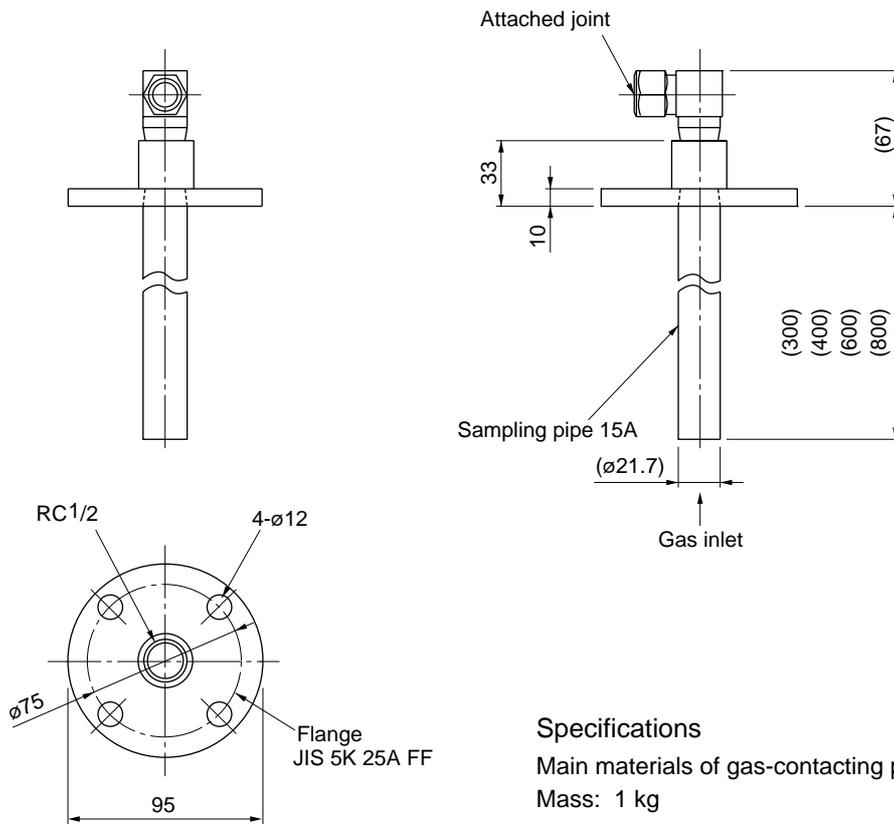


Attached joint (for $\phi 6$ pipe connection)

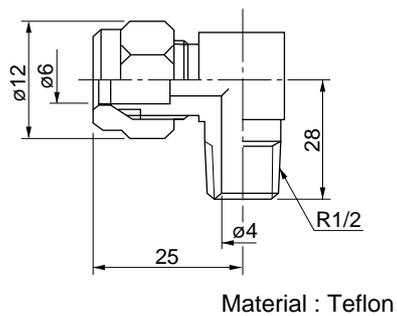

1.2 Sampling system diagram


(1) With 1 optical system

(1 to 3 component gas sampling system except for NOx analyzer)

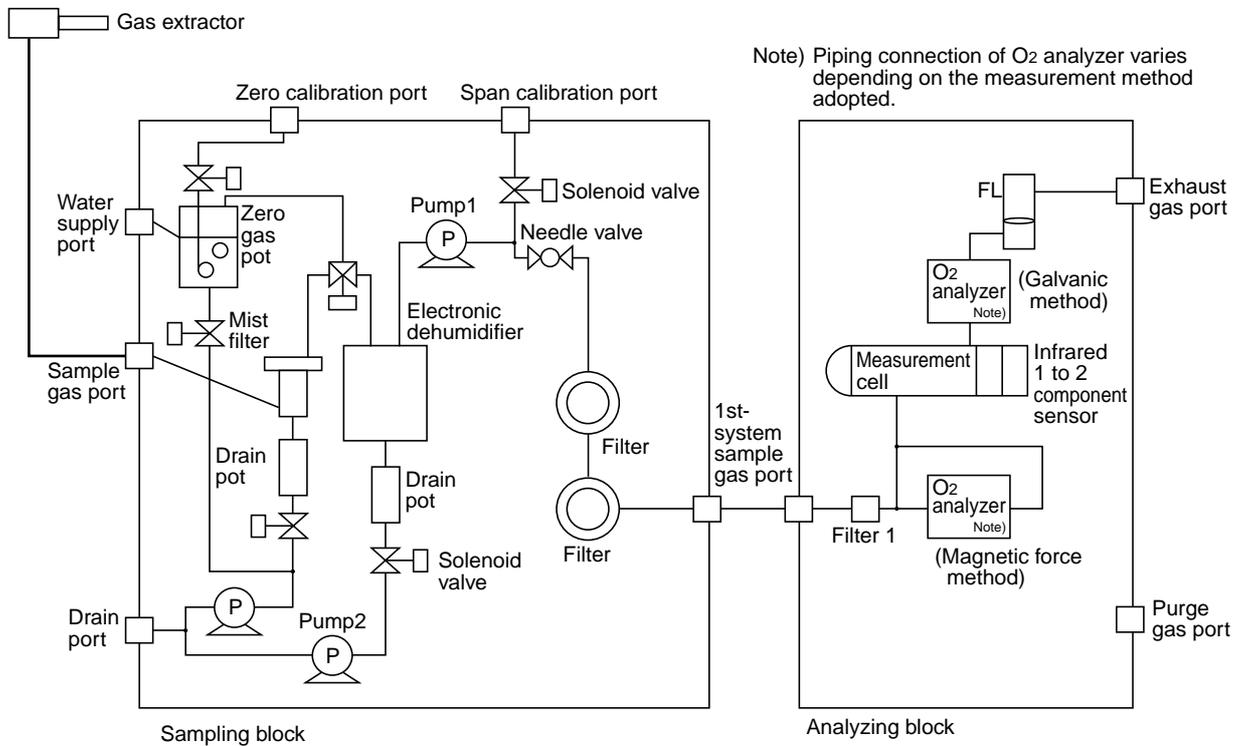


(2) With 2 optical systems


(3 to 4 component gas sampling system except for NOx analyzer)

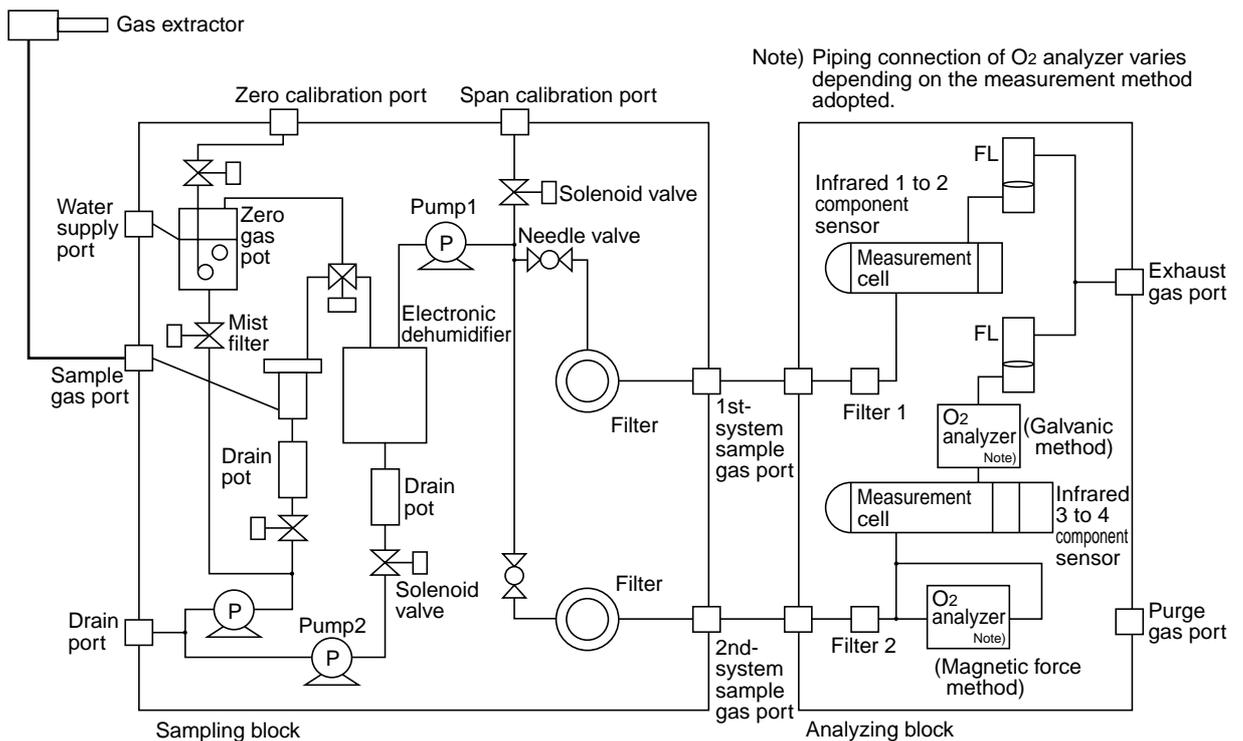

(3) With 1 optical system
(1 to 3 component gas sampling system including NOx analyzer)

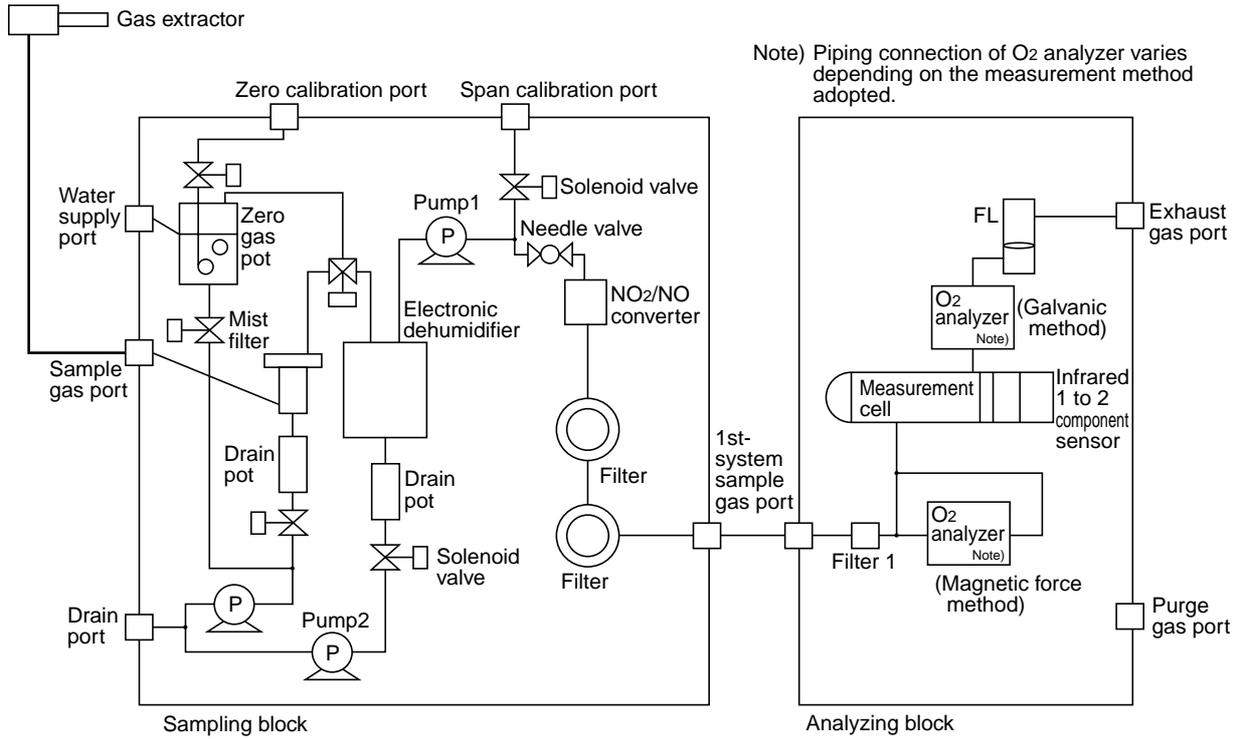


(4) With 2 optical systems
(3 to 5 component gas sampling system including NOx analyzer)

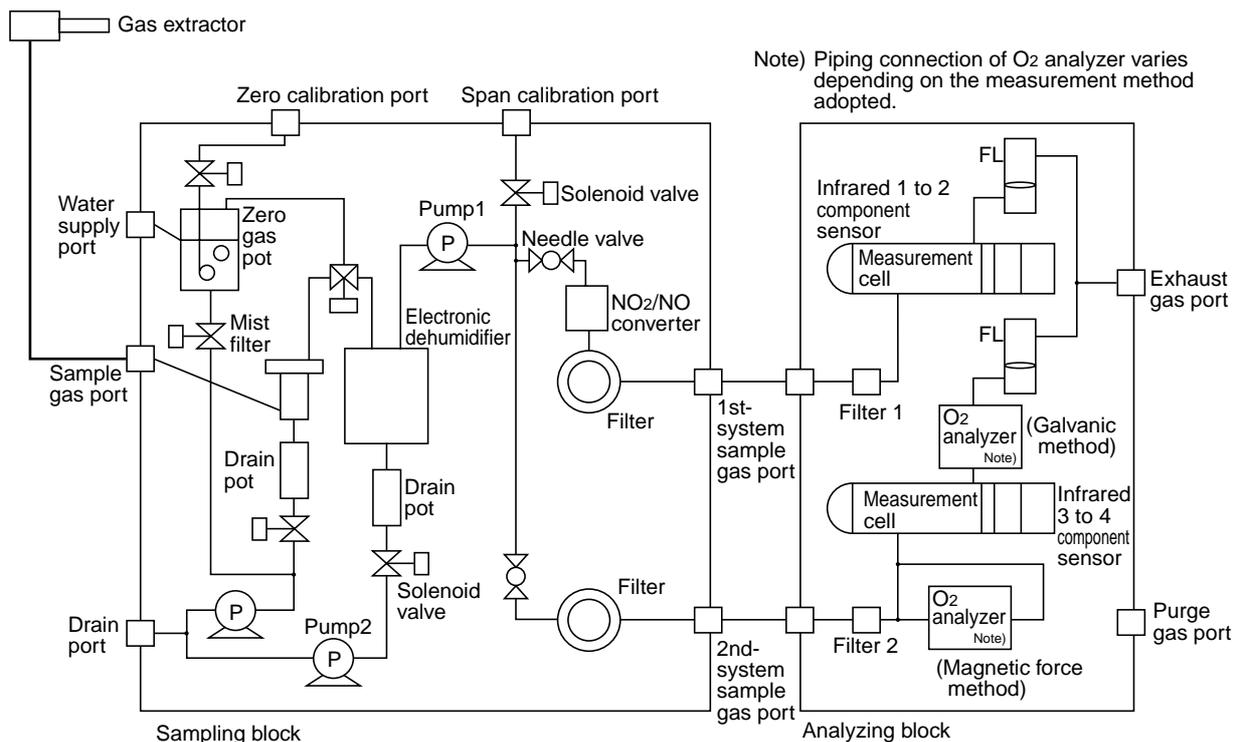

1.3 Name of each part and descriptions


1.3.1 Name of each part and descriptions

(1) Analyzer unit

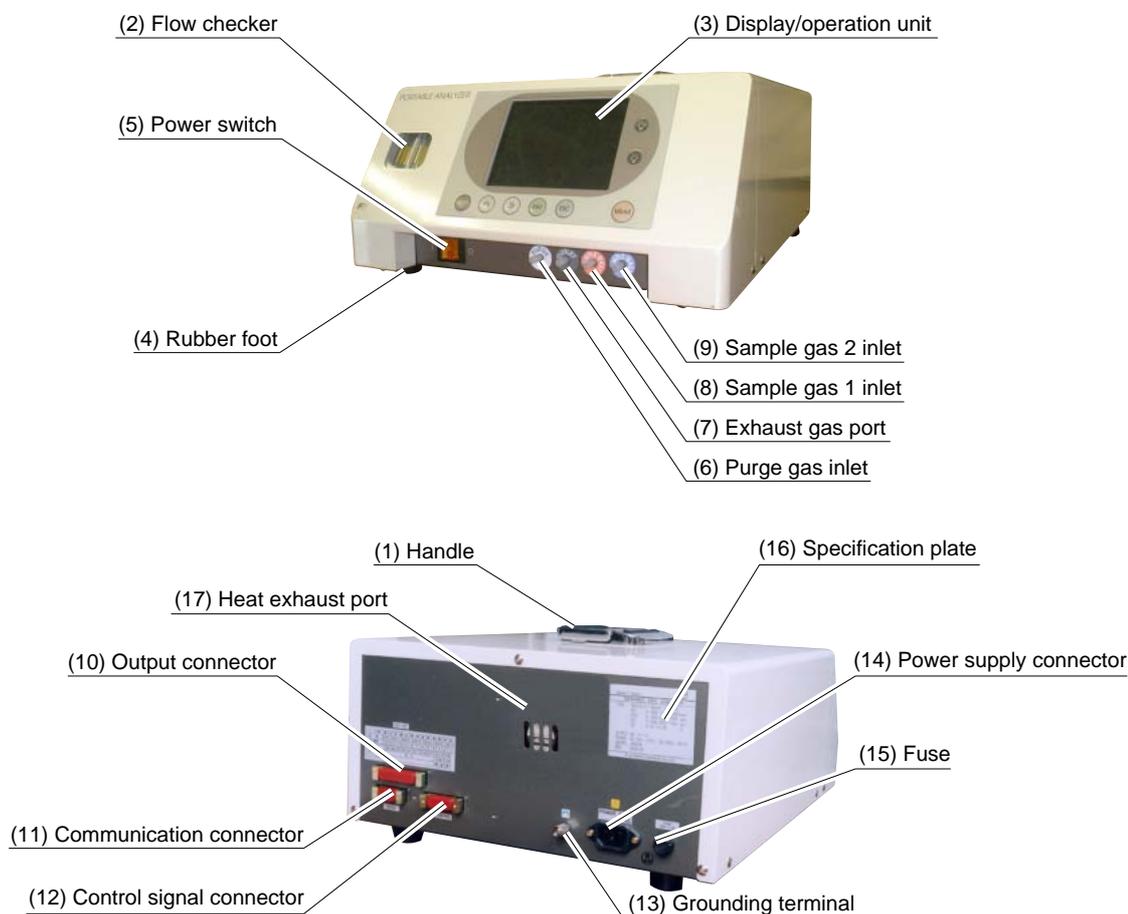

Name	Description
(1) Handle	Used for transportation of main unit.
(2) Flow checker	Checks gas flow.
(3) Display/operation unit	LCD and various setting keys
(4) Rubber foot	
(5) Power switch	Set the power to ON/OFF.
(6) Purge gas inlet	Inlet for purge gas
(7) Exhaust gas port	Connected to exhaust line.
(8) Sample gas 1 inlet	Connected to sampling gas 1 outlet of sampling unit.
(9) Sample gas 2 inlet	Connected to sampling gas 2 outlet of sampling unit.
(10) Output connector	Analog output signal connector
(11) Communication connector	Output signal connector for communication
(12) Control signal connector	Connector for sampling device control.
(13) Grounding terminal	Connected to the ground.
(14) Power supply connector	Connect power cable.
(15) Fuse	Insert a fuse of rated capacity.
(16) Specification plate	Displays serial No., components to be measured, etc.
(17) Heat exhaust port	For discharging internal heat.

(2) Sampling unit

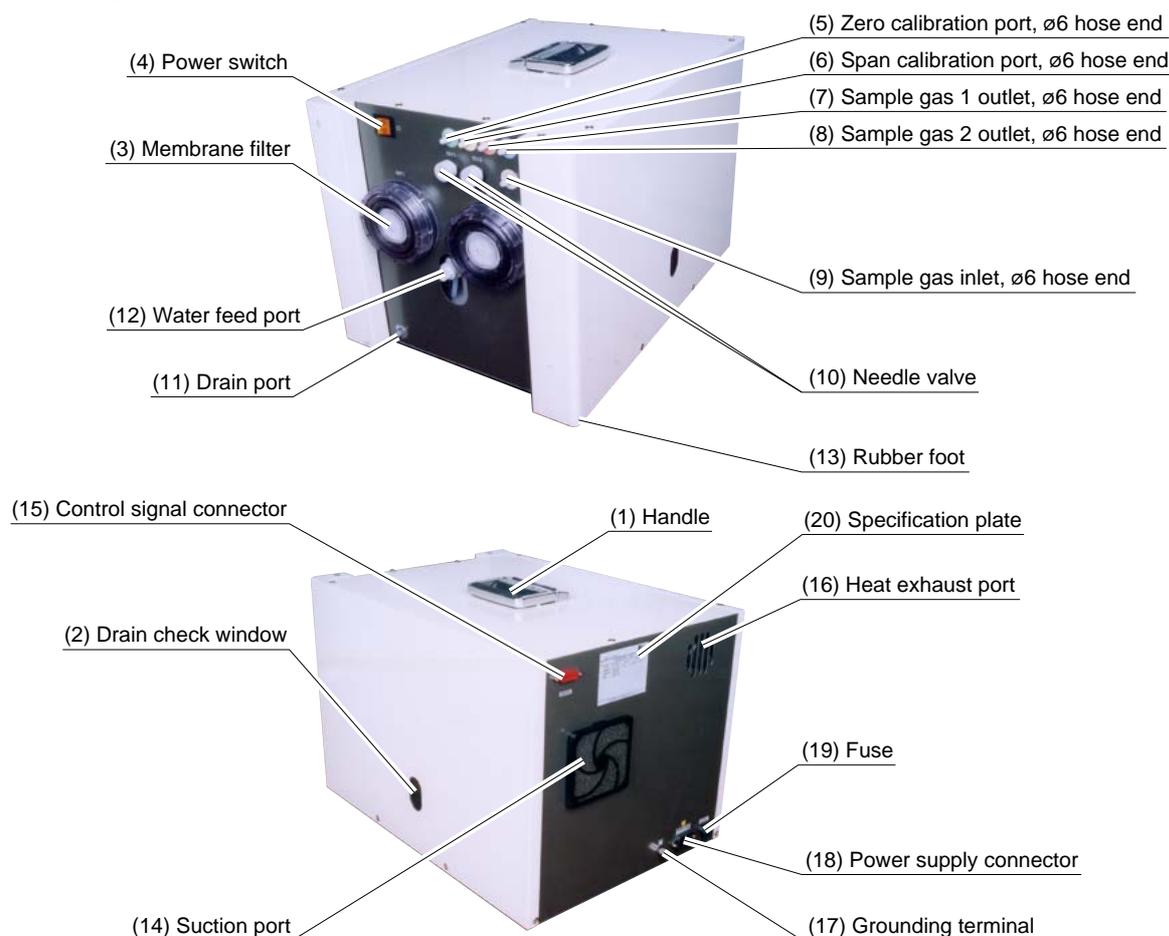

Name	Description
(1) Handle	Used for transportation of main unit.
(2) Drain check window	Drain volume can be checked visually through the window.
(3) Membrane filter	Removes dust.
(4) Power switch	Set the power to ON/OFF.
(5) Zero calibration port	Port for zero calibration gas
(6) Span calibration port	Port for span calibration gas
(7) Sample gas 1 outlet	Connected to sample gas 1 inlet of analyzer unit.
(8) Sample gas 2 outlet	Connected to sample gas 2 inlet of analyzer unit.
(9) Sample gas inlet	Connected to gas extractor.
(10) Needle valve	Adjusts sample gas flow rate.
(11) Drain port	For discharge of drain
(12) Water feed port	For feeding of bubbling water for zero calibration gas
(13) Rubber foot	
(14) Suction port	For cooling down electronic dehumidifier
(15) Control signal connector	For control signals from analyzer unit
(16) Heat exhaust port	For discharging internal heat
(17) Grounding terminal	Connected to the ground.
(18) Power supply connector	Connect power cable.
(19) Fuse	Insert a fuse of rated capacity.
(20) Specification plate	Displays serial No. etc.

1.3.2 Names of external connectors and descriptions

<Analyzer unit: Analog output connector>

Non-isolated linear connector for 4 to 20mA DC or 0 to 1V DC

Output of up to 8 channels is allowed.


Output is made for corresponding channel No. on a one-to-one basis.

Permissible load: 4 to 20mA DC, 550Ω or lower
0 to 1V DC, 100kΩ or higher

A female connector is supplied for the main unit (DS-25S-T-N by Japan Aviation Electronics Industry Co., Ltd.)

Use the supplied cable (1m) (DB-25P) for connection.

Pin No.		Description
+	-	
Between 1 and 2		Ch1 analog output
Between 3 and 4		Ch2 analog output
Between 5 and 6		Ch3 analog output
Between 7 and 8		Ch4 analog output
Between 9 and 10		Ch5 analog output
Between 11 and 12		Ch6 analog output
Between 13 and 14		Ch7 analog output
Between 15 and 16		Ch8 analog output
17 to 25		NC

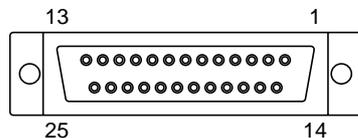

<Analyzer unit: communication output connector>


Input/output signal connector for RS232-C communication

Modbus protocol (Creation of communication program is required. Refer to separately sold transmission specifications.)

A male connector is supplied for the main unit.

Use commercially available cross cable (DE-9S) for connection.

Pin No.		Description
+	-	
1		NC
2		TXD
3		RXD
4		NC
5		GND
6		NC
7		NC
8		NC
9		NC

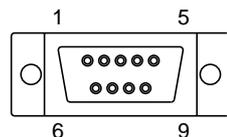


<Analyzer unit: Control output connector> and <Sampling unit: Control input connector>

Input/output signal connector for sampling device control

A female connector is supplied for the main unit (DA-15S-T-N by Japan Aviation Electronics).

Use the supplied cable (1m) (DAU-15P) for connection.

Pin No.		Description
+	-	
Between 1 and 2		Sample pump (PM1) operation signal
Between 3 and 4		Drain pump (PM2) operation signal
Between 5 and 6		Solenoid valve 1, 6 operation signal
Between 7 and 8		Solenoid valve 2 operation signal
Between 9 and 10		Solenoid valve 3 operation signal
Between 11 and 12		Solenoid valve 4 operation signal
Between 13 and 14		Solenoid valve 5 operation signal
15		NC

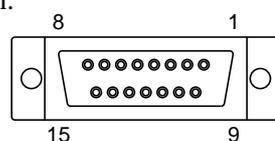


Note 1: NC indicates that the pin is not used.

Note 2: Different numbers are assigned for male (P) and female (S) pins. Make connections, paying attention to the numbers.

1.4 Operation panel and display

This section provides the names of each key for operation and display screens, and describes details of their operation.

1.4.1 Names of parts on the operation panel and descriptions

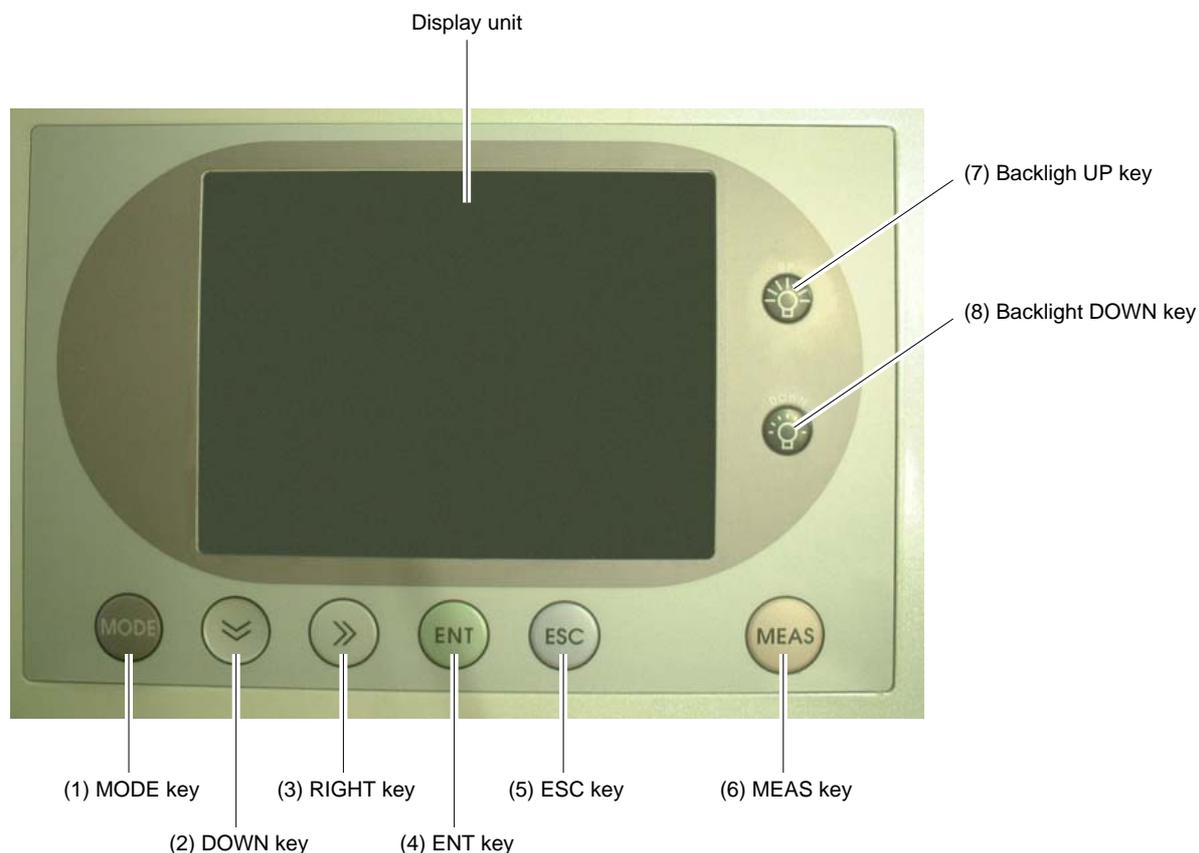


Name	Description	Name	Description
(1) MODE key	Used to switch mode display.	(5) ESC key	Used to return to the previous screen or exit the setting.
(2) DOWN key	Used to change select items (move cursor) and numeric settings.	(6) MEAS key	Used to switch between measurement mode and standby mode.
(3) RIGHT key	Used to change the digit of the setting.	(7) Backligh UP key	Increases the brightness of the backlight in display unit.
(4) ENT key	Used to confirm the selected items and changed numeric settings. Also used for executing calibration.	(8) Backlight DOWN key	Decreases the brightness of the backlight in display unit.

1.4.2 Outline of display screen

(1) Measurement mode screen (This screen appears immediately after the power is turned on.)

The measurement 1 screen varies depending on the number of components. The measurement 2 screen is displayed for the specifications of 6 channels or more. The following screen configuration example is for 5-component specifications (NO_x, SO₂, CO₂, CO, and O₂) (8 channels).

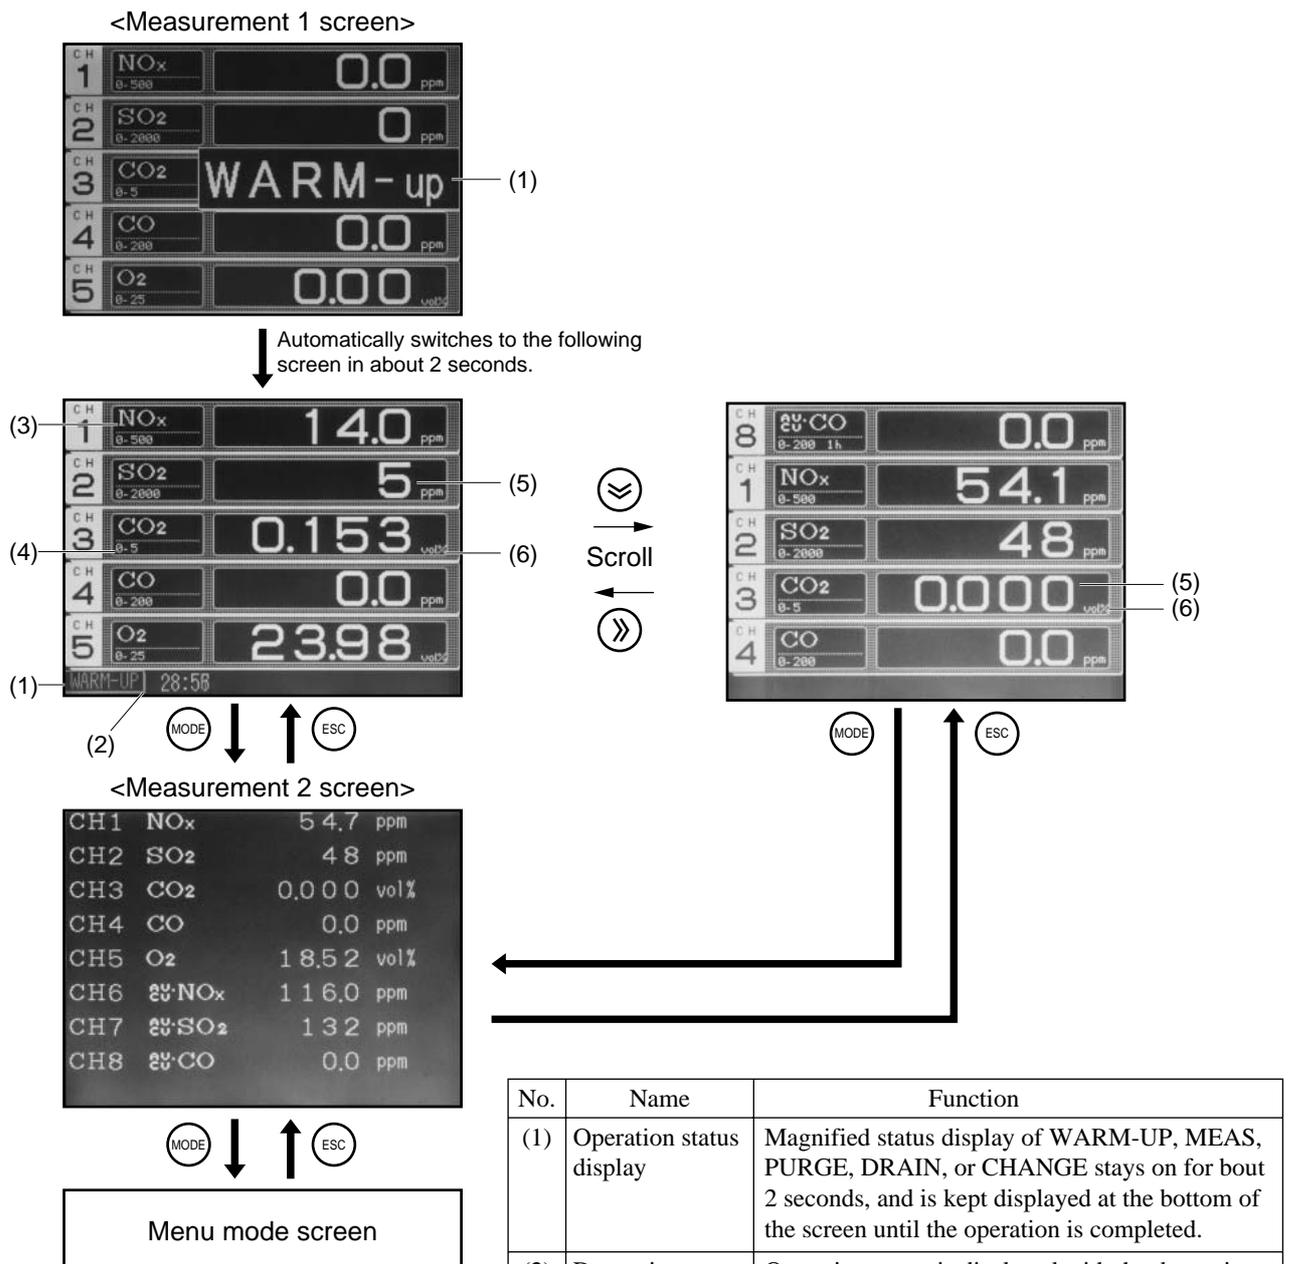

No.	Name	Function
(1)	Operation status display	Magnified status display of WARM-UP, MEAS, PURGE, DRAIN, or CHANGE stays on for about 2 seconds, and is kept displayed at the bottom of the screen until the operation is completed.
(2)	Down timer	Operation status is displayed with the down timer.
(3)	Component display	Displays components of instantaneous value, instantaneous correction value, average correction value, and CP calculation value.
(4)	Range display	Displays measurement range and average time.
(5)	Concentration display	Displays measured concentration value and correction value.
(6)	Unit display	Displays ppm or Vol%.

- **Instantaneous value and concentration value:**

The concentration display of Ch (component) where sampling components such as “CO₂,” “CO” or “O₂ are displayed in the component display, indicates current concentration values of the measured components contained in gas that is now under measurement.

- **O₂ correction concentration values:**

Ch components where “cv**” is displayed as “cv CO” in the component display are calculated from the following equation, by setting sampling components, O₂ instantaneous/concentration values and O₂ correction reference value.

$$\text{Correction output} = \left[\frac{21 - O_n}{21 - O_s} \right] \times C_s$$

O_n: The value of the O₂ correction reference value
(Value set by application)

O_s: Oxygen concentration (%)

C_s: Concentration of relevant measured component.

Calculation is made with 20Vol% if O_s is 20Vol% or higher.

The corrected sampling components are NO_x, SO₂ and CO only.

- **O₂ correction concentration average value:**

In the Ch (component) where “ $\frac{CV}{AV}$ **” is displayed as “ $\frac{CV}{AV}$ CO” in the component display, a value obtained by averaging O₂ correction concentration value in a fixed time is output every 30 seconds.

Averaging time can be changed between 1 minute and 59 minutes or 1 hour and 4 hours according to the average time settings.

(The set time is displayed as “1h,” or instance, in the range display.)

Note) The measurement ranges of O₂ correction concentration value and O₂ correction concentration average value are the same as that of the measuring components.

- **CP calculation value:**

The carbon potential of carburizing furnace and conversion furnace are calculated using furnace temperature (fixed input value) and CO concentration value (fixed or measured value) while referring to CO₂ measured value.

$$\text{Calculation equation; CP} = \frac{\text{CPS} \times (\text{PCO})^2}{\text{K1} \times \text{PCO}_2}$$

where,

CPS ; Saturated carbon concentration (partial pressure)

$$0.0028t - 1.30 \quad (800^\circ\text{C} \leq 850^\circ\text{C})$$

$$0.0030t - 1.47 \quad (850^\circ\text{C} \leq 950^\circ\text{C})$$

$$0.0034t - 1.85 \quad (950^\circ\text{C} \leq 1000^\circ\text{C})$$

t ; Furnace temperature

PCO ; CO concentration value (partial pressure)


PCO₂ ; CO₂ concentration value (partial pressure)

K1 ; Constant K1=10^(9.06-15966/T)

T ; Rankine temperature (t × 9/5 + 32 + 460)

(2) Menu mode screen

The menu mode setting and select screen are shown below.

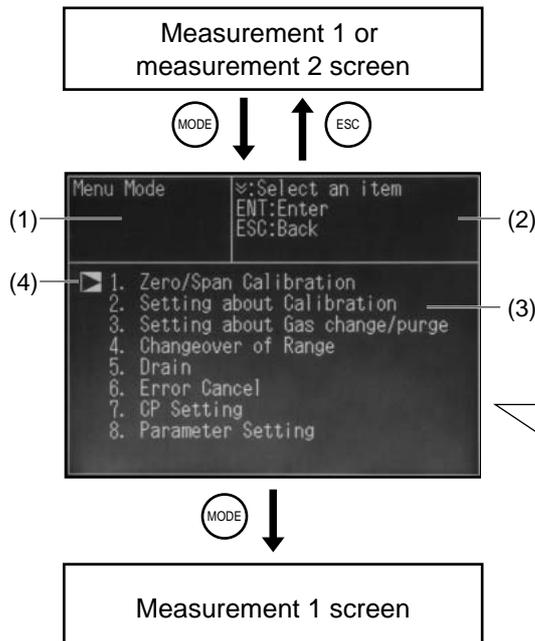

No.	Name	Function
(1)	Status display	Displays current status.
(2)	Message display	Displays guideline for operation.
(3)	Setting/select item	Select settings or select items to be changed or checked using the cursor.
(4)	Cursor	

Menu contents

1. Zero/span calibration

- 1) Executes selection and calibration of zero/span gas.
 - "Wet Air/Dry", "Wet N₂/Dry"
- 2) Executes span calibration operation and span calibration.
 - "Each, Both"

2. Calibration time/cycle and concentration value setting

- 1) Performs "zero calibration time/cycle setting."
- 2) Performs "span calibration concentration value setting."

3. Gas change/purge time setting

- Performs "gas change/purge time setting."

4. Changeover of range

- Performs "range setting" of measurement target.

5. Drain

- 1) Performs "draining within drain pot."
- 2) Performs "draining within zero pot."
- 3) Performs "batch draining within drain and zero pot."
- 4) Performs "drain time/cycle setting."

6. Error cancel

- "Cancels" error display.

7. CP calculation value condition setting

- 1) Performs "CO concentration value setting."
- 2) Performs "Furnace temperature setting."

Note: This mode is not displayed if the optional function is not provided.

8. Parameter setting

- 1) Performs "date/time setting."
- 2) Performs "key lock setting."
- 3) Performs "output hold setting."
- 4) Performs "average output value reset."
- 5) Performs "display OFF time setting."
- 6) Performs "password input for entering maintenance mode."

2. BEFORE USE

DANGER

This unit is not explosion-proof type. Do not use it in a place with explosive gases to prevent explosion, fire or other serious accidents.

CAUTION


- A poor installation may cause accidental tipover, shock hazard, fire, injury, etc.
- For lifting the gas analyzer, be sure to wear protective gloves. Bare hands may invite an injury.
- This unit should be installed in a place which conforms to the conditions noted in the instruction manual. Otherwise, it may cause electric shocks, fire or malfunction of the unit.

2.1 Installation

- Install the analyzer in a horizontal and stable place that endures the mass of the analyzer unit and the sampling unit.
- Install the analyzer in a place not subject to direct sunlight, weather, or radiant heat from high-temperature objects. If installation to such a place is inevitable, provide a roof or cover to avoid the effect.
- Do not install the analyzer in a place subject to vibration.
- Select a place of clear atmosphere.
- Discharge the exhaust gas to the atmosphere in a safe place.
- Install the analyzer unit and the sampling unit within the reach of the supplied cables and pipes (1m or less). The analyzer unit can be placed on the sampling unit.

2.2 Piping in the gas analyzer

2.2.1 Piping procedure

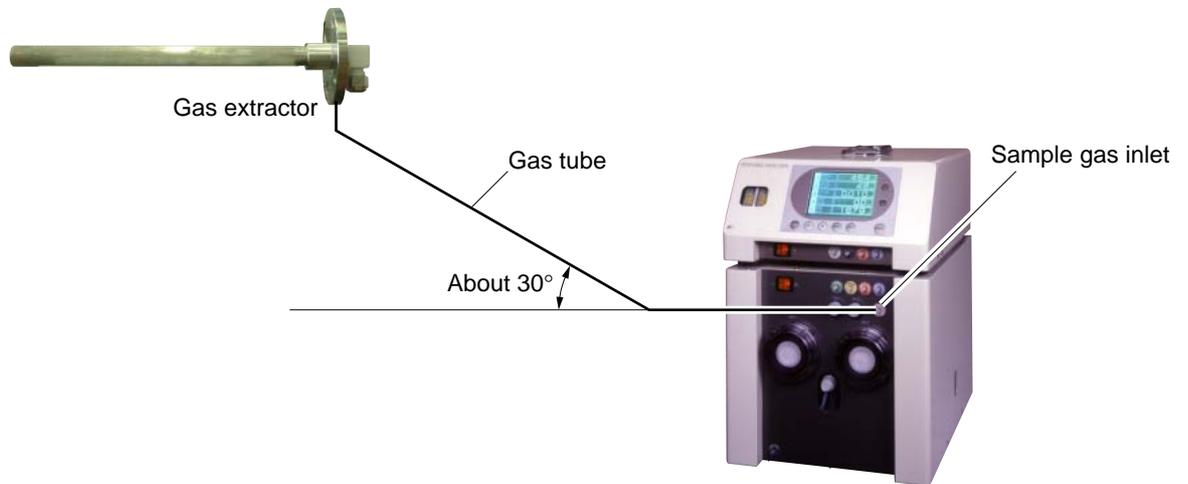


Caution on piping

- Use “Teflon” gas tube, which is low in adsorptive activity.
Tilt the gas tube that connects the gas extractor and the analyzer unit by about 30° to prevent drain from staying within the tube.
- The maximum allowable gas tube length is 20m.
To extend the tube length, use a separate external pump.

2.2.2 Connecting gas extractor

(1) Flexible gas extractor (option)


The flexible gas extractor consists of a probe handle and a probe cap.

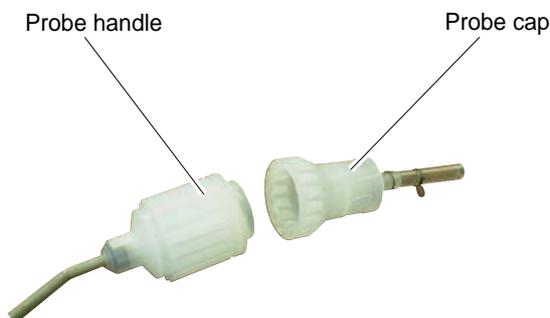

The probe handle consists of packing for probe, case, and relay packing.


Connect the probe handle, probe cap, and gas tube, following the procedure shown below.

- 1) Check that the relay packing is inserted properly.

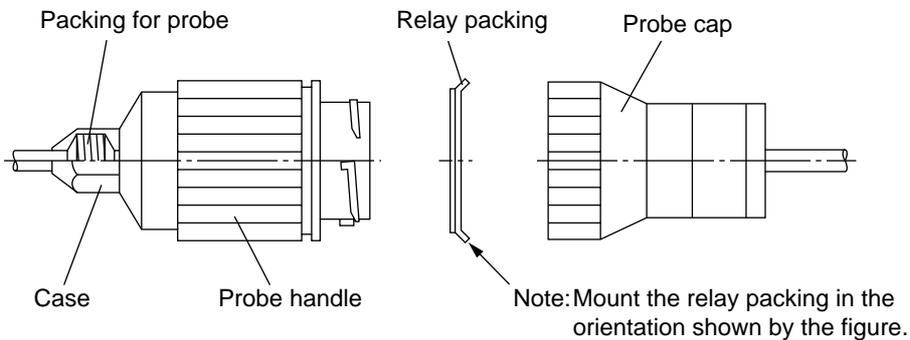

- 2) Turn the probe cap counterclockwise to connect it to the probe handle securely.
- 3) Cut off the pipe for connection (standard accessory, $\phi 9/\phi 5$) by about 50mm, and connect it to the probe cap $\phi 6/\phi 4$.
- 4) Insert the gas tube (Teflon, $\phi 6/\phi 4$, option) to the pipe for connection.

Then, use the supplied hose band for each connection.

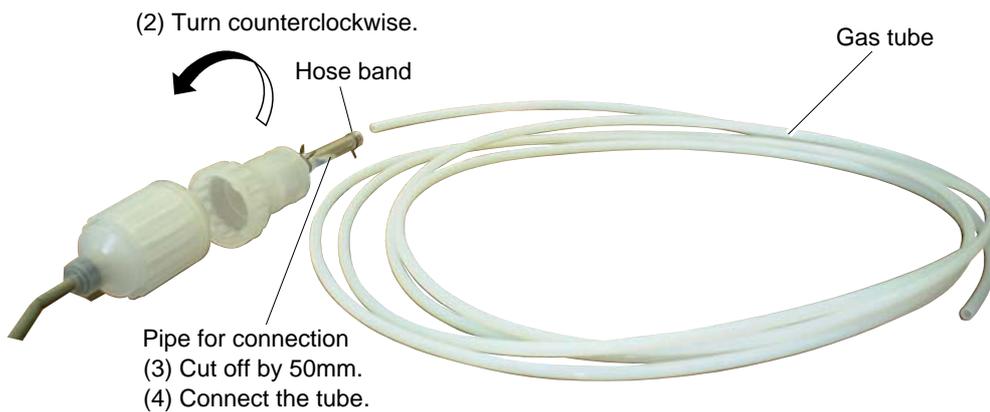


(2) Fixed gas extractor (option)

Flange is JIS 5K 25A FF made by SUS316.

The fixed gas extractor consists of sampling pipe, flange, and main elbow.

- 1) Insert the gas tube (Teflon, $\phi 6/\phi 4$, option) into the main elbow, and fasten it with the supplied nut.

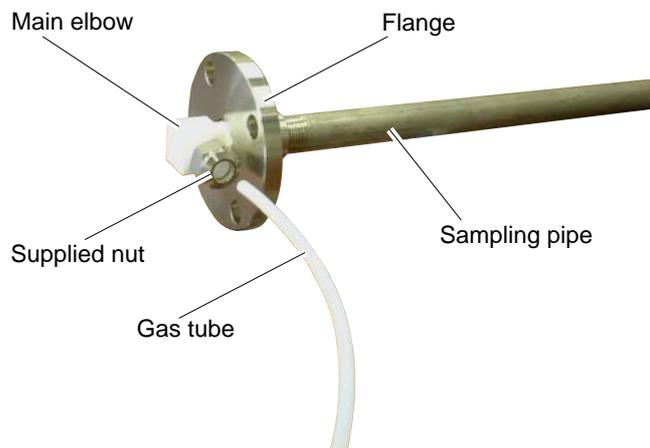


2.2.3 Connecting sampling unit

CAUTION

- Discharge exhaust gas to the outdoors to prevent it from staying indoors.
- Discharge exhaust gas to the atmosphere, paying attention not to apply undesired pressure to the sampling unit.
- The drain is discharged automatically. Externally provide a drain receive container.
- Use hose and pressure reducing valve with no oil or grease attached.

Make connections of the sampling unit, following the procedure shown below.

- (1) Cut off the pipe for connection (standard accessory, $\phi 9/\phi 5$) by 50mm, and insert it to the sample gas inlet. Connect the gas tube to it.
- (2) Cut the pipe for connection (standard accessory, $\phi 9/\phi 5$) into 2 pieces of about 1000mm, and insert each of them into sample gas 1 outlet and sample gas 2 outlet respectively. Connect the opposite sides to sample gas 1 inlet and sample gas 2 inlet of the analyzer unit respectively.
- (3) Cut the pipe for connection (standard accessory, $\phi 9/\phi 5$) into a piece of about 2000mm, and connect it to the exhaust gas port of the analyzer unit. Extend the hose to a safe place to discharge the exhaust gas to the atmosphere.
- (4) Connect the remaining piping into the drain port of the sampling unit. The drain is discharged automatically. Externally provide a drain receive container.
- (5) Connect a standard gas cylinder for zero/span calibration as required. Mount a pressure controller to the standard gas cylinder. (See “5.3.9 Standard gas cylinder pressure controller” for details.)

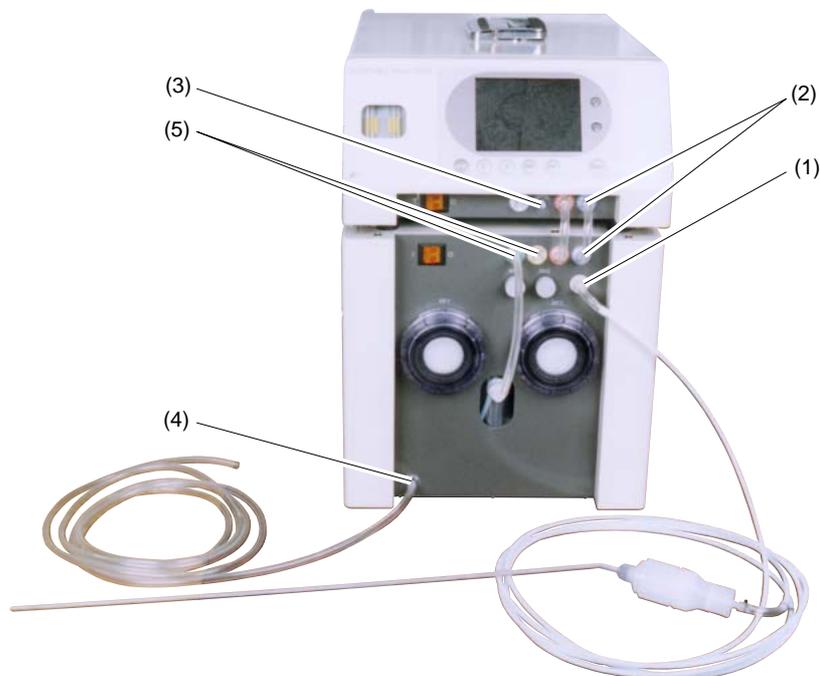

2.3 Wiring


The power supply and the output connector are located on the rear face of each of the main unit.

⚠ CAUTION

- Be sure to turn off all the power before performing wiring. Otherwise electric shock may result.
- Be sure to perform Class D grounding work with the grounding lead. Otherwise electric shock or failure may result.
- Select appropriate wiring materials according to the ratings of the devices. Otherwise electric shock or fire may result.
- Connect the power supply that satisfies the rating. Otherwise fire may result.

2.3.1 Power supply


- (1) Connect the female side of the power cable to the power inlet on the rear face of the main unit, and insert the male side into the receptacle that satisfies the rating.
- (2) If ground lead for power supply cable cannot be used, connect the supplied ground lead to the dedicated terminal.

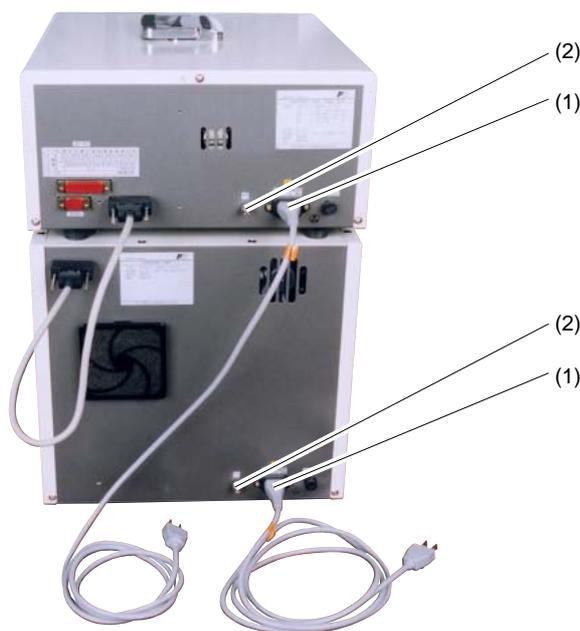

When noise emission source is near the analyzer

- Do not install the analyzer near an electric device that generates power supply noise (such as high-frequency furnace or electric welder). If the use near such devices is inevitable, separately install the power supply line to avoid noise interference.
- If noise comes in from the power supply, mount a barrister (such as ENA211-1 by Fuji Electric) or a spark killer (such as S1201 by OKAYA) to the noise emission source as shown by the figure at right. Note that mounting one apart from the noise emission source does not produce sufficient effect.

Power source for analyzer

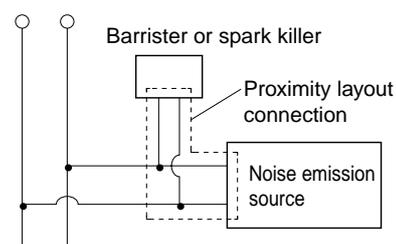

2.3.2 Output connector

(1) Analog output

- Use supplied dedicated cable (DB-25P 25 male pin) for taking out output signals.

Fasten the cable securely using supplied screws.

Output signal: 4 to 20mA DC or 0 to 1V DC (by code symbols), non-isolated

Permissible load: 4 to 20mA DC, 550 Ω or lower
0 to 1V DC, 100k Ω or higher

- The analog output corresponds to the channel (Ch) on the measurement screen display.

Caution

None of the analog outputs of this product is isolated. To prevent the effect of external interference, individually isolate signals before drawing out wiring to outdoors or extending the dedicated cable.

(2) Control input/output


- Use the supplied dedicate cable (DAU-15P 15 pin, male-male) to connect the control signals from the analyzer unit and the sampling unit.
- Contact failure may result in malfunction. Be sure to fasten the cable securely using the supplied screws.

(3) Communication output

- Digital output signals are RS232-C Modbus capable.

Individual programming by referring to the attached “Description of Communication Function” is required.

Use a commercially available cable (D-sub 9 pin, female-female).

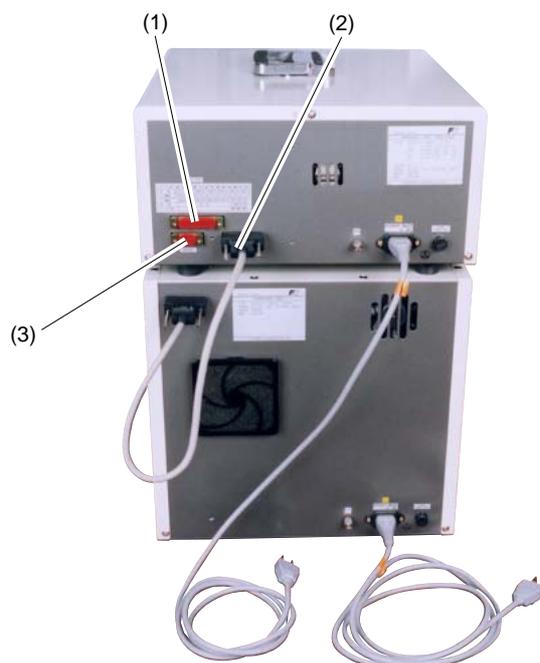


2.4 Feeding clear water

The gas analyzer is equipped with an electronic dehumidifier for removal of moisture within the sample gas. To accurately correct calculation of the moisture that cannot be removed with the electronic dehumidifier, humidification must be performed when zero calibration is performed.

Feed clear water into the zero gas pot, following the procedure shown below.

- (1) Remove the water feed port (PT1/4) of the sampling unit.
- (2) Feed tap water using the supplied water container (washing bottle) until the water level reaches about 1cm lower than the water feed port (about 70cc).
- (3) Securely fasten the cap of the water feed inlet to maintain airtightness.

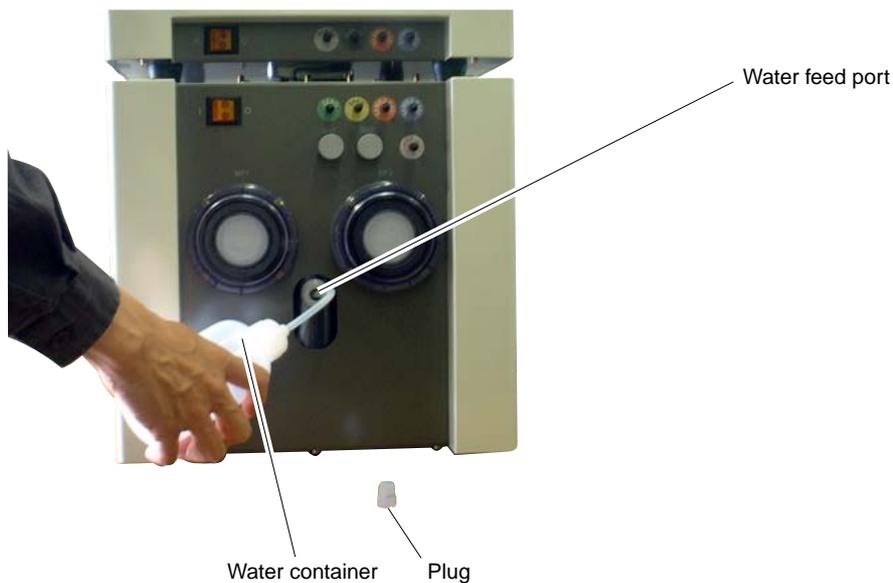

CAUTION

- Be careful not to let water overflow at the time of feeding. Otherwise short-circuiting of electrical devices may result, thus causing electric shock or fire.
- Securely fasten the plug to maintain airtightness. Otherwise reading error may result.

3. OPERATION

3.1 Warm-up operation

- (1) Set the power switch both on the analyzer unit and the sampling unit to ON. (“|” : ON, “○” : OFF). The lamp within the power switch comes on.



- (2) The WARM-UP display comes on and stays on for about 2 seconds in the center. It then moves to the lower left-hand corner of the screen. The warm-up operation end time is displayed with the down timer.

Caution on operation

Key operation cannot be made while the WARM-UP display stays on in the center of the screen.

Wait until the display moves to the lower left-hand side corner of the screen.



After 2 seconds



- (3) The warm-up time is about 30 minutes after the power is turned on both with the analyzer unit and the sampling unit. On completion of the warm-up operation the WARM-UP display and the timer go off.

Caution on operation

Press the  key during warm-up operation, and measurement can be made. In this case, fluctuation of the reading may result because the instrument has not been warmed up fully. “Auto zero calibration” is not performed before the start of measurement.



3.2 Zero/span calibration

Be sure to perform zero/span calibration of each component after the warm-up operation is completed.

3.2.1 Calibration time/cycle and concentration value setting (See “4.1.2” for setting method.)

(1) Zero calibration time/cycle setting

- 1) Select <Menu Mode> → <2. Setting about Calibration> → <1. Zero Calibration Time/Cycle Setting>, and set the zero gas feed time, ON/OFF of auto zero calibration, and cycle time, ON/OFF of zero calibration before the start of measurement.

(2) Span calibration concentration value setting

- 1) Select <Menu Mode> → <2. Setting about Calibration> → <2. Span Calibration Concentration Value Setting>, and change calibration gas concentration value for each component range.

3.2.2 Switching ranges (See “4.1.4” for setting method.)


- (1) Select <Menu Mode> → <4. Changeover of Range> to adjust the range to the measurement range.

3.2.3 Zero/span calibration (See “4.1.1” for calibration method.)

- (1) Select <Menu Mode> → <Zero/Span Calibration>, and perform zero/span calibration.

3.2.4 Adjusting flow rate

- (1) Using the needle valves (NV1, NV2) of the sampling unit, adjust the flow rate so that the flow checker ball of the analyzer unit comes to the center of the yellow zone (about 0.5L/min).

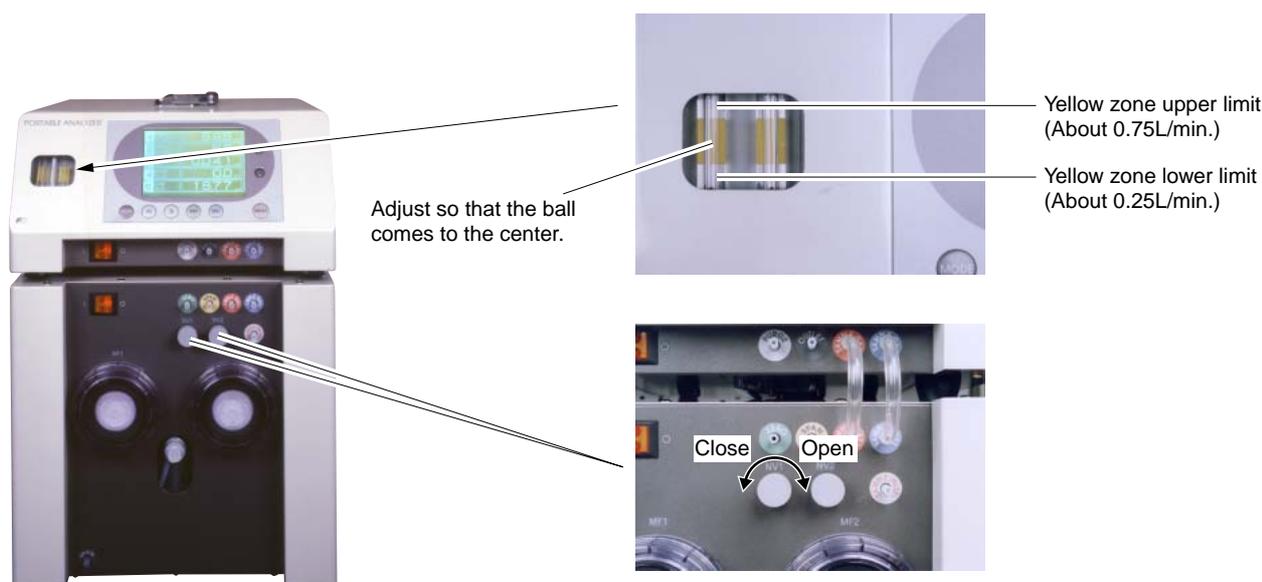

Caution on operation

- The flow channel of the sample gas (during measurement) within the sampling unit is different from that of the calibration gas (zero, span). Make an adjustment using the needle valve as required.

3.3 Starting and exiting measurement

Perform measurement after zero/span calibration is completed.

3.3.1 Starting measurement

- (1) Display measurement 1 screen or measurement 2 screen.
- (2) Press the  key. Auto zero calibration is started, and when arbitrarily set time has elapsed, switching is made to measurement state.


Caution on operation

- The ON/OFF operation of the  key (measurement/standby mode) is allowed only on measurement screens 1 to 2. Be sure to check the displayed screen before making the selection.
- Measurement can be made during warm-up operation, but auto zero calibration is not performed. Note that the reading may fluctuate because the instrument has not been warmed up fully.
- Auto zero calibration cannot be forcibly performed before the start of measurement.

Keys other than the brightness adjustment key and the  key cannot be operation while auto zero calibration is in progress.

Press the  key to bring the instrument into standby state, and then perform other operations.

Note that ON/OFF can be selected for auto zero calibration before the start of measurement. Select <Menu mode> → <2. Setting about calibration > → <1. Zero Calibration Time/Cycle Setting> mode to make the ON/OFF setting.



3.3.2 Exiting measurement

(1) Display measurement 1 screen or measurement 2 screen.



(2) Press the **MEAS** key.

The **PURGE** display comes on and stays on for about 2 seconds, and then it moves to the lower right-hand corner of the screen. The purge complete time is displayed with the down timer.

How to forcibly exiting purge

Press the **ESC** key in a state where PURGE is displayed at the lower right-hand corner of the screen, and purge is forcibly exited.



(3) After purge is exited, automatic draining is started.

How to forcibly exit draining

Press the **ESC** key in a state where DRAIN is displayed at the lower right-hand corner of the screen, and draining is forcibly exited.



Measurement has thus been completed.




3.3.3 Stopping operation

Perform the following and then turn off the power.

(1) Checking drain volume and draining


Visually check the drain volume through the drain check window.

If the drain has not been discharged completely, select <Menu Mode> → <5. Drain> → <Pot> to discharge the remaining drain.

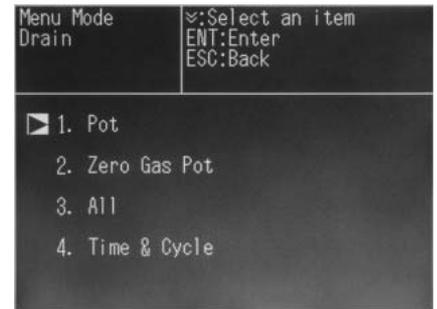

(2) Draining zero gas pot

To transport the instrument or suspend the operation for one week or longer, select <Menu Mode> → <5. Drain> → <Pot> to drain the clean water within the zero gas pot.

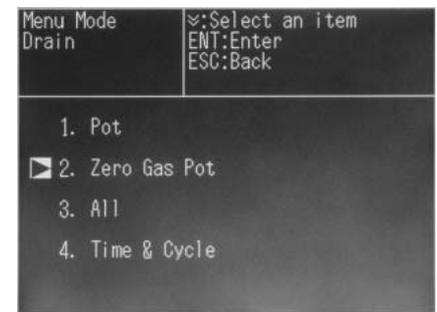

(3) Replace the filter paper of the membrane filter. (See 5.3.4.)

Caution

- Do not transport or store the instrument with drain or clean water remaining within the zero gas pot. Otherwise leakage may occur, and when the power is turned on later, electric shock or fire may result. Discoloration or degradation of the pot may also result.

4. SETTING AND MODE

4.1 Menu mode

4.1.1 Zero/span calibration

Perform zero and span calibrations in the menu mode.

Caution on operation

- If zero/span calibration is attempted during warm-up operation, WARM-UP is displayed on the upper right-hand corner of the screen, and the calibration cannot be executed.
- This instrument enters into the span calibration mode after zero calibration is completed.
- Zero/span calibration can be performed either in measurement or standby mode. However, the output hold is not executed in standby mode irrespective of the setting (kept in OFF state).

(1) Zero calibration mode

- 1) Press the **MODE** key either on measurement 1 or measurement 2 screen to display menu mode screen.
- 2) Move the cursor to <1. Zero/Span Calibration> using the **⇩** key, and then press the **ENT** key.

Measurement 1 or measurement 2 screen



```

Menu Mode          ⏴:Select an item
                   ENT:Enter
                   ESC:Back

▣ 1. Zero/Span Calibration
  2. Setting about Calibration
  3. Setting about Gas change/purge
  4. Changeover of Range
  5. Drain
  6. Error Cancel
  7. CP Setting
  8. Parameter Setting
    
```



- 3) On the <Gas Select> screen that appears, select zero and span gas conditions using the **⇩** key.

Setting contents

- The setting screen varies depending on calibration gas conditions. Perform calibration according to the following descriptions.

When <Wet Air/Dry> is selected:

Zero gas: Air in cylinder or clean air

Span gas: Dry gas in cylinder

When <Wet N2/Dry> is selected

Zero gas: N2

Span gas: Dry gas in cylinder

```

Menu Mode          ⏴:Select
Gas Select         ENT:enter
                   ESC:Back

          ZERO GAS  SPAN GAS
          ┌───┬───┬───┬───┐
          │   │   │   │   │
          │▣ │ Wet Air │ Dry │   │
          │   │   │   │   │
          │   │ Wet N2 │ Dry │   │
          └───┴───┴───┴───┘
    
```



- 4) Press the **ENT** key, and the <Zero Cal.> mode screen appears.
- 5) Select ON/OFF of zero calibration using the **⇩** and the **⇨** keys.

Setting contents

ON : Executes zero calibration.

OFF : Does not execute zero calibration.

```

Menu Mode          ⏴:Select a range
Zero Cal.         ENT:Select
                   ESC:Back

CH ele. cal. value
CH1 NOx ON 5.2 ppm
CH2 SO2 ON 3 ppm
CH3 CO2 ON 0.009 vol%
CH4 CO ON 0.0 ppm
CH5 O2 ON 18.55 vol%
    
```



- 6) Press the **ENT** key.

<In the case of Wet Air/Dry>

Caution on operation

- If O₂ analyzer is provided, even if “ON” is selected for O₂ zero calibration, calibration is not performed because O₂ is contained in the zero gas.

7) The cursor moves to the reading.

Menu Mode		Zero Cal.		ENT:Zero cal.		ESC:Cancel	
CH	ele.	cal.	value				
CH1	NO _x	ON	5.4 ppm				
CH2	SO ₂	ON	3 ppm				
CH3	CO ₂	ON	0.009 vol%				
CH4	CO	ON	0.0 ppm				
CH5	O ₂	ON	18.55 vol%				

8) Press the key, and air is automatically aspirated through the zero calibration port. Adjust the flow rate with the needle valve.

Menu Mode		Zero Cal.		ENT:Force zero cal.		ESC:Cancel zero cal.	
				Zero Cal. Time 159sec.			
CH	ele.	cal.	value				
CH1	N ₂	ZERO Cal.	5.2 ppm				
CH2	S ₂	ZERO Cal.	3 ppm				
CH3	C ₂	ZERO Cal.	0.011 vol%				
CH4	C ₂	ZERO Cal.	-0.3 ppm				
CH5	O ₂	ON	18.55 vol%				

9) When arbitrarily set time elapses, the Ch1 span calibration screen appears.

Auto

Menu Mode		Span Cal.		CH 1		»:Select mode		ENT:Enter		ESC:Back		MODE:CH2 Span cal.	
CH	ele.	cal.	range	value									
			0-500ppm	0.4 ppm									
CH1	NO _x	back	0-1000ppm	ppm									
			0-2000ppm	ppm									

<In the case of Wet N₂/Dry>

7) The cursor moves to the reading.

Menu Mode		Zero Cal.		ENT:Zero cal.		ESC:Cancel	
CH	ele.	cal.	value				
CH1	NO _x	ON	0.0 ppm				
CH2	SO ₂	ON	0 ppm				
CH3	CO ₂	ON	0.001 vol%				
CH4	CO	ON	0.0 ppm				
CH5	O ₂	ON	18.54 vol%				

8) Connect N₂ gas to the zero calibration port. Press the key and adjust the flow rate with the needle valve.

Menu Mode		Zero Cal.		ENT:Force zero cal.		ESC:Cancel zero cal.	
				Zero Cal. Time 168sec.			
CH	ele.	cal.	value				
CH1	N ₂	ZERO Cal.	0.4 ppm				
CH2	S ₂	ZERO Cal.	0 ppm				
CH3	C ₂	ZERO Cal.	0.001 vol%				
CH4	C ₂	ZERO Cal.	-0.2 ppm				
CH5	O ₂	ZERO Cal.	18.54 vol%				

Caution on operation

- Zero calibration is performed in batch for all the ranges of selected components.
- If “OFF” is selected for zero calibration of all the components, zero calibration including auto zero calibration and that before start of measurement is not performed.
- Zero calibration is performed at the time arbitrarily set. The time of completion of zero calibration is displayed at the upper right-hand corner of the screen.

How to forcibly perform zero calibration

To forcibly perform zero calibration without waiting for the arbitrarily set time of calibration to elapse, press the key in 8).

Zero calibration of O₂ analyzer

1. When <Wet N₂/Dry> is selected in zero calibration mode

- (1) Calibration is performed simultaneously with the infrared ray sensor.
See 4.1.1 (1) Zero calibration mode.

2. When <Wet Air/Dry> is selected in zero calibration mode

Caution

- The O₂ zero calibration screen is displayed when the O₂ analyzer is added.

- (1) Press the  key to perform zero calibration.

Caution

- If “ON” is selected for O₂ analyzer, zero calibration of O₂ analyzer is not performed in this mode. Follow the procedure shown below to perform zero calibration of the O₂ analyzer.

- (2) The screen is automatically switched to the span calibration screen of the 1st component (Ch1).
(3) Select “both” or “each,” and then press the  key to carry out span calibration. See 4.1.1 (2) Span calibration mode.

- (4) The screen switches to “Next Ch span calibration” or “O₂ zero calibration.”

The number of span calibration screen varies depending on specifications.

- (5) Feed the span gas that does not contain N₂ or O₂ from the span inlet of the sampling unit at the rate of 0.5L/min.
Example: Continuously feed the span gas fed immediately before.
(6) When the display stabilizes in 2 to 3 minutes, press the  key.
(7) When calibration is completed, the O₂ span calibration screen appears.
(8) Perform O₂ span calibration in the same manner as other span calibrations.

 ↓ ↑ 

Menu Mode	Zero Cal.			ENT:Force zero cal. ESC:Cancel zero cal.
Zero Cal. Time 150sec.				
CH	ele.	cal.	value	
CH1	N ₂	ZERO Cal.	5.2	ppm
CH2	S ₂	ZERO Cal.	3	ppm
CH3	C ₂	ZERO Cal.	0.011	vol%
CH4	C ₂	ZERO Cal.	-0.8	ppm
CH5	O ₂	ON	18.55	vol%

Auto ↓

Menu Mode	Span Cal.				>>:Select mode
CH 1					ENT:Enter
					ESC:Back
					MODE:CH2 Span cal.
CH	ele.	cal.	range	value	
CH1	NO _x	each	0-500ppm	0.8 ppm	
			0-1000ppm	ppm	
			0-2000ppm	ppm	

Span calibration is carried out repeatedly for multiple component specifications without O₂ analyzer.

In the case of O₂ analyzer only

 ↓ ↑ 

Menu Mode	Span Cal.				>>:Select mode
CH 5					ENT:Enter
					ESC:Back
					MODE:Back to Menu
CH	ele.	cal.	range	value	
CH5	O ₂	both	0-5vol%	vol%	
			0-10vol%	vol%	
			0-25vol%	18.52 vol%	
Press MEAS key, and Air gas flows.					<OFF>

 ↓ ↑ 

Menu Mode	O ₂ Zero Cal.			ENT:Enter
				ESC:Back
				MODE:O ₂ Span Cal.
O ₂ Zero Cal.			23.98	vol%

(2) Span calibration mode

Caution on operation

- When span calibration of the target Ch is completed, the screen automatically switches to the span calibration screen of the next Ch. Press the **MODE** key not to perform span calibration, and the screen switches to the span calibration screen of the next Ch.

Setting contents

- “both” : Carries out span calibration of 3 ranges in batch.
- “each” : Carries out span calibration by range.

Note on operation

- “both” : Calibration of each component can be carried out with the same span gas, which is ideal when the place of measurement is changed frequently.
- “each” : Span calibration is carried out by each component range.


Operation in the case where “both” is selected

- Select “both” for calibration operation using the **MODE** key, and press the **ENT** key.
- The cursor appears for all the ranges, and flickers at only one range. The concentration is also displayed for that range.
The display indicates the calibration reference range.
Span calibration concentration value is displayed at the bottom of the screen.
- Move the flickering cursor using the **DOWN** key, and change the calibration reference range.
- Feed the span gas for the target of calibration.
Adjust the flow rate at about 0.5L/min.
- When the reading stabilizes in about 2 to 3 minutes, press the **ENT** key.
- The display automatically switches to Ch span calibration mode screen.
- Follow the procedure in 3) to 6) to carry out span calibration for all the components.

Caution on operation

- To change span gas calibration concentration value, select <Menu Mode> → <2. Setting about Calibration> → <2. Span Calibration Value>.

Calibration has now been completed.

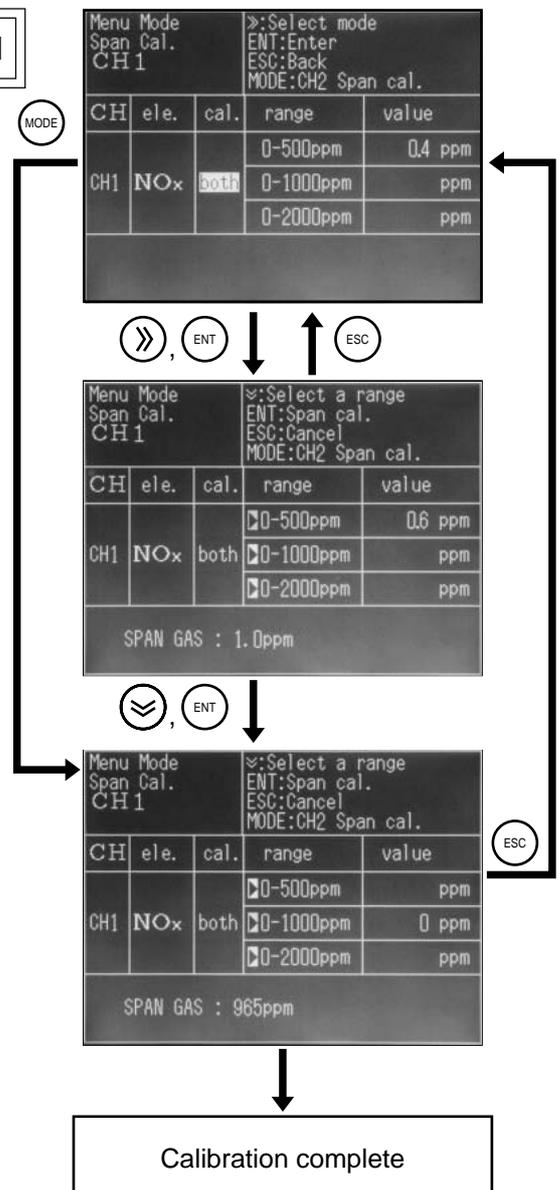


Operation in the case where “each” is selected

- 1) Select “each” for calibration operation using the **»** key, and press the **ENT** key.
- 2) The cursor and concentration value are displayed only for the target range.
Span calibration concentration value is also displayed at the bottom of the screen.
- 3) Change the span calibration concentration value using the **⇩** key.
- 4) Feed the span gas for target of calibration.
Adjust the flow rate at about 0.5L/min.
- 5) When the reading stabilizes in about 2 to 3 minutes, press the **ENT** key.
- 6) The mode automatically switches to the Ch span calibration mode.
- 7) To calibrate other ranges, press the **ESC** key, and repeat the procedure in 3) to 6)
- 8) Follow the procedure in 3) to 7) to carry out span calibration of all the components.

Caution on operation

- To change span gas calibration concentration value, select <Menu Mode> → <2. Setting about Calibration> → <2. Span Calibration Value>.


Calibration has now been completed.

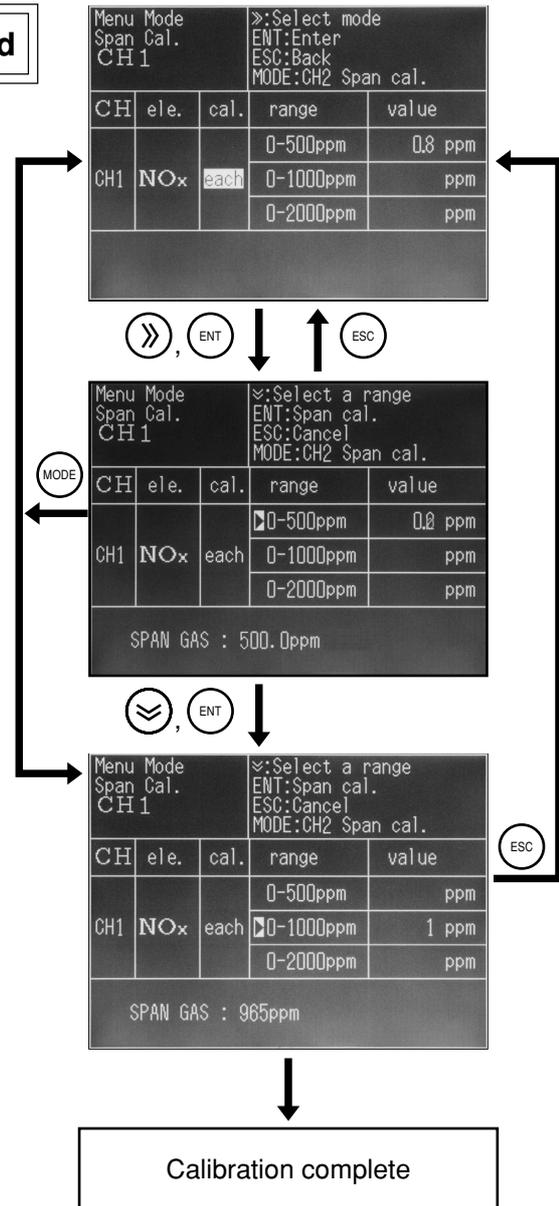

(3) Zero/span calibration complete screen


1) Exiting manual zero/span calibration in progress

- If span calibration mode is jumped using the **MODE** key (calibration not performed), the “Menu Mode” screen appears again.
- If span calibration is executed by pressing the **ENT** key, the “Measurement screen” appears again.

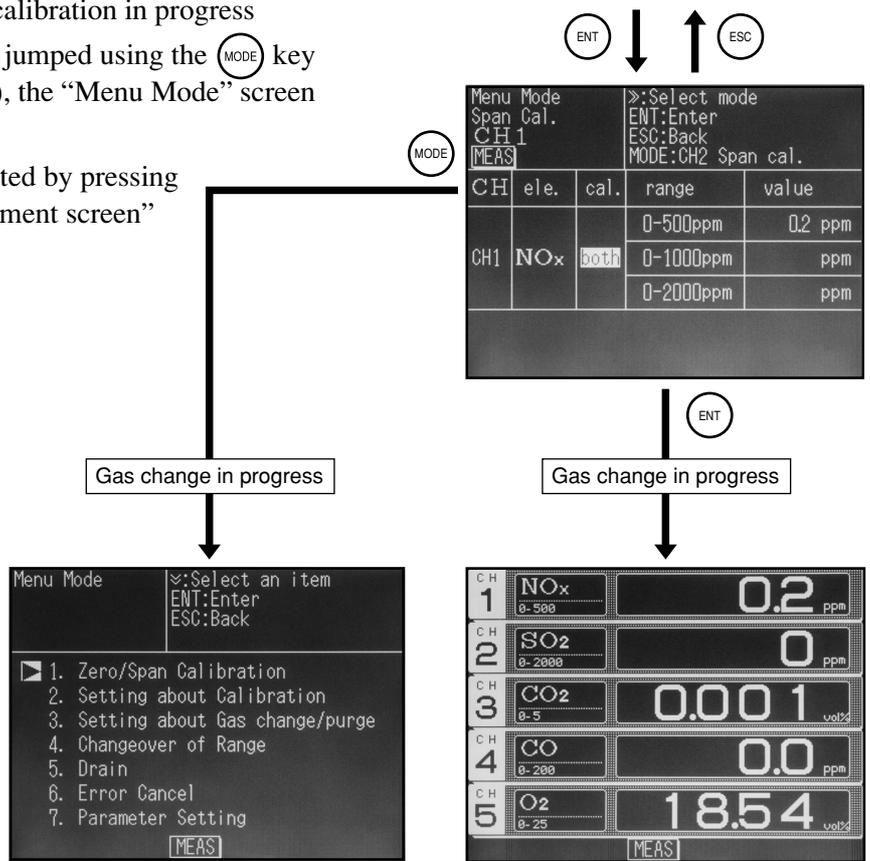

2) Exiting manual zero/span calibration in standby mode

- The “Menu Mode” screen appears again.

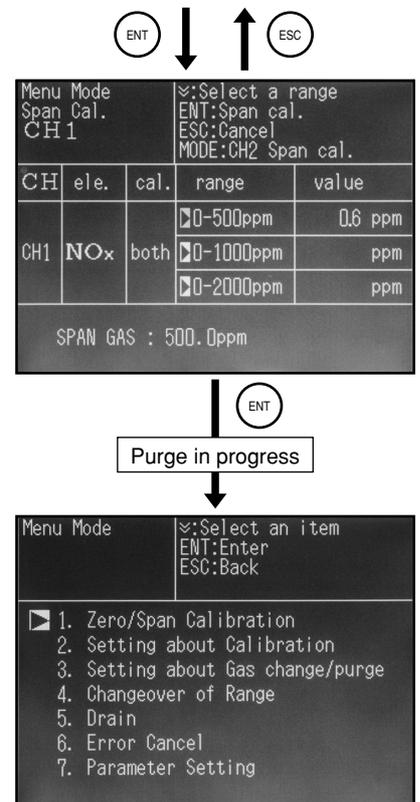

4.1.2 Setting calibration time/cycle and concentration value

(1) Setting zero calibration time/cycle

Select gas feed time for manual/auto zero calibration, ON/OFF of auto zero calibration, and the calibration cycle. Also select ON/OFF of zero calibration before the start of measurement.


Setting range and contents

- Zero gas feed time : “180 to 999 sec” (in steps of 1 sec)
- Auto zero calibration cycle : “ON”; Executes auto zero calibration. 01 to 12 hours (in steps of 1 hour)
“OFF”; Does not execute auto zero calibration.
- Zero calibration before the start of measurement :
“ON”; Performs zero calibration before the measurement is started.
“OFF”; Does not perform zero calibration before the measurement is started.


Initial value

- Zero gas feed time : 180 sec
- Auto zero calibration cycle : OFF
When “ON” is selected: 04 hours
- Zero calibration before the start of measurement : ON


- 1) Move the cursor to <2. Setting about Calibration> using the  key, and press the  key.
The screen switches as shown at right.

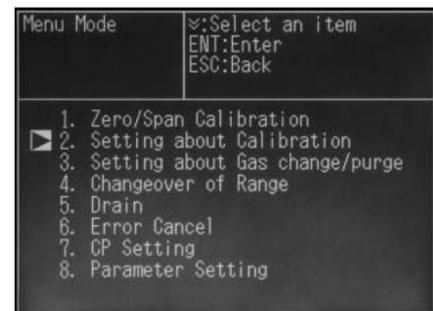

- 2) Move the cursor to <1. About Zero Calibration> using the  key, and press the  key.

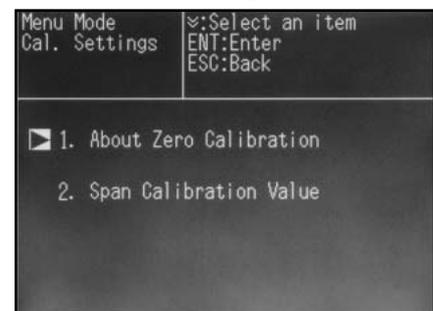

- 3) Move the cursor to <Flow time> using the  key, and press the  key. The cursor moves to the setting value.

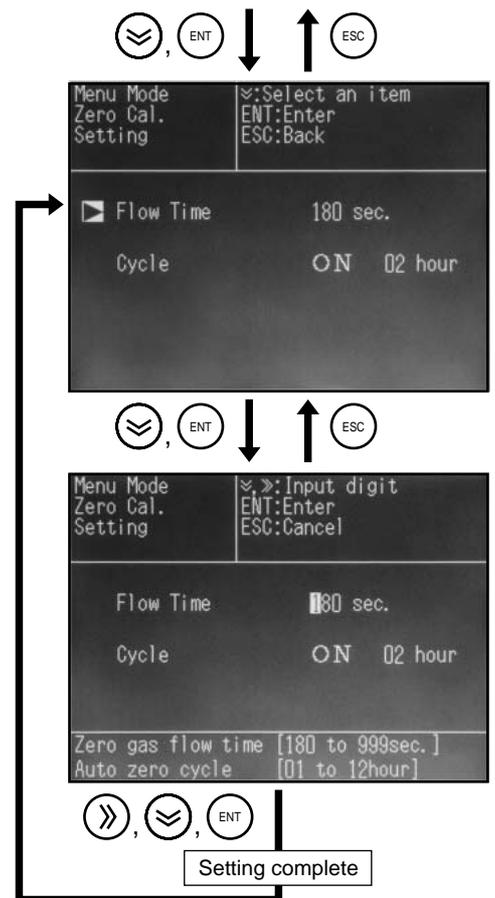

- 4) Select a digit using the  key, and change the value using the  key. Then press the  key. The previous screen appears again.

- 5) Set <Cycle> in the same manner.
6) Also make the setting for <Zero Calibration before Start of Measurement>.

The setting has now been completed.

Caution on screen

- The cycle time is not displayed if "OFF" is selected for auto zero calibration cycle setting. Select "ON" using the  key, and set the cycle time.

(2) Setting span calibration value

Enter span calibration gas concentration value for each component and each range.

Setting range

- Minimum display value to full scale value (FS) of each range

Note that the accuracy of span gas concentration value is guaranteed within 80 to 100% range of the full scale.

Use a proper gas cylinder.

Example of input range: In the case of 500ppm range

- Input can be made within the range from 000.1ppm to 500.0ppm.
- Input of 000.0ppm and 500.1ppm or higher are regarded as an error (previous input is retained).

Initial value

- Each component and range: In-house span adjustment value or full-scale value

- 1) Move the cursor to <2. Span Calibration Value> using the  key, and press the  key. The screen switches as shown at right.
- 2) Move the cursor to the component (Ch) to be set using the  key, and press the  key. The cursor moves to range 1 (Ch1).
- 3) Move the cursor to the range to be set using the  key, and press the  key. The cursor moves to the span calibration value.

Menu Mode Cal. Settings	∇:Select an item ENT:Enter ESC:Back		
1. About Zero Calibration			
▶ 2. Span Calibration Value			



Menu Mode Span Cal. Setting	∇:Select a channel ENT:Enter ESC:Back			
Span Calibration Value				
CH	ele.	range1	range2	range3
CH1	NO _x	001.0 ppm	0965 ppm	1920 ppm
CH2	SO ₂	474.0 ppm	0934 ppm	1900 ppm
CH3	CO ₂	4.820 vol%	09.51 vol%	19.00 vol%
CH4	CO	190.0 ppm	477.4 ppm	0934 ppm
CH5	O ₂	4.880 vol%	09.49 vol%	24.00 vol%



Menu Mode Span Cal. Setting	>:Select a range ENT:Enter ESC:Back			
Span Calibration Value				
CH	ele.	range1	range2	range3
CH1	NO _x	▶001.0 ppm	0965 ppm	1920 ppm
CH2	SO ₂	474.0 ppm	0934 ppm	1900 ppm
CH3	CO ₂	4.820 vol%	09.51 vol%	19.00 vol%
CH4	CO	190.0 ppm	477.4 ppm	0934 ppm
CH5	O ₂	4.880 vol%	09.49 vol%	24.00 vol%



- 4) Select a digit using the  key, and change the value using the  key.
Press the  key.
The previous screen appears again.

Menu Mode		↵, 2: Input digit		
Span Cal.		ENT: Enter		
Setting		ESC: Cancel		
CH	ele.	Span Calibration Value		
		range1	range2	range3
CH1	NO _x	01.0 ppm	0965 ppm	1920 ppm
CH2	SO ₂	474.0 ppm	0934 ppm	1900 ppm
CH3	CO ₂	4.820 vol%	09.51 vol%	19.00 vol%
CH4	CO	190.0 ppm	477.4 ppm	0934 ppm
CH5	O ₂	4.880 vol%	09.49 vol%	24.00 vol%

, , 

Setting complete

- 5) Make the setting for other components and ranges in the same manner.

The setting has now been completed.

4.1.3 Setting gas change and purge time

Change gas or purge gas is automatically fed when calibration or measurement is completed.

The duration of feed can be set as follows.

Gas change/purge

- Gas change : After manual calibration or auto zero calibration is completed during measurement, sample gas is fed for a period of time arbitrarily selected.
- Purge : After manual calibration or auto zero calibration is completed in standby state, or after the measurement is completed, zero gas is fed for a period of time arbitrarily selected.


Setting range

- “30 to 300 sec” (in steps of 1 sec)


Initial value

“60 sec”

- 1) Move the cursor to <3. Setting about Gas change/purge> using the  key, and press the  key.
The screen switches as shown at right.

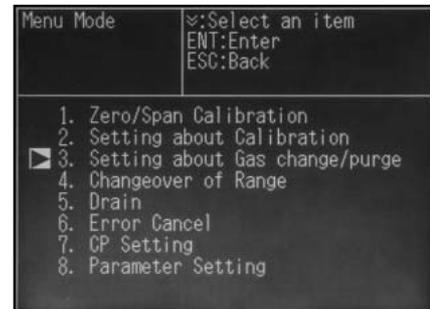

- 2) Select a digit using the  key, and change the value using the  key.
Press the  key to register the setting.
The cursor moves to the most significant digit of the setting.

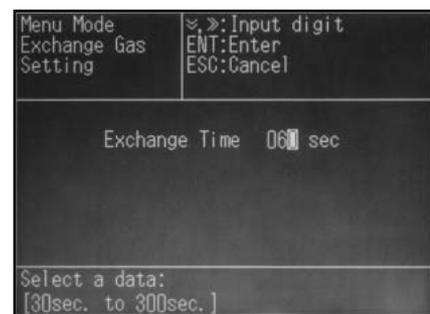

Setting complete



The setting has now been completed.

4.1.4 Switching ranges

The range and the display selected in this mode is output.

The correction value and the average correction value and the CP calculation value are also calculated in selection range.

Initial value

- “Minimum range”

- 1) Move the cursor to <4. Changeover of Range> using the  key, and press the  key.

The screen switches as shown at right.

Menu Mode	∇:Select an item ENT:Enter ESC:Back
1. Zero/Span Calibration 2. Setting about Calibration 3. Setting about Gas change/purge 4. Changeover of Range 5. Drain 6. Error Cancel 7. CP Setting 8. Parameter Setting	



- 2) Move the cursor to the component (Ch) to be set using the  key, and press the  key.

The cursor moves to the range currently selected.

Menu Mode	Change a range			
Range Change	∇:Select a channel ENT:Enter ESC:Back			
CH	ele.	Range Value		
		range1	range2	range3
CH1	NO _x	500ppm	1000ppm	2000ppm
CH2	SO ₂	500ppm	1000ppm	2000ppm
CH3	CO ₂	5vol%	10vol%	20vol%
CH4	CO	200ppm	500ppm	1000ppm
CH5	O ₂	5vol%	10vol%	25vol%



- 3) Move the cursor to the range to be set using the  key, and then press the  key.

The cursor at the selected range is highlighted as ►, and the previous screen appears again.

- 4) Make the setting for other components in the same manner.

The setting has now been completed.

Menu Mode	Change a range			
Range Change	>:Select a range ENT:Enter ESC:Cancel			
CH	ele.	Range Value		
		range1	range2	range3
CH1	NO _x	500ppm	1000ppm	2000ppm
CH2	SO ₂	500ppm	1000ppm	2000ppm
CH3	CO ₂	5vol%	10vol%	20vol%
CH4	CO	200ppm	500ppm	1000ppm
CH5	O ₂	5vol%	10vol%	25vol%



Setting complete

4.1.5 Draining

The drain pot and the zero gas pot can be manually drained in this mode.

The duration and the cycle of automatic draining can be made as follows.

Caution on draining

- Drain can be discharged manually or automatically.
Connect a tube and a drain receive container to the drain port.
- If the analyzer is not operated for 1 week or longer, or it is transferred to another site, be sure to drain water within the drain pot and the zero pot.
- Visually check the drain volume through the drain check window, and determine the automatic draining cycle.
- If the drain should overflow from the pot, overhaul is required.
Be sure to check the drain volume daily.

- 1) Move the cursor to <5. Drain> using the  key, and press the  key.
The screen switches as shown at right.

(1) Draining drain pot

Discharge the drain within the mist filter (MSF) and the dehumidifier as shown below.


- 1) Using the  key, move the cursor to <1. Pot>, and then press the  key.

- 2) “DRAIN” comes on at the center of the screen.
Draining is performed automatically, and it is stopped when arbitrarily set time elapses.

The work has now been completed.

Caution on draining

- Press the  key while draining is in progress to forcibly stop draining.

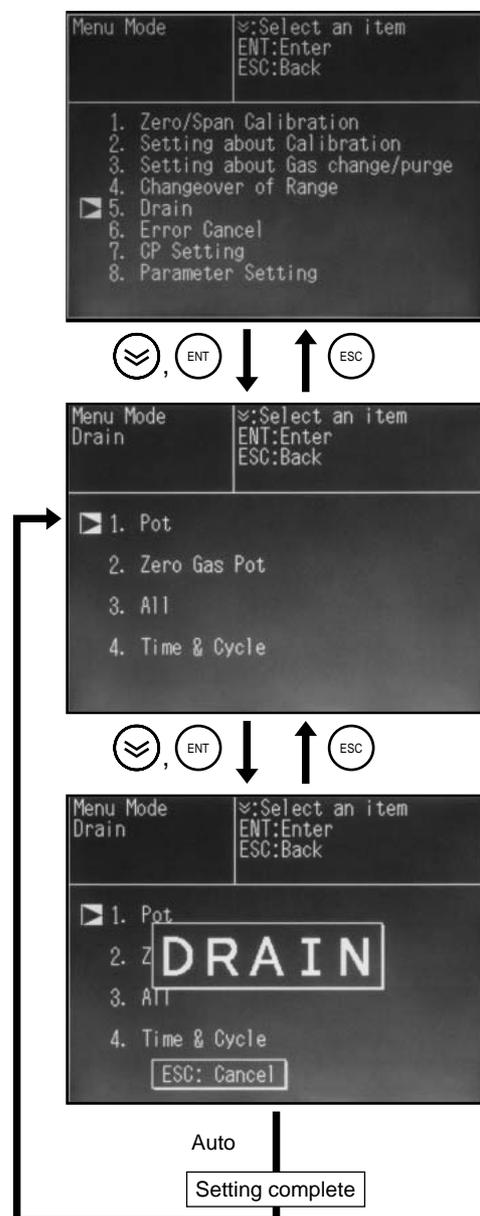

(2) Draining zero gas pot

Drain the clear water within the pot for zero gas dehumidification as follows.

See “Draining drain pot” in (1) for details.

(3) Batch draining

The contents within the drain pot and the zero gas pot can be drained at the same time.

See “Draining drain pot” in (1) for details.

(4) Setting draining time and cycle

The time and cycle of draining can be set as follows.

Setting range

- Draining time: “30 to 60 sec” (in steps of 1 sec)
- Draining cycle: “1 to 8 hours” (in steps of 1 hour)

Initial value

- Draining time: “30 sec”
- Draining cycle: “04 hours”

- 1) Move the cursor to <4. Time & Cycle> using the  key, and press the  key.

The screen switches as shown at right.

- 2) Move the cursor to <Drain Time> using the  key, and press the  key.




The cursor moves to the time to be set.

- 3) Change the time setting using the  key. Then press the  key to register the setting value.

The previous screen appears again.

- 4) Follow the same procedure to set <Cycle>.

The setting has now been completed.

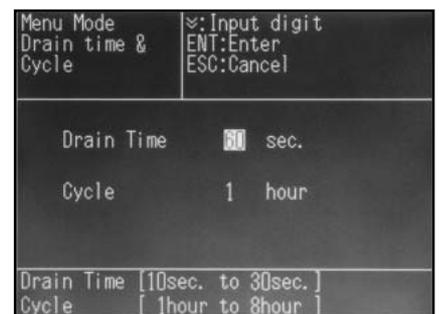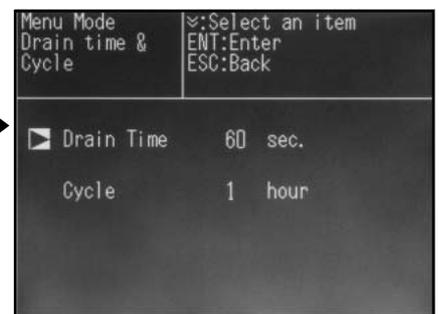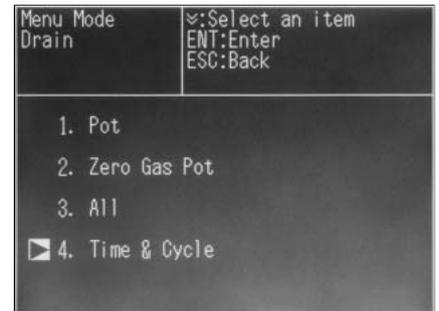

Setting complete

4.1.6 Canceling errors

The error display can be canceled in this mode.

Caution on handling

- The error display only can be deleted in this mode.
If the cause of occurrence of the error is not removed, the error display appears again.


- (1) Move the cursor to <6. Error Cancel> using the  key, and press the  key.

The screen switches as shown at right.

- (2) Press the  key again.

The Menu Mode screen appears again.

The work has now been completed.

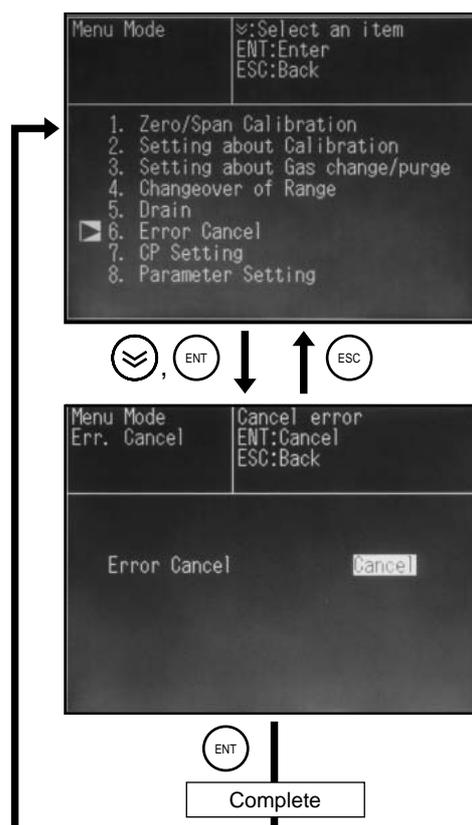

4.1.7 Setting CP calculation value conditions

Set the conditions necessary for CP calculation in this mode.

Note

- The mode is displayed when CP calculation value is selected for the output type.

Setting range

- CO concentration: Regular value; “10.0 to 40.0% CO” (In steps of 0.1%)
- Furnace temperature setting: “800°C to 1000°C” (In steps of 1°C)

Initial value

- CO concentration: “Regulated to 20.0% CO”
- Furnace temperature setting: “900°C”

- 1) Move the cursor to <7. CP Setting> using the  key and then press the  key, and the screen is switched.

(1) CO concentration setting

Select <Measured Value> or <Regular Value> as CO concentration required for calculation.

- 2) Move the cursor to <1. CO Concentration Setting> using the  key and then press the  key, and the screen is switched.

- 3) Select measured value or regular value using the  key.

- Select the measured value and press the  key to return to the previous screen.



- Select the regular value and press the  key, and temporary CO concentration value is displayed.

Select a digit using the  key, and change the value using the  key.

Press the  key to return to the previous screen.

Note on setting


- If CO meter is not provided, setting the CO concentration value to <Measured Value> results in a calculation error. Be sure to enter the value properly.

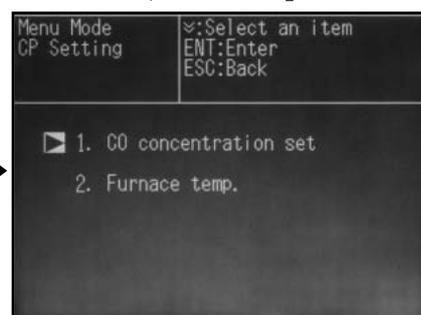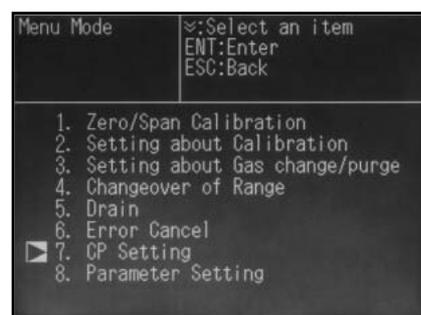


Setting complete



(Measured value)

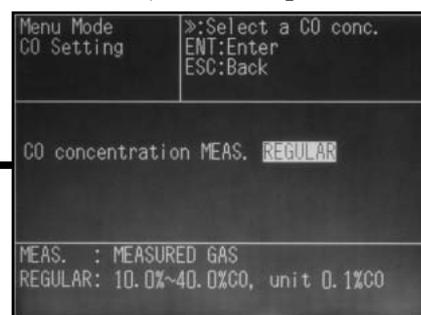


The setting has now been completed.

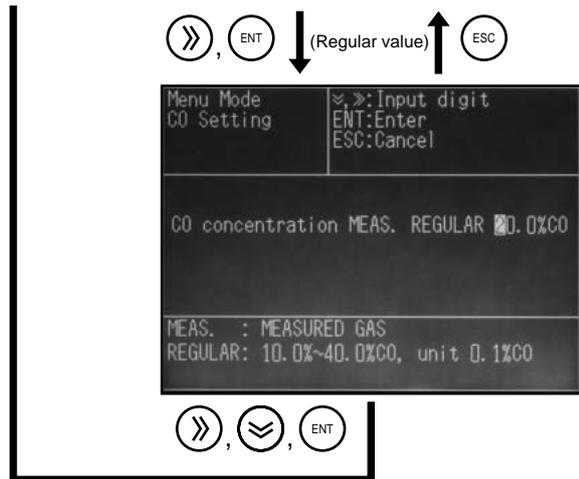

(2) Furnace temperature setting

Enter temporary furnace temperature value.

- 2) Move the cursor to <2. Furnace Temperature Setting> using the key and then press the key, and the screen is switched.

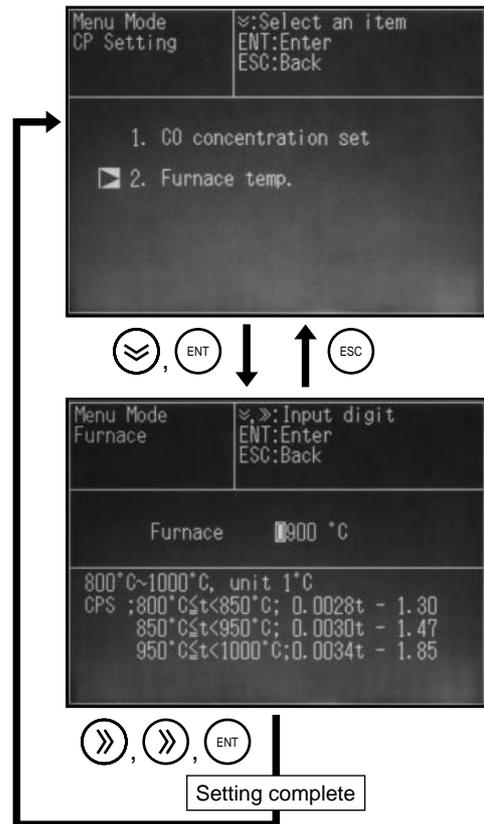

- 3) Select a digit using the key and change the value using the key. Press the key to return to the previous screen.

The setting has now been completed.



4.1.8 Parameter setting

The parameter setting screen can be entered in this mode.

See 4.2 for details of parameter setting.

- (1) Move the cursor to <8. Parameter Setting> using the  key, and press the  key.

The Parameter Mode screen appears.

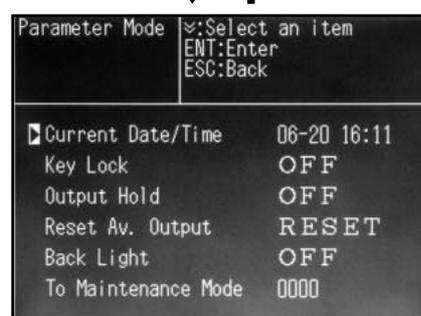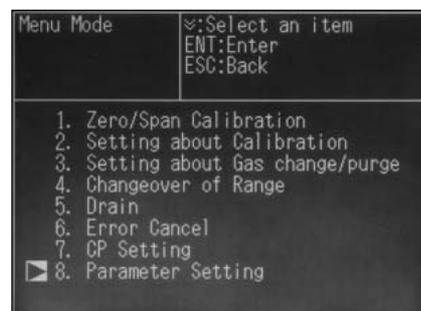

4.2 Parameter mode


Make the parameter setting, observing the following.

Setting item


- Current Date/Time : Set current month, date, hour, and minute.
- Key Lock : Key operations can be disabled.
- Output Hold : The output can be held during calibration in measurement.
- Reset Av. Output : The average value can be reset.
- Back Light : The back light can be automatically turned off in standby mode.
And also OFF time of the backlight can be set.
- To Maintenance Mode : Enter the password for entering the maintenance mode.

* See “4.3 Maintenance mode” for details of the maintenance mode.

- (1) Move the cursor to <Menu Mode> → <8. Parameter Setting> using the  key, and press the  key.

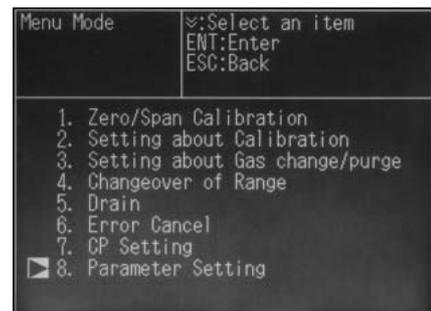

- (2) On the Parameter Mode screen that appears, move the cursor to the item to be set using the  key, and then press the  key.

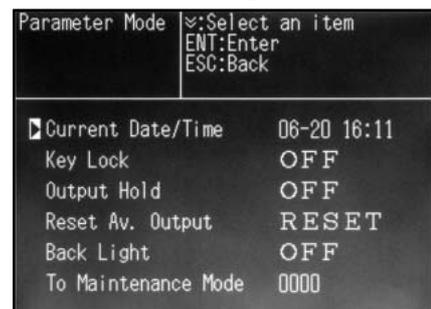

4.2.1 Setting date/time

The setting is made to record the date and time of occurrence of an error.

See <Maintenance Mode> → <13. Error Log> for the contents to be recorded.

Caution on handling

- This mode is backed up with a battery. However, if the power is kept off for 7 days or longer, the clock is made to stop. Resetting is required in this case.

Setting range

- Month : 01 to 12
- Date : 01 to 31
- Hour : 00 to 23
- Minute : 00 to 59

(1) Move the cursor to <Current Date/Time> using the

⏴ key, and press the ENT key.


The cursor moves to the value to be entered.

(2) Select current date and time using the ⏴ and the ⏵ keys.

(3) Press the ENT key to register the setting.

Then the item selection screen appears again.

The setting has now been completed.

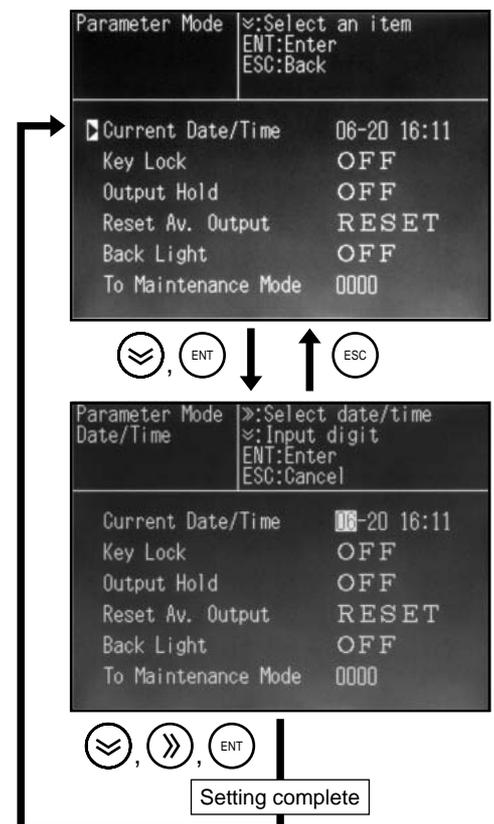

4.2.2 Key lock

The key lock function can be used to prevent improper operation and entry by an unauthorized person.

Setting contents

- ON : Enables key lock.
- OFF : Resets key lock.

Initial value

- OFF

Caution on setting


- The following operations can be made even when key lock is set to “ON.”
 - (1) ON/OFF of the  key (switching between the measurement and the standby modes)
 - (2) Execution of zero/span calibration
 - (3) Execution or error cancel
 - (4) ON/OFF setting of this mode (key lock)
 - (5) Adjustment of brightness
- Set this mode to “OFF” before making settings other than the above.

- (1) Move the cursor to <Key Lock> using the  key, and press the  key.

The cursor moves to the value to be entered.

- (2) Select “ON/OFF” using the  key.
- (3) Press the  key to register the setting.
Then the item selection screen appears again.

The setting has now been completed.

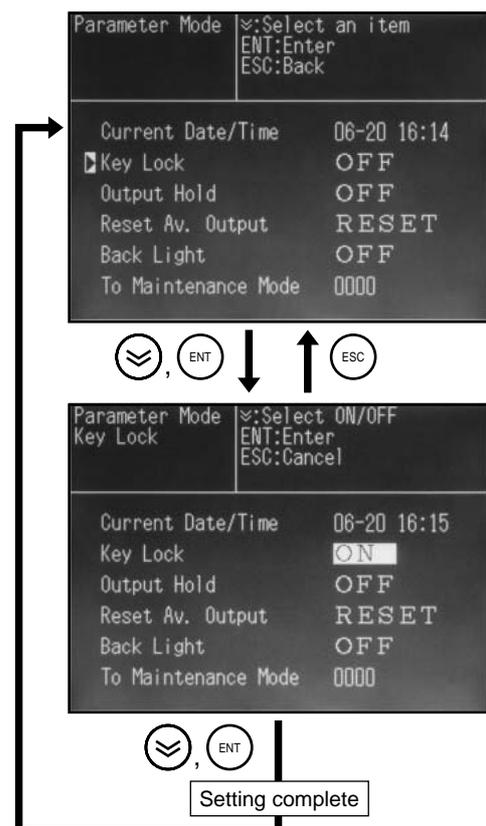

4.2.3 Output hold

Output signals are put to hold during calibration in measurement (auto zero, manual zero, and span calibrations), draining, and gas change.


Setting contents

- ON : Holds output signals.
- OFF : Resets the hold of output signals.

Initial value

- OFF

1. Calibration and hold operations in measurement

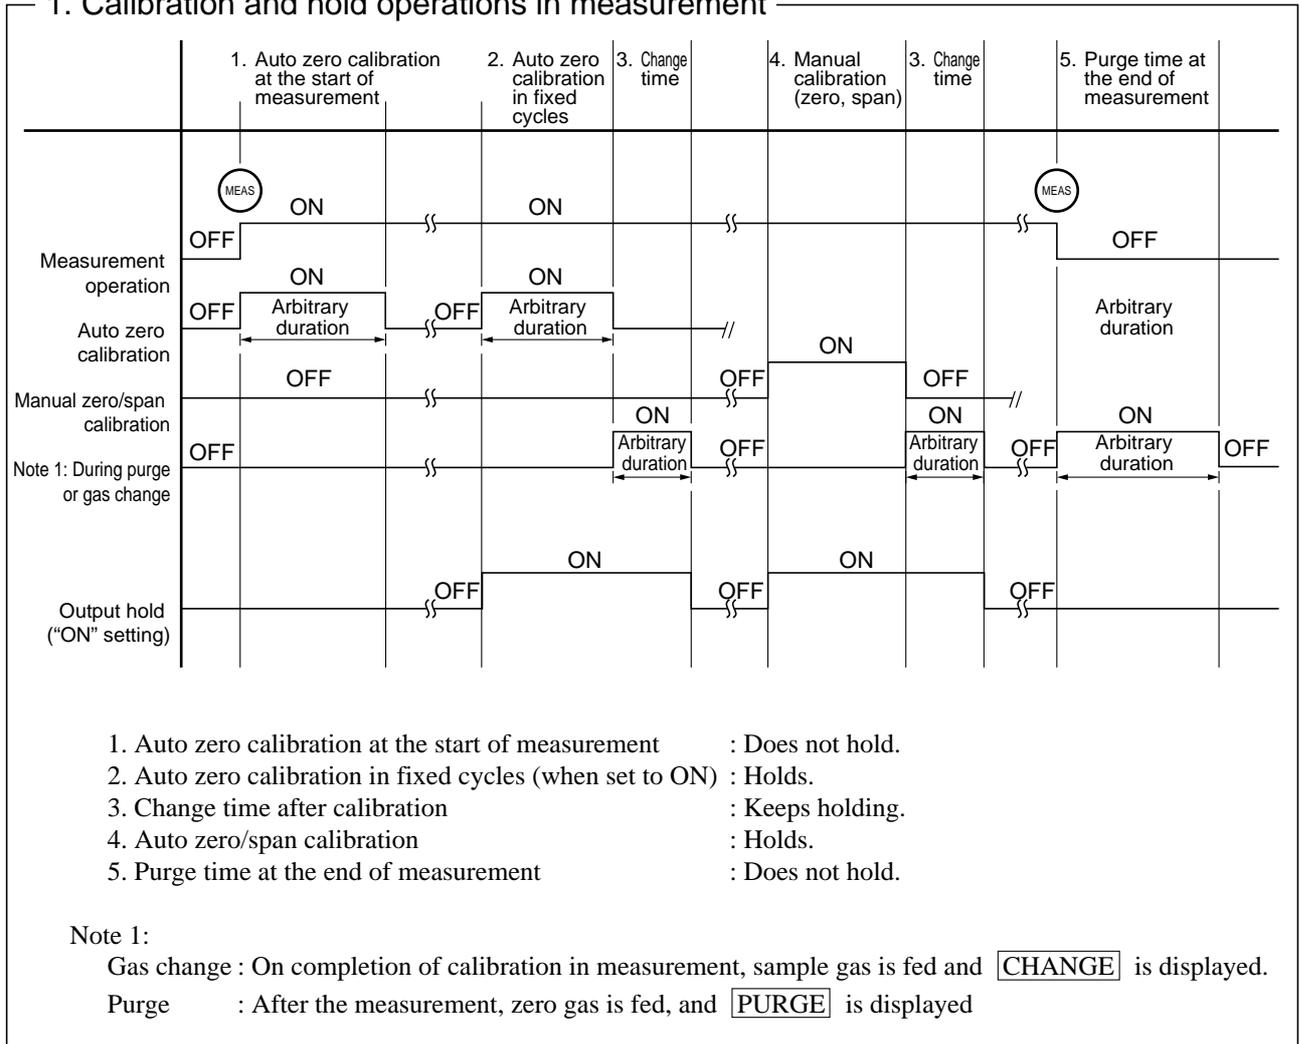

2. Hold operation in standby mode

Output is not put to hold irrespective of hold “ON/OFF” setting.


- (1) Move the cursor to <Output Hold> using the  key, and then press the  key.

The cursor moves to the value to be entered.

- (2) Select “ON/OFF” using the  key.
(3) Press the  key to register the setting.

The item selection screen appears again.

The setting has now been completed.

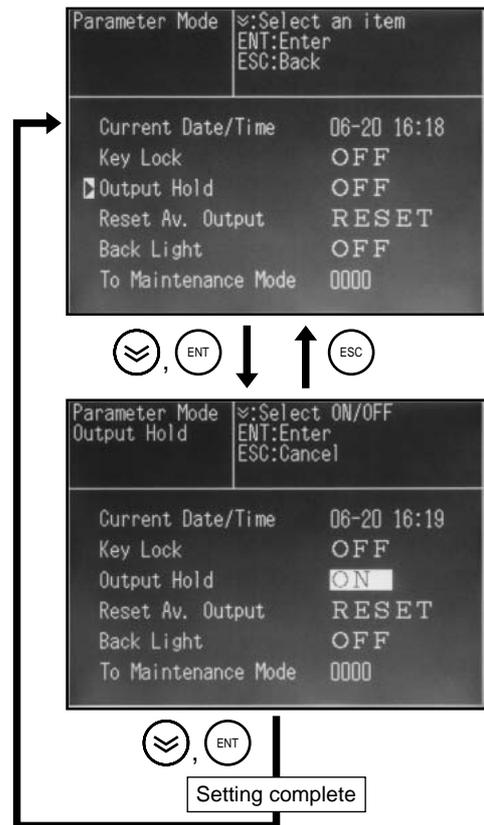

4.2.4 Resetting average output value

Integrated average output value and display can be reset as follows.

Caution on operation

- Immediately after the reset is “execute,” the reading and the output value appear as 0ppm, vol%.
- Reset is allowed only for the instrument of specifications with average value output provided. If average value output is not provided, **NO AVERAGE** is displayed as shown at right.
- See <Maintenance Mode> → <1. CH No.> and <Maintenance Mode> → <2. Average Time> for the setting of average value.

Parameter Mode	▽:Select an item
	ENT:Enter
	ESC:Back
	No average
Current Date/Time	06-20 16:27
Key Lock	OFF
Output Hold	ON
Reset Av. Output	RESET
Back Light	OFF
To Maintenance Mode	0000

- (1) Using the  key, move the cursor to <Reset Av. Output>, and then press the  key.
The cursor moves within the mode.

- (2) Press the  key, and reset is executed, and the item select screen appears again.

Reset has now been completed.

Parameter Mode	▽:Select an item
	ENT:Enter
	ESC:Back
Current Date/Time	06-20 16:20
Key Lock	OFF
Output Hold	ON
Reset Av. Output	RESET
Back Light	OFF
To Maintenance Mode	0000




Parameter Mode	ENT:Execute
Reset Av.	ESC:Cancel
Current Date/Time	06-20 16:20
Key Lock	OFF
Output Hold	ON
Reset Av. Output	RESET
Back Light	OFF
To Maintenance Mode	0000

 Setting complete

Example of average operation and reset operation

When average value is set to 1 hour

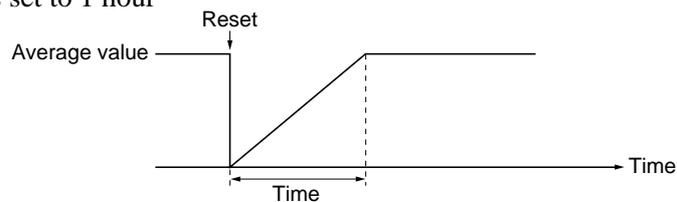

- Sampling cycle is 30 seconds (fixed irrespective of the average time setting).
- The average of the values up to 1 hour before the current time is output at the intervals of 30 seconds.
- At the time of reset, all the values up to the current time are regarded as 0 for calculation. Consequently, accurate average value can be obtained 1 hour after the reset.

4.2.5 Setting indicator lamp OFF time

Automatic ON/OFF and OFF time of the indicator backlight can be set as follows.

OFF condition

- Set the setting to “ON.”
- When the set time elapses since any key is pressed last on “measurement 1 screen or measurement 2 screen” in “standby state,” the backlight automatically goes off.

ON condition

- When any key is pressed while the backlight stays off, it automatically comes on.

Setting contents

- ON : The backlight goes off when arbitrarily set time elapses. The setting range is from 01 to 30 minutes (in steps of 1 minute).
- OFF : The backlight does not go off.

Initial value

- OFF (05 minutes if ON is selected)

- (1) Using the  key, move the cursor to <Back Light >, and press the  key.

The cursor moves to the value to be entered.


- (2) Select “ON/OFF” using the  key.

Select “ON,” and the OFF time is displayed.

Move the cursor using the  key, and change the setting using the  key.

- (3) Register the setting by pressing the  key. Then the item select screen appears again.

The setting has now been completed.

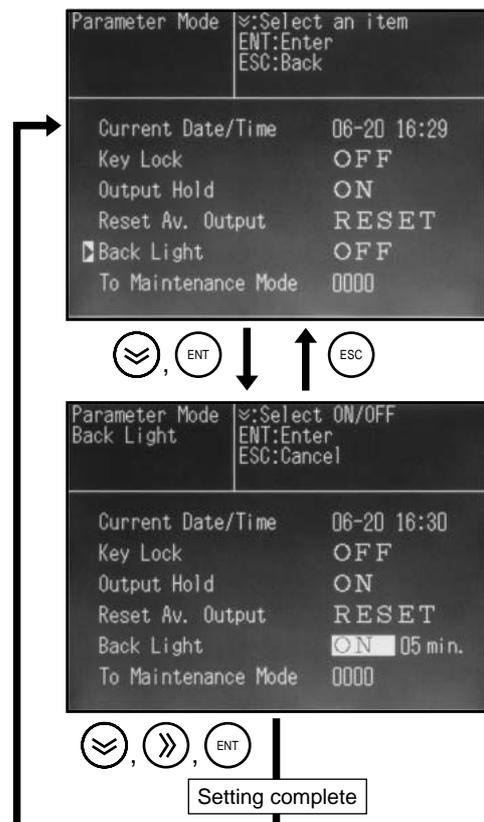

4.2.6 Maintenance mode

Enter the password to go into the maintenance mode.

Initial password

- The password is set to “0000” at the time of delivery from the factory.
- Select <Maintenance Mode> → <10. Password Set> to change the password.

- (1) Move the cursor to <Maintenance Mode> using the  key, and press the  key.

The cursor moves to the password entry field.

- (2) Enter the password using the  and the  keys.
 (3) Press the  key, and the <Maintenance Mode> screen appears.

Parameter Mode	▽:Select an item ENT:Enter ESC:Back
Current Date/Time	06-20 16:30
Key Lock	OFF
Output Hold	ON
Reset Av. Output	RESET
Back Light	OFF
▷ To Maintenance Mode	0000



Parameter Mode To Maintenance	▽,▷:Input digit ENT:Enter ESC:Cancel
Current Date/Time	06-20 16:31
Key Lock	OFF
Output Hold	ON
Reset Av. Output	RESET
Back Light	OFF
To Maintenance Mode	0000



Maintenance Mode	▽,▷:Select an item ENT:Enter ESC:Back
▷ 1. CH No.	9. Minus display
2. Average time	10. Password Set
3. Current/Volt	11. Sensor Input
4. Output adj.	12. Coefficient
5. O2 ref. Value	13. Error Log
6. Interference	14. To Factory
7. Station No.	
8. Response time	

If you forget the password

Enter the common password “6284.”

4.3 Maintenance mode

Change of output value, periodic inspection, and failure analysis are performed in the maintenance mode.

See 4.2.6 Maintenance Mode for the procedure to enter the maintenance mode.

Description of setting item

1. CH No. : Select “corrected instantaneous value” or “corrected average value” or “CP calculation value” for display and output value.
2. Average time : Select average time of “corrected average value.”
3. Current/Volt : Select current output or voltage output.
4. Output adj. : Adjust zero value and span value of output signals.
5. O₂ ref. Value : Set reference O₂ concentration value.
6. Interference : Adjustment mode for correcting the moisture interference on NO_x and SO₂ analyzers
7. Station No. : Set when using communication input/output.
8. Response time : Set the response time of internal operation.
9. Minus display : Set with/without of minus display.
10. Password Set. : Password setting to enter the maintenance mode
11. Sensor Input : Displays digital values after A/D conversion.
12. Coefficient : Check the internal operation coefficient.
13. Error Log : Date of occurrence of error or error contents can be checked.
14. To Factory : Enters the factory adjustment mode. (You do not have to carry out adjustment or setting.)

Caution on operation

- You have to enter the password to enter into this mode.
Record your password after it is established just in case you forget it.
- The maintenance mode is an important setting mode in which output adjustment, moisture interference adjustment, etc. are made to maintain the accuracy of the instrument.

4.3.1 Selecting output type

Instantaneous correction value or average correction value or CP calculation value can be selected in this mode.

Caution on setting

- Setting can be made only when NO_x, SO₂, CO, and CO₂ (CP calculation value) analyzers are added for measured components.
- Be sure to select “NONE” not to make the setting.
- See “1.4.2 Outline of display screen” for each formula.

Setting contents


Selection can be made from “Corrected concentration value,” “Corrected average concentration value,” “CP calculation value” or “None.”

Initial value


“Depends on specifications.”

- (1) Move the cursor to <1. CH No.> using the  key, and press the  key.

The screen switches as shown at right.

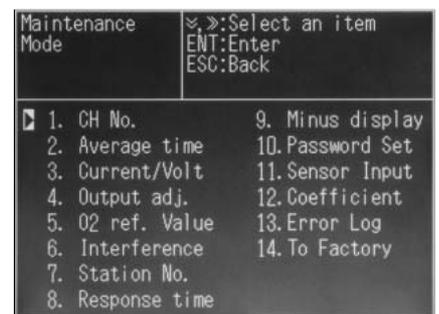


- (2) Move the cursor to the channel (CH) to be set using the  key. Press the  key, and the cursor moves to the entry field.

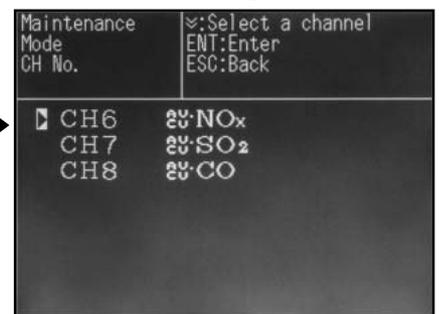

- (3) Select setting contents using the  key, and press the  key. The CH selection screen appears again.

- (4) Make the setting of other channels in the same manner.

Setting has now been completed.

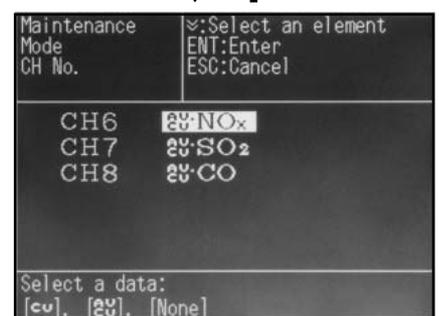


Setting complete

4.3.2 Average output time

Average corrected time can be set in this mode.

Caution on setting

- The message shown at right is displayed if average corrected value is not selected in “4.3.1 Selecting output type.”
- Sampling cycle is 30 seconds.
- The average of the values from the current time to before the time of setting is output at intervals of 30 seconds.
Accurate average value can be obtained when the set time elapses after the data is input.

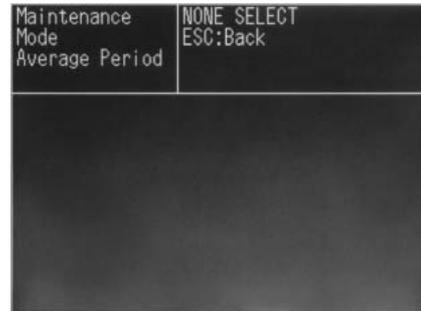


Setting contents

- “01 to 59 minutes (in steps of 1 minute)” or “01 to 04 hours (in steps of 1 hour)”


Initial value

“01 hour”


- (1) Move the cursor to <2. Average time> using the key, and press the key.
The screen switches as shown at right.

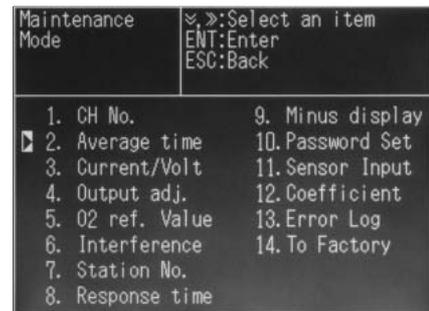

- (2) Move the cursor to the channel (CH) to be set using the key.
Press the key, and the cursor moves to the time to be set.

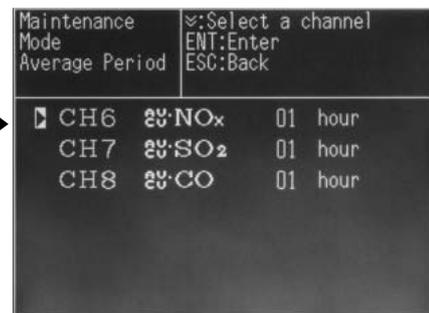

- (3) Move the cursor to “Hour” and “Minute” using the key, and enter numeric values using the key. Move the cursor to the “numeric value” using the key again, change the value using the key, and then press the key.
- (4) Make the setting for other channels in the same manner.

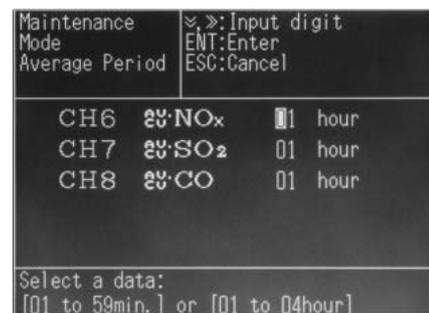

Setting complete

The setting has now been completed.

4.3.3 Selecting output

Current output (4 to 20mA DC) or voltage output (0 to 1V DC) can be selected in this mode.

To switch between current and voltage outputs, switch the jumper pin of the control printed board.

Caution on setting

- When making the setting in this mode, be sure to switch the jumper pin of the control printed board. Otherwise accurate output signal cannot be obtained.

Setting contents


Select “4 to 20mA DC” or “0 to 1V DC.”

Initial value

“Depends on specifications.”

Jumper switching

Output channel	Jumper	4 to 20mA DC	0 to 1V DC
CH1	JP1	1-2	2-3
CH2	JP2	1-2	2-3
CH3	JP3	1-2	2-3
CH4	JP4	1-2	2-3
CH5	JP5	1-2	2-3
CH6	JP6	1-2	2-3
CH7	JP7	1-2	2-3
CH8	JP8	1-2	2-3

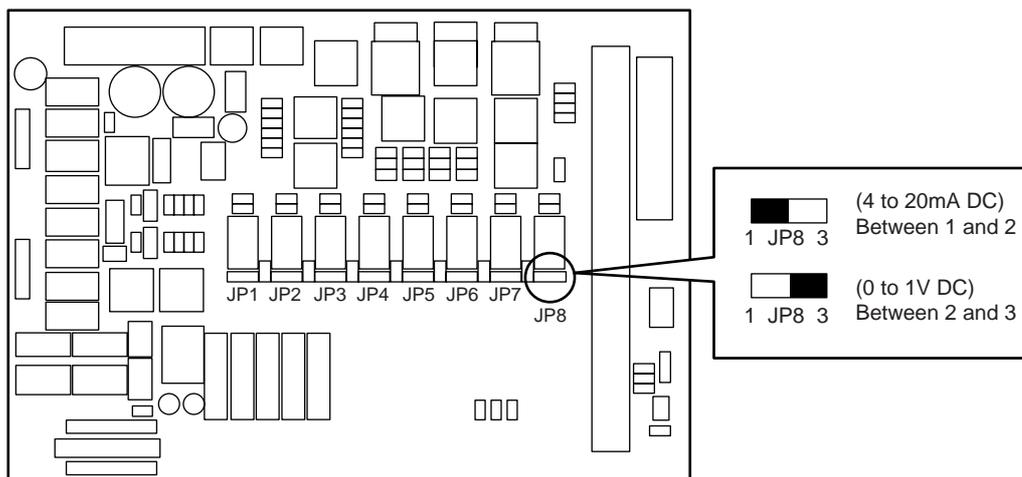

- (1) Move the cursor to <3. Current/Volt> using the  key, and press the  key.
The screen switches as shown at right.

Maintenance Mode	⏏:Select an item ENT:Enter ESC:Back	
1. CH No.	9. Minus display	
2. Average time	10. Password Set	
3. Current/Volt	11. Sensor Input	
4. Output adj.	12. Coefficient	
5. 02 ref. Value	13. Error Log	
6. Interference	14. To Factory	
7. Station No.		
8. Response time		




- (2) Move the cursor to the output to be selected using the  or the  key.
Press the , and the cursor moves to the value to be entered.

Maintenance Mode	Change pin		⏏:Select an item ENT:Enter ESC:Back		
Output SW					
OUT	OUTPUT	SHORT	OUT	OUTPUT	SHORT
1	0-1V	JP1 2-3	5	0-1V	JP5 2-3
2	0-1V	JP2 2-3	6	0-1V	JP6 2-3
3	0-1V	JP3 2-3	7	0-1V	JP7 2-3
4	0-1V	JP4 2-3	8	0-1V	JP8 2-3



- (3) Change the setting contents using the  key, and press the  key.
The output No. selection screen appears again.
(4) Make the setting of other output signals in the same manner.

Maintenance Mode	Change pin		⏏:Select output ENT:Enter ESC:Cancel		
Output SW					
OUT	OUTPUT	SHORT	OUT	OUTPUT	SHORT
1	0-1V	JP1 2-3	5	0-1V	JP5 2-3
2	0-1V	JP2 2-3	6	0-1V	JP6 2-3
3	0-1V	JP3 2-3	7	0-1V	JP7 2-3
4	0-1V	JP4 2-3	8	0-1V	JP8 2-3
Select a data: [0 to 1V] or [4 to 20mA]					



The setting has now been completed.

4.3.4 Adjusting output

Zero value and span value of output signals can be adjusted as follows.

Preparation for the setting

- Connect an ammeter or a voltmeter to the analog output connector.

Caution on setting

- The variable setting value is for internal operation.
Check the adjusted output value with an ammeter or a voltmeter.


Tolerance of output value

- In the case of 4 to 20mA DC
Zero: 4mA±0.05mA
Span: 20mA±0.05mA
- In the case of 0 to 1V DC
Zero: 0V±0.005A
Span: 1V±0.005A

- (1) Move the cursor to <4. Output adj.> using the  key, and press the  key.

The screen switches as shown at right.

Maintenance Mode	↓, >:Select an item ENT:Enter ESC:Back	
1. CH No.	9. Minus display	
2. Average time	10. Password Set	
3. Current/Volt	11. Sensor Input	
▶ 4. Output adj.	12. Coefficient	
5. 02 ref. Value	13. Error Log	
6. Interference	14. To Factory	
7. Station No.		
8. Response time		



- (2) Move the cursor to the output (zero, span) to be set using the  or the  key.
Press the  key, and the cursor moves to the value to be entered.

Maintenance Mode	↓, >:Select an item ENT:Enter ESC:Back				
Output Adj.					
OUT	ZERO	SPAN	OUT	ZERO	SPAN
1	▶ 0580	3470	5	0563	3444
2	0574	3458	6	0540	3437
3	0562	3447	7	0513	3397
4	0565	3449	8	0592	3471



- (3) Select a digit using the  key, and change the value using the  (UP) key and the  (DOWN) key.

At this time, make the setting so that the ammeter or the voltmeter connected to the output signal indicates the specified value.

Press the  key, and the data is registered.

The output signal selection screen appears again.

- (4) Make the setting for other zero and span output signals in the same manner.

Maintenance Mode	MODE, >:Adjust output >:Select a digit ENT:Enter ESC:Cancel				
Output Adj.					
OUT	ZERO	SPAN	OUT	ZERO	SPAN
1	0580	3470	5	0563	3444
2	0574	3458	6	0540	3437
3	0562	3447	7	0513	3397
4	0565	3449	8	0592	3471



Setting complete

The setting has now been completed.

4.3.5 Setting O₂ reference value

Reference O₂ correction concentration value can be set to obtain O₂ correction concentration value.

Caution on setting

- Valid only when either one of NO_x, SO₂, and CO analyzers is added.
- If O₂ analyzer is not added, the message shown at right is displayed.




Setting range

“00 to 19%”


Initial value

“12%”

- (1) Move the cursor to <5. O₂ ref. Value> using the key, and press the key.
The screen switches as shown at right.

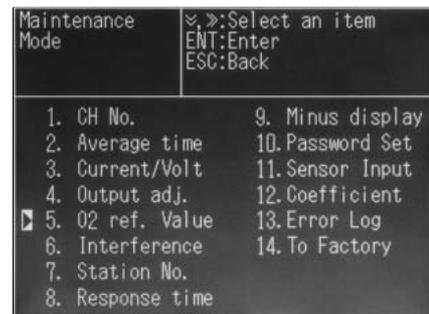

- (2) Press the key again, and the cursor moves.
- (3) Change the setting using the key, and press the key.
The previous screen appears again.



The setting has now been completed.

4.3.6 Interference (for NO_x and SO₂ analyzers)

The effect of moisture interference can be calculated for correction in this adjustment mode.

See “5.4.3 Interference” for details of adjustment.


Caution on setting

- Adjustment is required when either NO_x analyzer or SO₂ analyzer is added.
- If neither NO_x analyzer nor SO₂ analyzer is added, the message shown at right is displayed.




Description of the screen

- “CH1 NO_x” or “CH2 SO₂”:
Makes an adjustment for each component.
- “ALL”: Makes an adjustment for all the components.
- “RESET”: Resets the correction value to “0.”
- Correction value: Displays the correction volume in internal operation value.
- Interference value: Displays the interference value in internal operation value.

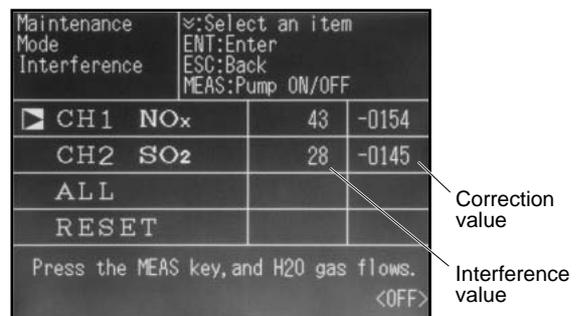


<Adjusting CH1 NO_x or CH2 SO₂ by component>

- (1) Move the cursor to <6. Interference> using the key, and press the key.
The screen switches as shown at right.

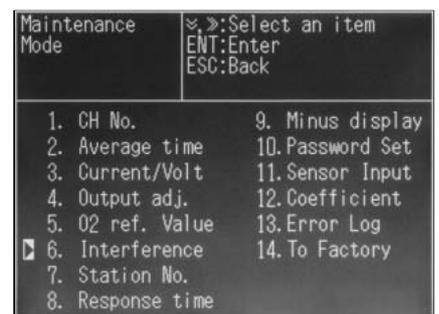


- (2) Move the cursor to the component to be adjusted using the key.

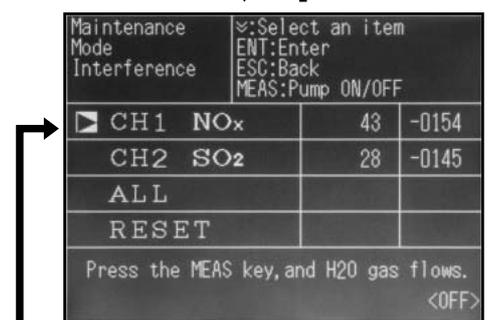

- (3) Feed the moisture interference gas using the **MEAS** key.
Press the **ENT** key, and the cursor moves to the correction value.
- (4) When the interference value stabilizes, enter correction value using the **MEAS** (UP) key, **⇩** (DOWN) key, and the **»** (digit) key so that the interference value becomes 0.
- (5) Press the **ENT** key, and the data is registered.

The setting has now been completed.

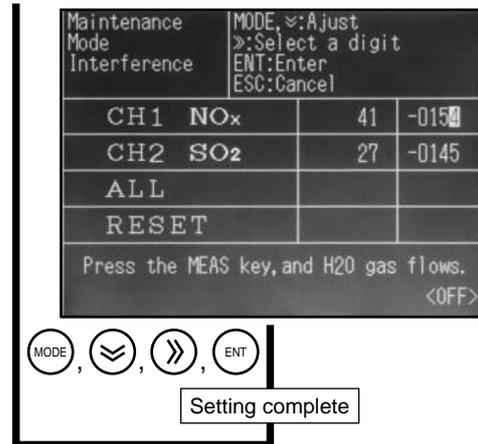


<Adjusting 2 components simultaneously by ALL>

- (1) Move the cursor to <6. Interference> using the **⇩** key, and press the **ENT** key.
The screen switches as shown at right.

- (2) Move the cursor to ALL using the **⇩** key.

- (3) Press the **MEAS** key, and the moisture interference gas is fed.
Press the **ENT** key, and the cursor is moved.
- (4) When the interference value stabilizes, press the **ENT** key.
Automatic adjustment is carried out, and the component selection screen appears again.

The setting has now been completed.

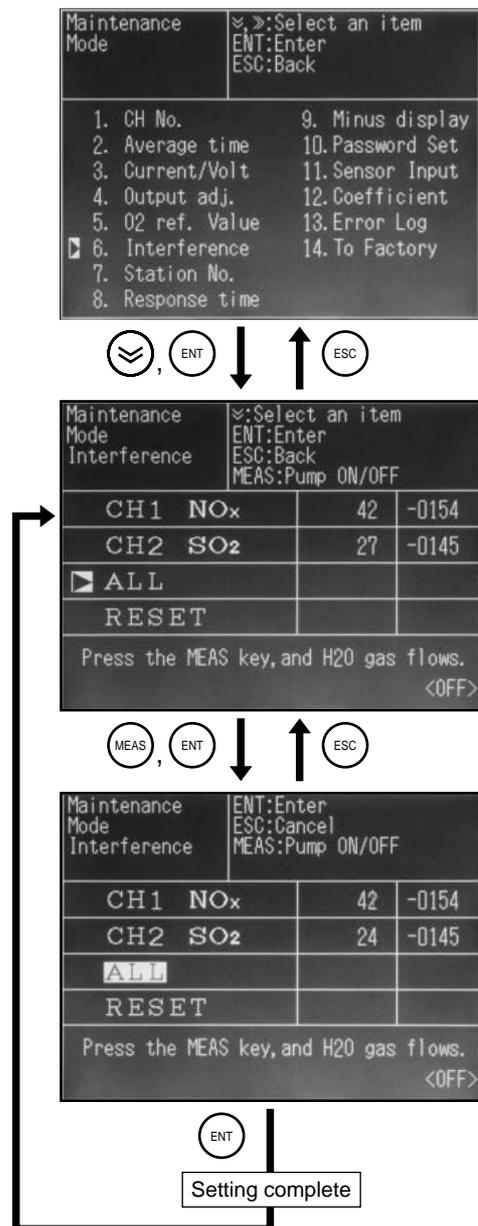

4.3.7 Setting transmission station No.

The station No. for Modbus communication can be set as follows.

Caution on use

- Establish communication program separately, referring to a separate document “Communication Function.”

Setting range



“01 to 31”

Initial value


“01”

- (1) Move the cursor to <7. Station No.> using the  key, and press the  key.

The screen switches as shown at right.

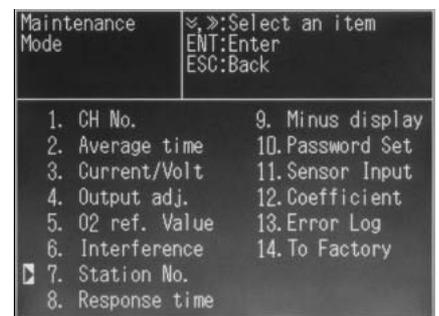

- (2) Press the  key again, and the cursor moves to the value to be entered.

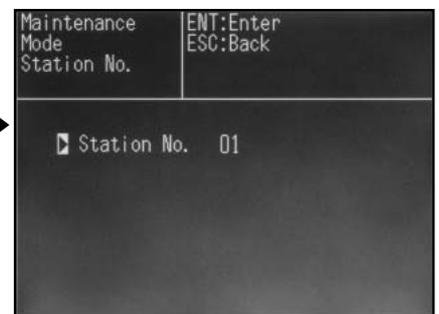

- (3) Change the setting using the  key, and press the  key.

The setting has now been completed.



Setting complete

4.3.8 Response time

Response time by internal operation (moving average) can be set as follows.

Caution on use

- The set time is for guidelines.
- The response time set here does not include gas feed and gas change time.
- In general, the longer the response speed, the slower the response time and less the fluctuation of reading.


Setting range

“01 to 60 sec”


Initial value

“03 sec”


- (1) Move the cursor to <8. Response time> using the  key, and press the  key.
The screen switches as shown at right.

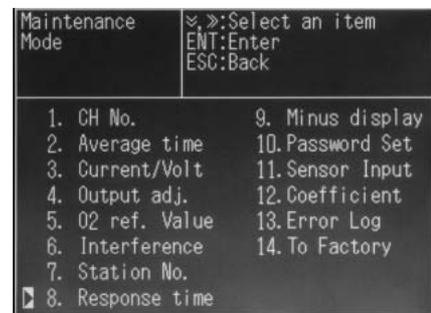

- (2) Move the cursor to the component to be set using the  key.
Press the  key, and the cursor moves to the value to be entered.

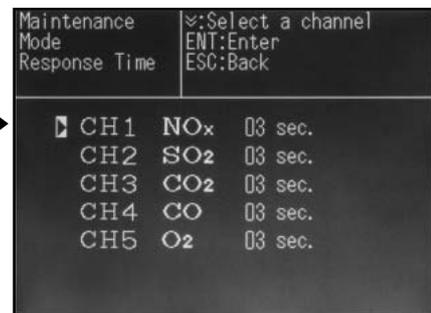

- (3) Select a digit using the  key, and change the value using the  key.
Press the  key, and the data is registered and the previous screen appears again.

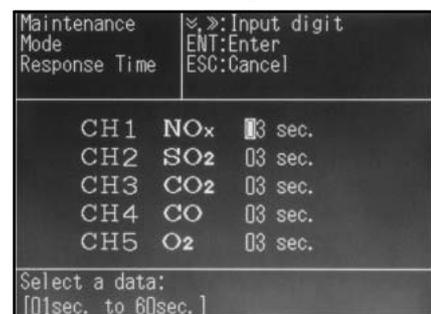

Setting complete

The setting has now been completed.

4.3.9 Minus display

The function turns minus reading into “0.”

Setting contents


- ON : Outputs minus reading. (Outputs minus values.)
 - OFF : Does not output minus reading. (Does not output minus values.)
- * The same applies to concentration value display.

Initial value


“OFF”

- (1) Move the cursor to <9. Minus display> using the  key, and press the  key.

The screen switches as shown at right.

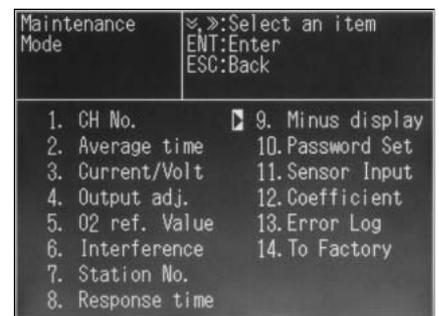


- (2) Press the  key again, and the cursor moves to the value to be entered.

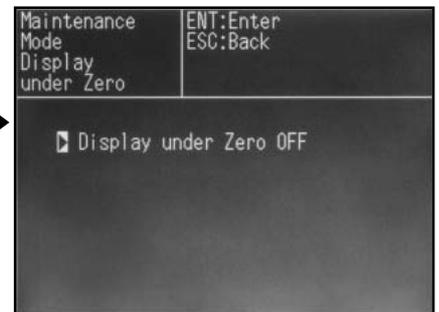

- (3) Change the setting using the  key, and press the  key.

The setting has now been completed.

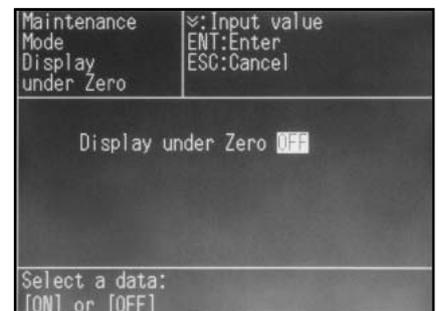

Setting complete

4.3.10 Password setting

The password for moving from <Parameter Mode> to <Maintenance Mode> can be set as follows.

Caution on setting

- Be sure to record and store your established password just in case you forget it.


Setting range

“0000 to 9999”

Initial value

“0000”

- (1) Move the cursor to <10. Password Set.> using the  key, and press the  key.
The screen switches as shown at right.

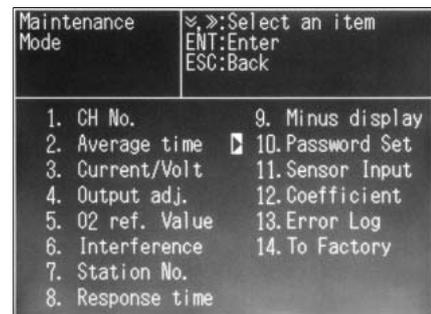

- (2) Press the  key again, and the cursor moves to the value to be entered.



- (3) Select a digit using the  key, and change the value using the  key.
Press the  key, and the data is registered and the previous screen appears again.



Setting complete

The setting has now been completed.

4.3.11 Sensor input

The A/D conversion values of sensor input signals can be displayed.

Description of the screen

- Sensor : Displays sensor components.
- Input value : Displays the values immediately after A/D conversion in count values.

Maintenance Sensor Input		MEAS: Pump ON/OFF ESC: Back
sensor	input	
NO _x	40029	
SO ₂	37803	
CO ₂	39790	
CO	41346	
O ₂	24951	
TEMP	17777	

Caution on operation

- This mode is for displaying input values. Entry by key operation cannot be made.

- (1) Move the cursor to <11. Sensor Input> using the  key, and press the  key.

The screen switches as shown at right.

Maintenance Mode	MEAS: Pump ON/OFF ESC: Back
1. CH No.	9. Minus display
2. Average time	10. Password Set
3. Current/Volt	11. Sensor Input
4. Output adj.	12. Coefficient
5. O ₂ ref. Value	13. Error Log
6. Interference	14. To Factory
7. Station No.	
8. Response time	



- (2) Press the  key, and the previous screen appears again.

Maintenance Sensor Input		MEAS: Pump ON/OFF ESC: Back
sensor	input	
NO _x	40029	
SO ₂	37803	
CO ₂	39790	
CO	41346	
O ₂	24951	
TEMP	17777	

4.3.12 Checking coefficient

Internal operation coefficient of “offset value” and “zero/span correction value” can be checked in this mode.

Caution on operation

- This mode is for checking the coefficient.
Entry by key operation is not allowed.

- (1) Move the cursor to <12. Coefficient> using the  key, and press the  key.

The screen switches as shown at right.

Maintenance Mode	⌘:Select an item ENT:Enter ESC:Back
1. CH No.	9. Minus display
2. Average time	10. Password Set
3. Current/Volt	11. Sensor Input
4. Output adj.	12. Coefficient
5. O2 ref. Value	13. Error Log
6. Interference	14. To Factory
7. Station No.	
8. Response time	



- (2) Move the cursor to the item to be checked using the  key, and press the  key, to enter the mode.

Maintenance Mode	⌘:Select an item ENT:Enter ESC:Back
Maintenance coefficient	
▶ Offset	
Calibration	



- (3) The channels (CH) on the <Coefficient> screen can be scrolled using the  key.

Maintenance Mode	Just watching	ESC:Back	
Maintenance coefficient	offset		
CH1	20076		
CH2	20076		
CH3	20118		
CH4	20106		
CH5	20455		

or

Maintenance Mode	Just watching	ESC:Back	
Calibration			
CH	RANGE	ZERO	SPAN
CH1	0-500ppm	01.0108	03.2374
NO _x	0-1000ppm	01.0108	03.2374
	0-2000ppm	01.0108	03.2374
CH2	0-500ppm	01.1392	02.1439
	0-1000ppm	01.1392	02.1439
SO ₂	0-2000ppm	01.1392	02.1439
	0-5vol%	00.9918	01.2456
CH3	0-10vol%	00.9918	01.2456
	0-20vol%	00.9918	01.2456
CH4	0-200ppm	00.9437	01.8773
	0-500ppm	00.9437	01.8773
CO	0-1000ppm	00.9437	01.8773



- (4) Press the  key to return to the previous screen.

Maintenance Mode	Just watching	ESC:Back	
Calibration			
CH	RANGE	ZERO	SPAN
CH2	0-500ppm	01.1392	02.1439
SO ₂	0-1000ppm	01.1392	02.1439
	0-2000ppm	01.1392	02.1439
CH3	0-5vol%	00.9918	01.2456
	0-10vol%	00.9918	01.2456
CO ₂	0-20vol%	00.9918	01.2456
	0-200ppm	00.9437	01.8773
CH4	0-500ppm	00.9437	01.8773
	0-1000ppm	00.9437	01.8773




4.3.13 Error log file

The error code history can be checked in this mode.

Description of the screen

- History: Displays error No.
- Date of occurrence:
Displays the date and time of occurrence of the error
- Component of occurrence:
Displays the channel where the error occurred.

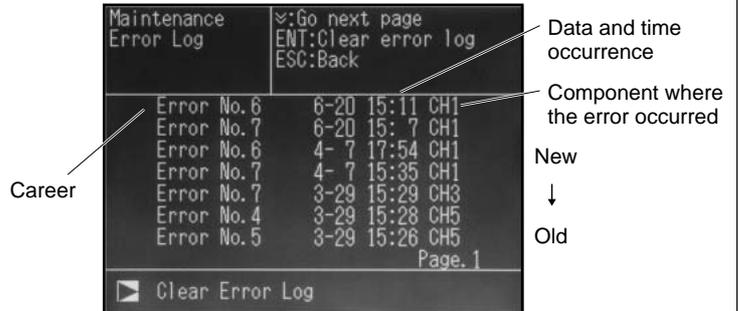


* Up to 14 error logs are stored as history. If more than 14 errors should occur, the logs are deleted from the oldest.

* There are two error log screens. Press the key to witch between Page1 and Page 2.

- (1) Move the cursor to <13. Error Log> using the key, and press the key.


The screen switches as shown at right.

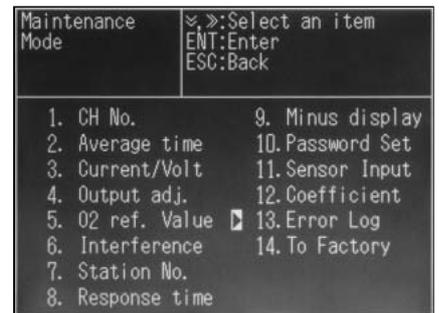

- (2) Press the key to carry out checking only, and the previous screen appears again.



- (3) Press the key to clear the error log, and the cursor moves to Clear Error Log

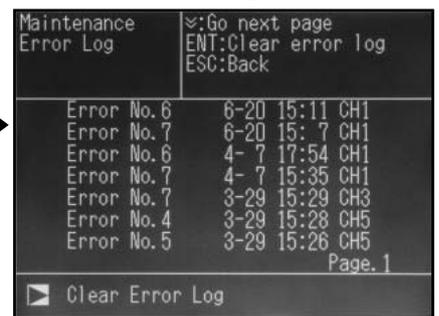

- (4) Press the key again, and the error display is cleared and the previous screen appears again.



The work has now been completed.



4.3.14 Factory mode


You can enter the factory mode, but you need not carry out adjustment or setting.

Description of the screen

- Changing the data in the factory mode may cause malfunction of the instrument. Do not change the data in factory mode by yourself.
- If setting change is required, contact our service representative in charge.
- See “Service Manual” for details of the factory mode.

5. INSPECTION AND MAINTENANCE

5.1 Daily inspection (Be sure to perform daily.)

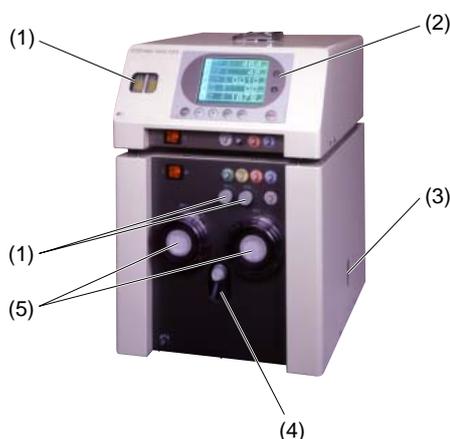

	Name of unit	Inspection	Judgment criteria	Judgment criteria
(1)	Flow checker Needle valve	Flow rate check	Check that the flow rate falls within the specified range. If not: 1) Adjust the needle valve (NV1, 2). 2) Replace membrane filter. See “5.3.4 Replacing filter paper of membrane filter.” 3) Check air-tightness and repair as required. See “3.2.4 Adjusting flow rate.” 4) Replace the diaphragm of the pump, referring to section 5.3.5 (Replacing the diaphragm).	The ball is kept at the center of the yellow zone. (0.5L/min±0.1L/min)
(2)	Display unit	Reading check	When reading is lower than normal: 1) Check air-tightness and repair as required. See “3.2.4 Adjusting flow rate.” 2) Clean within the sample cell of the analyzer unit. See “5.4.6 Cleaning measurement cell.”	The reading is normal.
(3)	Drain check window	Drain volume check	1) Visually check the drain volume. Discharge the drain within the pot. See “4.1.5 Draining.”	Drain is not kept within the pot (Max. 200cc).
(4)	Zero pot window	Clear water check	1) Check the water volume. If the volume is insufficient, add water. See “2.4 Feeding clear water.”	The water level is 1cm lower than the water feed port (about 70cc).
(5)	Membrane filter	Filter contamination check	Visually check the filter for contamination. Replace the filter paper of the filter as required. See “5.3.4 Replacing filter paper of membrane filter.”	No contamination is found.

5.2 Periodic inspection

In addition to daily inspections, perform periodic inspections.


See “5.3 Sampling device maintenance procedure” for detachment/attachment of the side and top panels for inspection.

Item of maintenance and inspection	Maintenance and inspection procedure	Interval
Manual zero/span calibration	Perform zero/span calibration. See “3.2 Zero/span calibration.”	Once/ 5 days
Operation check of fan	1) Suction port: Fan of the dehumidifier 2) Heat exhaust port: Exhaust fan within the instrument Visually check that both of the above are operating normally.	Once/ 6 months
Check of temperature controller of NO ₂ /NO converter	The temperature falls within +220°C±5°C range.	Once/ 6 months
Check of temperature controller of dehumidifier	The temperature falls within +3°C±2°C range.	Once/ 6 months
Check of mist filter	1) When the flow rate does not increase to the specified value 2) When contamination is severe 3) Periodic replacement Replace the element and the O-ring. See “5.3.3 Replacing mist filter element.”	Once/year
Check of gas aspirator	1) When the flow rate does not increase to the specified value 2) Periodic replacement Replace the diaphragm. See “5.3.5 Replacing diaphragm.”	Once/year
Replacement of NO ₂ /No converter catalyst	Periodic replacement See “5.3.7 (1) How to replace the catalyst.”	Once/ 6 months
Check of effect of moisture interference (in the case of NO _x analyzer and SO ₂ analyzer)	1) When reading error occurs between dry gas and wet gas 2) When dehumidifier is replaced 3) Periodic adjustment See “5.4.3 Adjusting moisture interference.”	Once/year

5.3 Sampling device maintenance procedure

5.3.1 Internal composition of sampling unit

The following photo shows the layout of each part of the sampling unit.

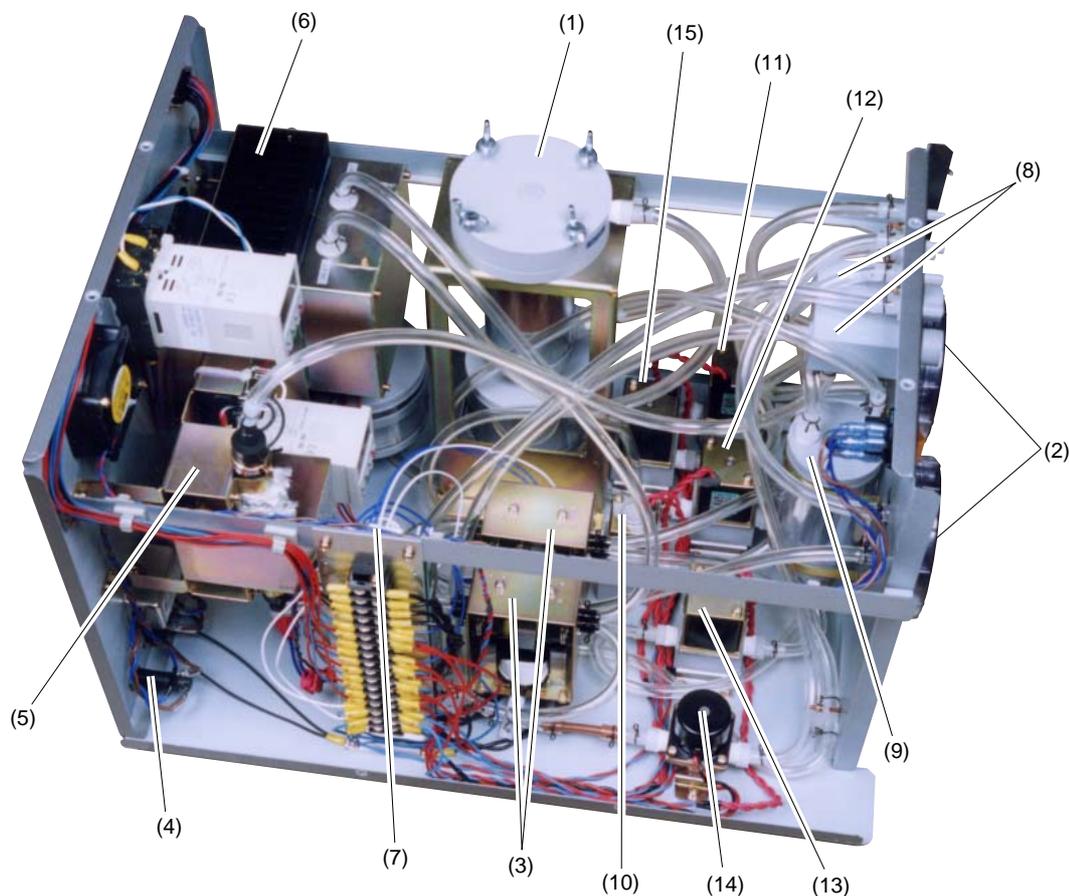


	See	Name of unit	Inspection/replacement	Interval
(1)	5.3.3	Mist filter	Replace filter element.	Once/year
(2)	5.3.4	Membrane filter (MF1, 2)	Replace filter paper.	Teflon : Once/2 months Glass fiber: Once/month
(3)	5.3.5	Gas aspirator	Replace valve and diaphragm.	Once/year
(4)	5.3.6	Power fuse	Replace fuse.	-
(5)	5.3.7	NO ₂ /NO converter	Replace catalyst.	Once/6 months
(6)	-	Dehumidifier (electronic cooler)	-	-
(7)	-	Switching power supply	-	-
(8)	-	Needle valve (NV1, 2)	-	-
(9)	-	Zero gas pot	-	-
(10)	-	Solenoid valve (SV1) for sample gas switching	-	-
(11)	-	(SV2)	-	-
(12)	-	Solenoid valve for drain (SV3)	-	-
(13)	-	(SV4)	-	-
(14)	-	Solenoid valve for span calibration (SV5)	-	-
(15)	-	Solenoid valve for zero calibration (SV6)	-	-

! DANGER


- Be sure to wear heat-resistant gloves when working with the sampling unit. Handling it with bare hands or wearing cotton work gloves may result in burns.
- Be careful with eruption of flue gas when the internal pressure of the flue is at positive pressure. Otherwise injury or burns may result.
- Be sure to turn off the power before performing work. Otherwise injury or failure may result.

5.3.2 Removing top panel

- (1) Remove the screws (M4 × 6 pcs.) on the side panel.
- (2) Lift the panel off the unit.
- (3) Remove the panel on the opposite side in the same manner.

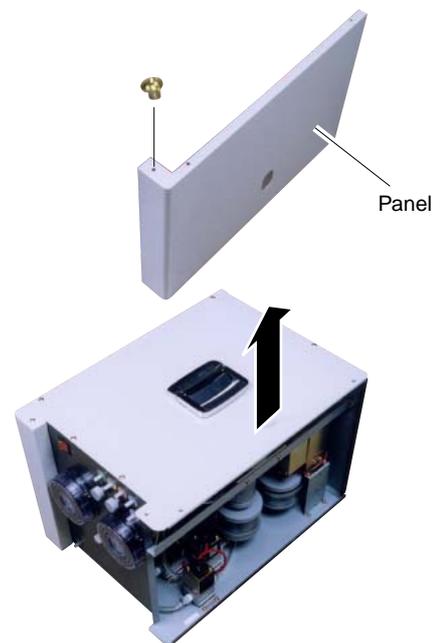

- (4) Remove the screws (M4 × 4 pcs.) on the top panel.
- (5) Lift the top panel off the unit.
- (6) Reverse the procedure in (1) to (5) to assemble the unit.

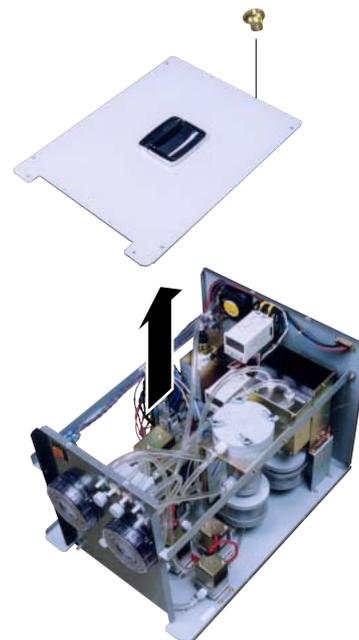


5.3.3 Replacing mist filter element

Replacement parts order No.: TK7H8043P1 (Filter element)

8553765 (Filter O-ring)

- (1) Loosen the butterfly bolts (4 pcs.), and remove the head out of the container.
- (2) Then loosen the fastening nut, and remove the contaminated mist filter.
- (3) Place a new mist filter and O-ring in position and assemble the unit by reversing the above procedure.

Replacement of mist filter element has now been completed.

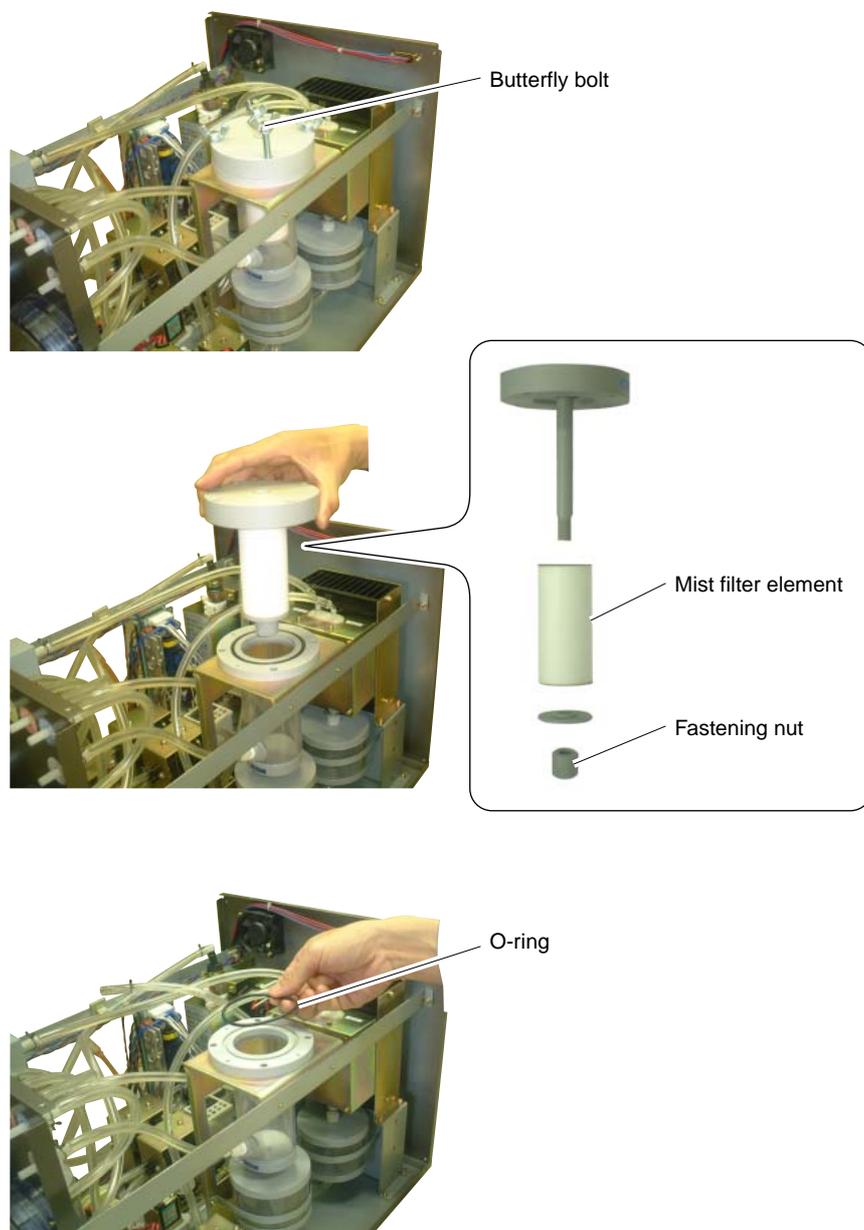


* Mist filter: Filter diameter: About 5 μ m

5.3.4 Replacing filter paper of membrane filter



- Replacement parts order No.: TK741833P3 (Filter paper: When provided with SO₂ analyzer)
(Teflon)
- TK700735P2 (Filter paper: When not provided with SO₂ analyzer)
(Glass fiber)
- 8553765 (Large O-ring)
- TK733572P1 (Small O-ring)

(1) Replacing filter paper



- 1) Turn the lid of the membrane filter counterclockwise.
- 2) Remove the small O-ring, and then remove the contaminated filter paper. Check at this time that no contaminated filter paper or dust is attached.
- 3) Place a new filter paper (glass fiber) textured face up, and press it with the small O-ring. (Use a fixing bracket for the Teflon filter paper.)

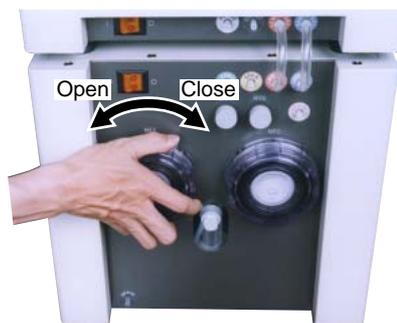

When provided with SO₂ analyzer (Teflon)

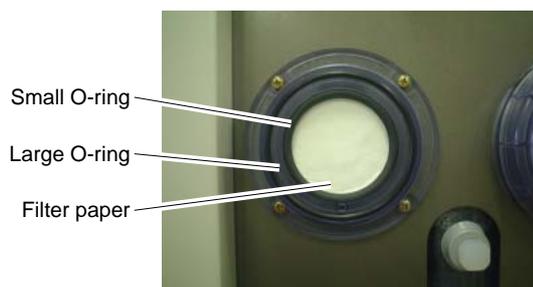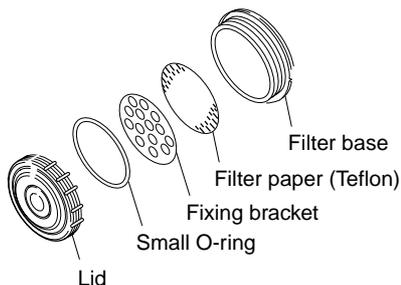


When not provided with SO₂ analyzer (Glass fiber)

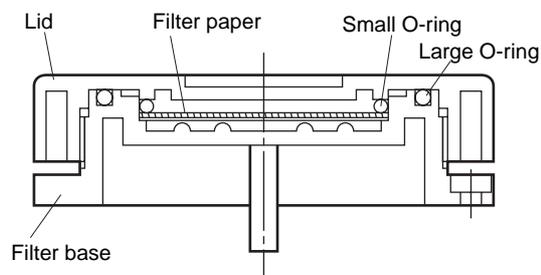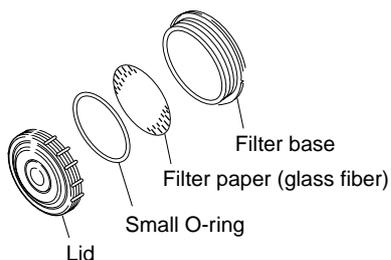

- (4) Turn the filter lid clockwise to fasten it securely.

Replacement of filter paper has now been completed.

Note: If the lid cannot be removed easily, apply vacuum grease or silicon grease thinly to the large O-ring and the screws.

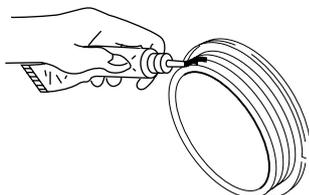

Caution on replacement

- The filter paper materials vary depending on whether SO₂ analyzer is provided or not. Select filter paper of proper material.
- The service life of large and small O-rings is 12 months. Replace them periodically.


(2) Cleaning membrane filter

Wipe the dust off the filter with clean cloth soaked in water or washing detergent first. Then wipe it fully with dry cloth. When removing dust within the container, be careful not to allow dust to enter the gas outlet.


5.3.5 Replacing diaphragm

Replacement parts order No.: TK713248P1


- (1) The gas aspirator is fixed on the baseboard with nuts (M3 × 4 pcs.)
Remove the nuts and then take the gas aspirator out of the main unit.
- (2) Remove the hose band, and then take the pipe out of the gas port.

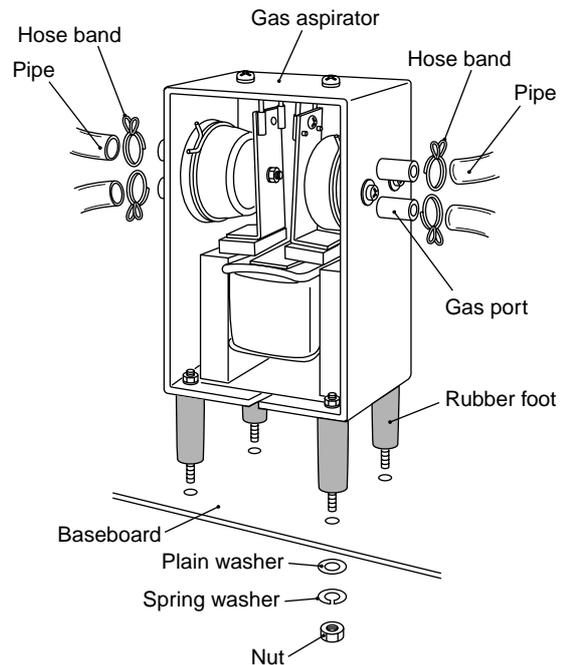

- (3) Remove the screws located on top of the gas aspirator (M4 × 2 pcs.) and those on the side provided with the gas port (M3 × 2 pcs.), and then remove the diaphragm unit.

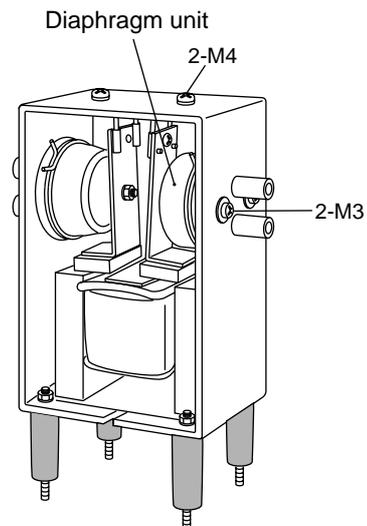

- (4) The diaphragm unit and the magnet are fastened with nuts. Remove the nuts, and replace the diaphragm with a new one.
- (5) Reverse the procedure in (1) to (4) to assemble the unit.

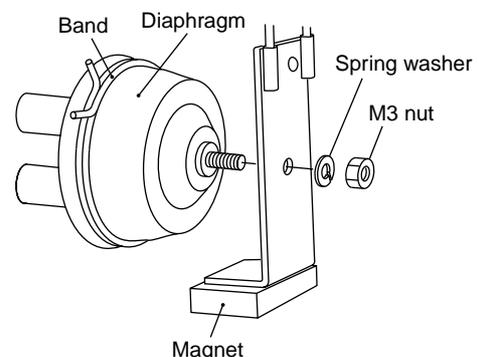

Diaphragm replacement work has now been completed.

Caution on replacement

- Be sure to use hose band for connection of the pipe to assure sufficient air-tightness.


5.3.6 Replacing power fuse

Caution on replacement


- Remove the power cable before starting the work.
- Find the cause of fuse blowing before starting the work.

The fuse holder is installed on the rear face of the sampling unit.


- (1) Set the power switch on the front face of the sampling unit to OFF.
- (2) Remove the power cable from the socket on the rear face.

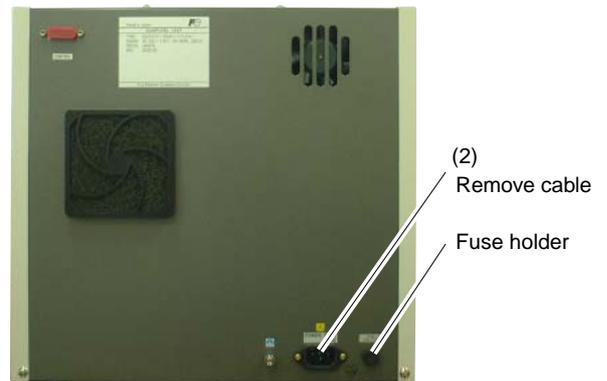

- (3) Turn the cap of the fuse holder counterclockwise, and then pull it out toward you.

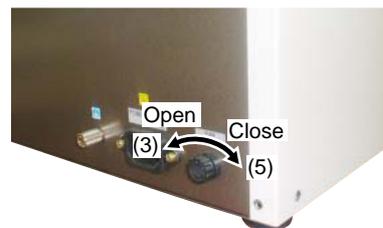


- (4) Remove the fuse, and replace it with a new one (250V/2A AC, slow-blow type)
- (5) Insert the cap into the fuse holder, and turn it clockwise.
- (6) Insert the power cable, and turn on the power switch on the front face.
Check that the unit operates normally.

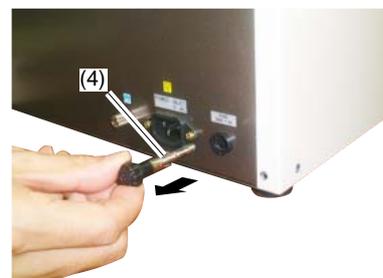

Replacement work has now been completed.

5.3.7 Maintenance procedure for NO₂ / NO converter (When provided with NO_x meter)

Replacement parts order No.: TK726891C1 (Catalyst)
TK726890C1 (Glass wool)
TK7G6890P1 (Joint)

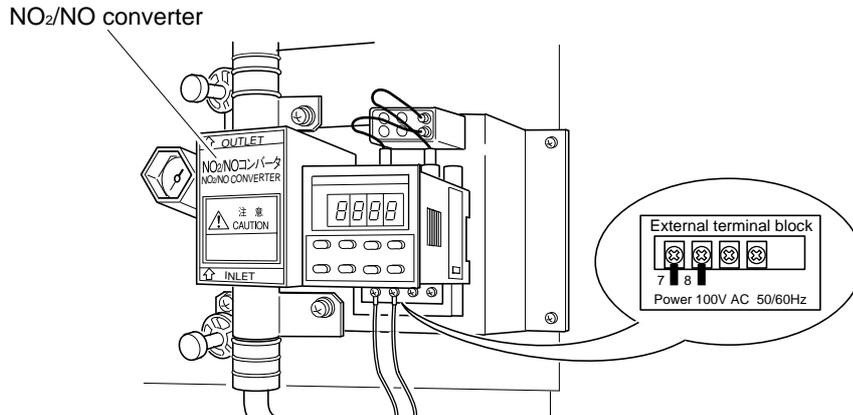


(1) How to replace the catalyst

⚠ CAUTION

- To reduce the risk of personal injury from hot converter, take care when replacing catalyst to avoid touching the converter unit.

- 1) Turn “OFF” the power to the converter.
- 2) Prepare a catalyst receiver underneath the converter.
- 3) After half an hour, remove (a), (b) and (c), and pull (e) downward. Take care not to burn your hands. Using a blade-edged driver, remove (a) while moving gradually from the clearance. If it does not fall, use a long bar to remove components from the pipe. Remove (e), and (c) and (d) will fall simultaneously.
- 4) Attach (c) to the tip of (e) and insert it together with (a) from under the ceramic pipe. Inject one pack of new catalyst from the top. Install (b) and (c) at top of the pipe.
- 5) Connect the tubing, turn “ON” the power, and assure that the temperature becomes stable at 220°C.

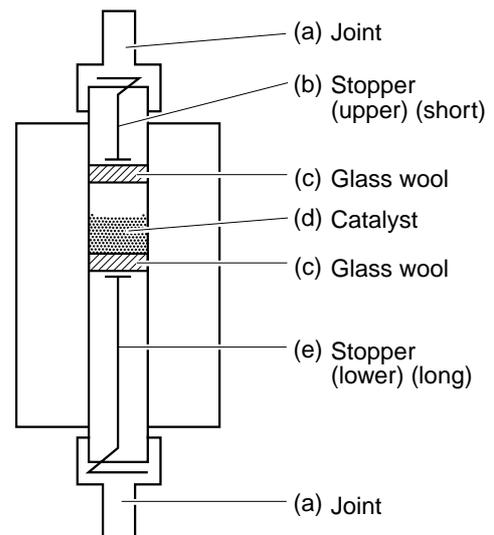


Replacement work has now been completed.

5.3.8 Cleaning filter at suction port

Clean the filter at the air suction port of the dehumidifier (electronic cooler) for cooling as follows.
Visually check the filter for clogging, and clean it as required.

- (1) Set the power switch to OFF.
- (2) The retainer is fastened with nails. Pull the nails toward outside, and remove the retainer.
- (3) Remove dust on the media.
- (4) Reverse the above procedure to assemble the filter.

Replacement work has now been completed.

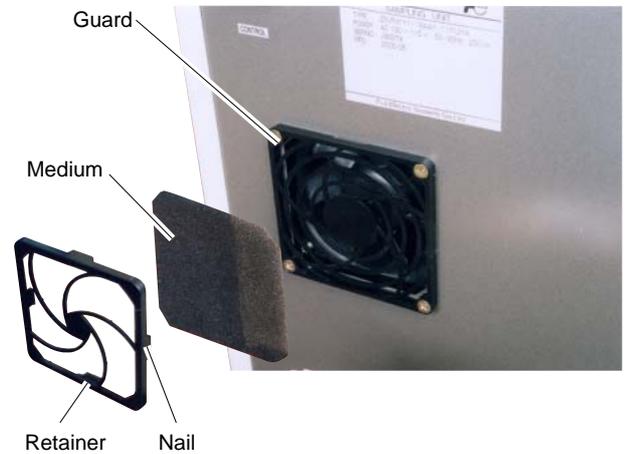


Caution on cleaning

- Avoid having large impact on the retainer or the media.
Otherwise they may be damaged.

5.3.9 How to mount pressure regulator for standard gas cylinder

- (1) Before mounting a pressure regulator to the gas cylinder, clean the gas cylinder adapter. Entry of dust into the pressure regulator may result in gas leaks.
- (2) If packing is not inserted in the mounting nut for the cylinder or it is damaged, replace it with supplied spare one.
- (3) Use a spanner of a proper size, fasten the cylinder mounting nut to the gas cylinder.
- (4) Loosen the pressure controls and then tighten the output handle.
- (5) Open a valve of the gas cylinder, and the pressure gauge on the high pressure side indicates a pressure of the gas cylinder by flowing gas into the pressure regulator.
- (6) Turn the pressure controls clockwise to increase the secondary pressure; adjust the pressure controls so that a pressure gauge on the low pressure side reads 30 kPa.
- (7) Open the outlet controls to release gas.

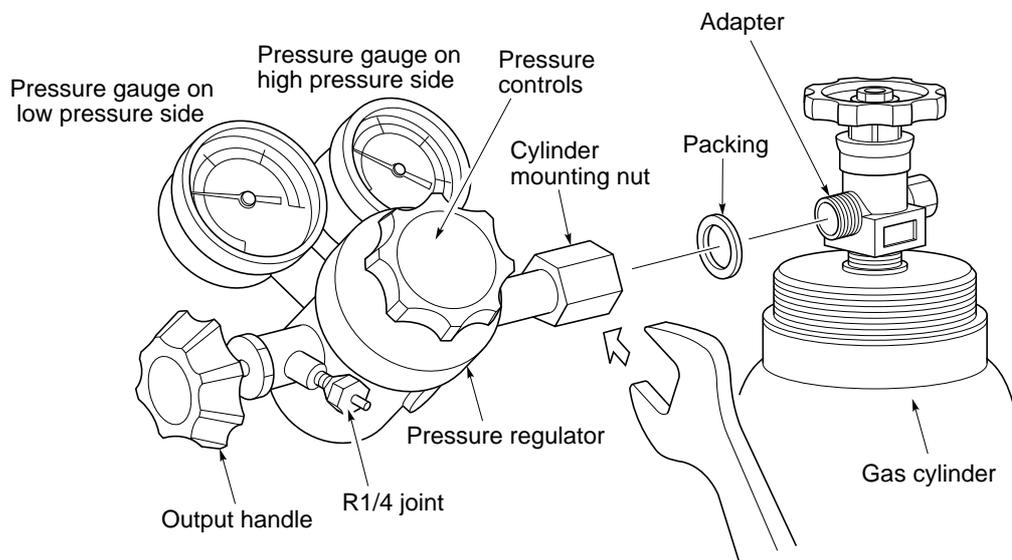

5.4 Maintaining analyzer unit

5.4.1 Internal composition of analyzer unit

See separate “Service Manual”^o for internal composition and replacement/adjustment of repair parts.

5.4.2 Replacing power fuse

Caution on replacement


- Be sure to remove the power cable before starting the work.
- Be sure to find the cause of fuse blowing before starting the work.

The fuse holder is located on the rear face of the analyzer unit.

- (1) Set the power switch on the front face of the analyzer unit to OFF.
- (2) Remove the power cable from the socket on the rear face.



- (3) Turn the cap of the fuse holder counterclockwise, and pull it toward you.

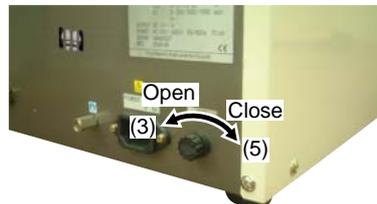

- (4) Take out the fuse, and replace it with a new one (250V/2A AC, slow-blow type)
- (5) Insert the cap into the fuse holder, and turn it clockwise.
- (6) Insert the power cable, and turn on the power switch on the front face.
Check that the unit operates normally.



The work has now been completed.

5.4.3 Adjusting moisture interference (NO_x and SO₂ meters)

Since the compact type gas analyzer performs measurements, using specific wave range of infrared ray, moisture wavelength over the entire wave range interferes with the measurement, thus causing reading error.

To reduce the effect, corrective operation is required.

The moisture interference adjustment function is added to NO_x and SO₂ meters, whose wave ranges overlap in large area.

(1) Adjusting moisture interference (Auto adjustment ALL mode)

- 1) Select <Maintenance Mode> → <6. Interference>, referring to “4.3.6.”

To clear moisture correction value already entered,

- 2) Move the cursor to <RESET> using the  key.
- 3) Press the  key, and the cursor moves to <RESET>.
- 4) Press the  key again, and the moisture correction value is changed to “0.”

To adjust the new correction value, perform reference zero/span calibration as follows.

- 5) Directly feed dry N₂ or dry Air gas into the sample gas inlet of the analyzer unit at the rate of 0.5 L/min.

(Adjust the flow rate so that the flow checker ball comes to the center.)


- 6) Select <Wet Air/Dry or Wet N₂/Dry> in <Zero Cal.> mode, and then select <ON> for NO_x and SO₂ only.

Caution on operation

- Directly feed dry zero gas and dry span gas to the analyzer unit to perform reference zero/span calibration.
- Wet Air or Wet N₂ is displayed for gas selection in zero calibration mode. Continue performing calibration. Select Air or N₂ according to the composition of gas to be used.

- 7) Perform zero calibration
- 8) Perform span calibration of NO_x and SO₂ analyzers.
Then, to feed moisture interference gas (H₂O, saturated at 2°C)
- 9) Connect the pipe directly coupled with the analyzer unit to the sampling unit.
- 10) Return to <Maintenance Mode> → <6. Interference>, and then select <All>.

- 11) Press the  key to feed H₂O gas.
- 12) When the interference reading stabilizes in about 3 minutes, press the  key twice.
- 13) The reading becomes “0” and “correction value” is input.
- 14) Press the  key to stop the pump.

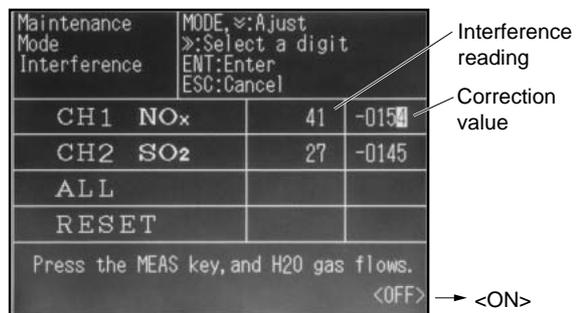

Moisture interference adjustment has now been completed.

(2) Adjusting moisture interference (Manual adjustment)

Follow the procedure shown below to manually adjust the interference.

- 1) Directly feed dry N₂ or dry Air gas to the sample gas inlet of the analyzer unit at the rate of 0.5 L/min.
(Adjust the gas flow rate so that the flow checker ball comes to the center.)
- 2) Select <Wet Air/Dry or Wet N₂/Dry> in <Zero Cal.> mode, and select <ON> for NO_x and SO₂ only.

Caution on operation



- Directly feed dry zero gas and dry span gas to the analyzer unit to perform reference zero/span calibration.
- Wet Air or Wet N₂ is displayed for gas selection in zero calibration mode. Continue performing calibration. Select Air or N₂ according to the composition of gas to be used.

- 3) Perform zero calibration.
- 4) Perform span calibration of NO_x and SO₂ analyzers.
Then, to feed moisture interference gas (H₂O, saturated at 2°C)
- 5) Connect the pipe directly coupled with the analyzer unit to the sampling unit.
- 6) Enter <Maintenance Mode> → <6. Interference> mode.

- 7) Move the cursor to <CH1 NO_x> using the  key, and press the  key.

The cursor moves to the correction value.

- 8) Press the  key to feed H₂O gas.
- 9) When the reading stabilizes in about 3 minutes, adjust the value to "0" using the  (UP) key and the  (DOWN) key.
- 10) Press the  key to memorize the correction value.
- 11) Press the  key to stop the pump.

Maintenance Mode	MODE,  : Adjust		
Interference	>: Select a digit		
	ENT: Enter		
	ESC: Cancel		
CH1 NO _x	41	-015	
CH2 SO ₂	27	-0145	
ALL			
RESET			
Press the MEAS key, and H2O gas flows.			


Moisture interference adjustment has now been completed.

5.4.4 Replacing galvanic O₂ sensor (when provided with the sensor)


The service life of this sensor is about 18 months from the date of delivery.
We recommend periodic replacement of the sensor.

Replacement parts order No.: TK7M3502C1


- (1) Remove the screws (M4 × 7 pcs.) on the rear and the side faces of the main unit.
- (2) Pull out the cover toward the rear.

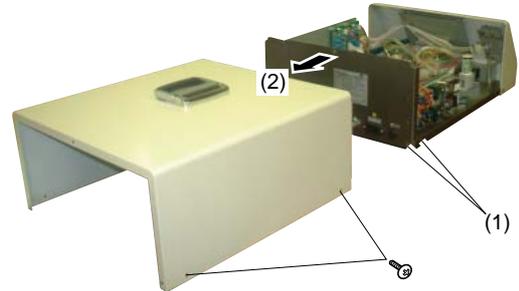

- (3) Remove the O₂ sensor connector.
(Control printed board CN9)
- (4) You can see the O₂ sensor fastened to the mounting rack at the left of the front face.

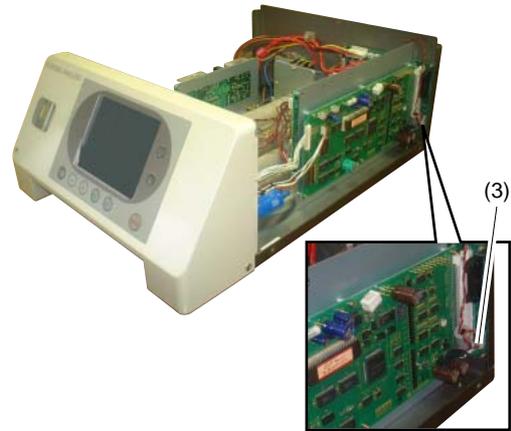

- (5) Turn the O₂ sensor counterclockwise to remove it.

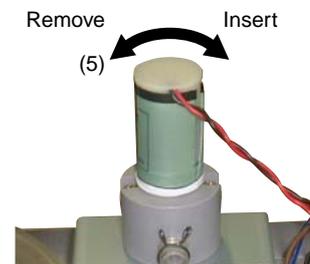


- (6) Wrap seal tape around the screw of the replacement sensor to assure air-tightness.
- (7) Reverse the procedure from (1) to (5) to assemble the sensor.
- (8) Perform zero/span calibration.



Replacement has now been completed.

Caution on handling

- Avoid having impact on the sensor.
Otherwise damage may result.

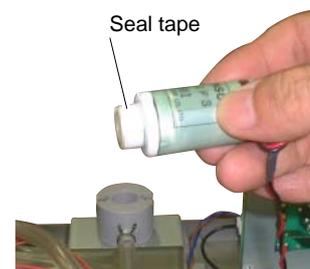


5.4.5 Replacing filter within the analyzer unit

Periodic replacement of this filter is not required.


Replace the filter if drain flows into the filter or clogging by dust is found.

Replacement parts order No.: TK7L8925P1

- (1) Remove the cover by referring to 5.4.4.
- (2) Remove the filter attached to sample gas inlets 1 and 2 (case color: blue).

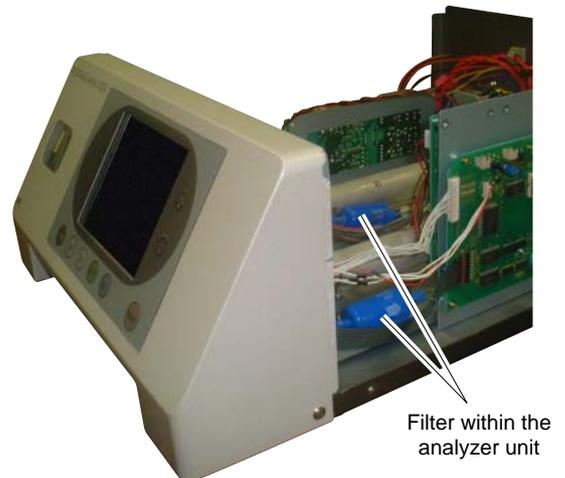

- (3) Mount the filter in proper orientation as shown by the photo at right.
- (4) Be sure to use a hose band to connect the tube.

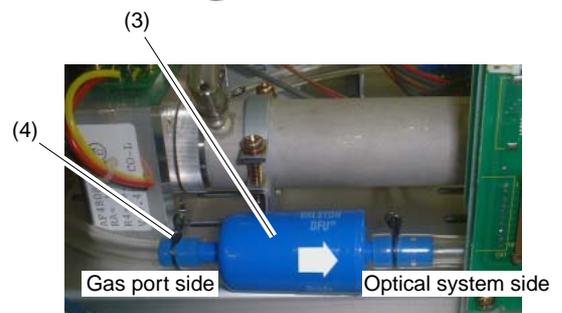

Replacement has now been completed.

Caution on replacement

- The filter has IN/OUT orientation. Be careful not to mount it in wrong orientation.
- Use hose band for the connection of the tube to assure sufficient air-tightness.

5.4.6 Cleaning measurement cell

Entry of dust or water drops into the measurement cell may cause internal contamination, which may result in drifting.

Be sure to clean the measurement cell if contamination is found.

At the same time, check the sampling devices, the filter in particular, to prevent the entry of dust or mist into the cell.

Two types of cells are available for measurement, namely, the block cell (length: 4mm, 8mm, 16mm, 32mm) and the pipe cell (length: 64mm, 125mm, 250mm).

There may be a case where both cells of the two-component analyzer may be included in the optical system. In this case, remove the pipe cell, and then the block cell. (See Fig. 5-1.)

(1) Cleaning the pipe cell (See Fig. 5-1.)

- 1) Stop feeding the gas for measurement. If toxic gas is contained, purge the measurement cell fully with zero gas.
- 2) Turn off the power switch.
- 3) Remove the pipe connected to the measurement cell.
- 4) Loosen the screw (No.1 in Fig. 5-1) that fastens the infrared ray light source unit (No.5 in Fig. 5-1) to create a gap between the unit and the pipe cell (No.12 in Fig. 5-1).
- 5) Remove the screw (No.7 in Fig. 5-1) of the cell presser (No.11 in Fig. 5-1) fastening the pipe cell.
- 6) Remove the cell, and then remove the windows on both sides (No.14 in Fig. 5-1). The screw of the window is right-handed.

Note: The reflection board within the cell is attached to the cell and cannot be removed.

- 7) When cleaning the internal surface of the cell and the infrared ray penetration window, remove large dust using a soft brush first, and then carefully wipe them with soft cloth.
Never use hard cloth.

Caution

The window can be broken easily.
Handle it with care, and be careful not to wipe it strongly.

- 8) If severe contamination is found on the window or within the cell, paste absolute ethanol on soft cloth, and wipe off the contamination with it.
- 9) If the window is found to have corroded, attach chrome oxide powder to soft cloth, and wipe the window with it if the corrosion is not so severe. If corrosion has progressed significantly, replace the window.
- 10) Reverse the procedure in 3) to 6) to assemble the cell. Allow a gap of 0.5mm between the infrared ray light source unit and the cell, and the cell and the detector when assembling the unit.

No.	Name
1	Screw (for fastening light source unit)
2	Screw (for fastening detector)
3	Screw (for fastening base plate)
4	Base plate
5	Infrared ray light source unit
6	Screw (for fastening support)
7	Screw (for fastening cell presser)
8	Connector for chopper motor
(9)	Filter
10	Support
11	Cell presser
12	Pipe cell
13	O-ring
14	Window
15	Detector
16	Printed board for bridge
17	Bridge resistor
(18)	Detector: For 2-component analyzer, Mounting

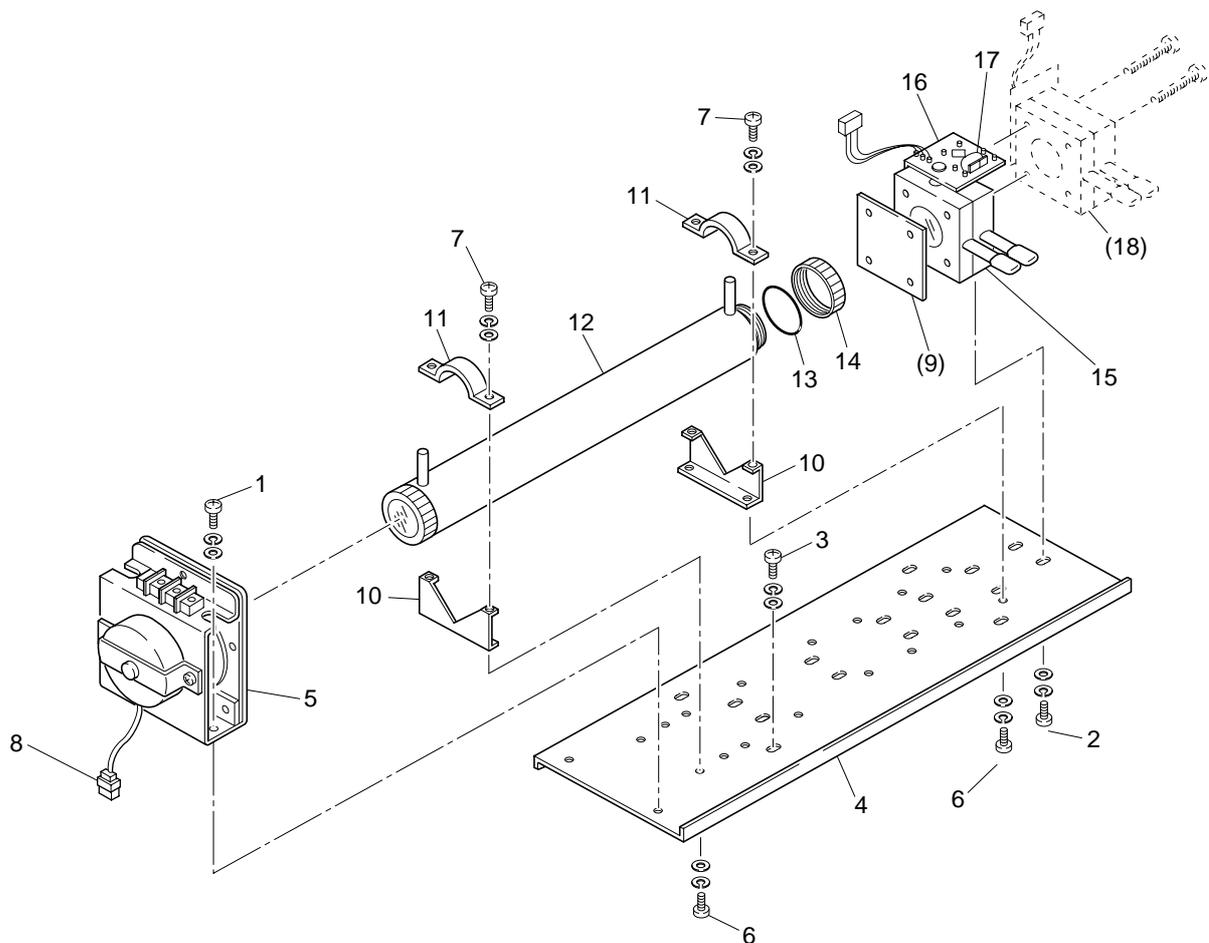


Fig. 5-1 Composition of measurement unit (pipe cell)

(2) Cleaning the block cell (See Fig. 5-2)

- 1) Stop feeding the gas for measurement. If toxic gas is contained, purge the measurement cell fully with zero gas.
- 2) Turn off the power switch.
- 3) Remove the pipe connected to the measurement cell.
- 4) Remove the connector of the detector from the printed board.

In the case of 2-component analyzer, also remove the connector of the detector for the second component (No.13 of Fig. 5-2) from the printed board. Loosen the two screws fastening the detector for the second component (No.14 in Fig. 5-2), and remove the detector for the second component.

- 5) Remove the two screws (No.10 in Fig. 5-2) fastening the detector for the first component to the infrared ray light source unit. The cell can be removed together with the detector.
- 6) Loosen the two screws fastening the cell (No.6 in Fig. 5-2), and remove the cell. One of the windows of the block cell is sandwiched between the detector and the block cell, but is not fastened. Remove the cell with the detector facing up, being careful not to drop it.
- 7) When cleaning the internal surface of the cell and the infrared ray penetration window, remove large dust using a soft brush first, and then carefully wipe them with soft cloth.
Never use hard cloth.

Caution

The window can be broken easily.
Handle it with care, and be careful not to wipe it strongly.

- 8) If severe contamination is found on the window or within the cell, paste absolute ethanol on soft cloth, and wipe off the contamination with it.
- 9) If the window is found to have corroded, attach chrome oxide powder to soft cloth, and wipe the window with it if the corrosion is not so severe. If corrosion has progressed significantly, replace the window.
- 10) Reverse the procedure in 3) to 6) to assemble the cell.

Caution

Place the O-ring between the window holder and the cell. Be careful not to place it in a wrong place.

In the case of 2-component analyzer, mount the detector for the second component lastly, being careful not to create a gap between the detector and that for the first component.

Insert the output cord connectors of the detector into the printed board, paying attention not to reverse the positions for the first and the second components. Insert the connector for the first component to CN11, and that for the second component to CN1.

No.	Name
1	Screw (for fastening light source unit)
(2)	Filter
3	Screw (for fastening base board)
4	Base board
5	Infrared ray light source unit
6	Screw (for fastening block cell)
7	Block cell
8	Window
9	O-ring
10	Screw (for fastening detector)
11	Connector for chopper motor
12	Detector
(13)	Detector: For 2-component analyzer, Mounting
(14)	Screw: For mounting 2-component detector

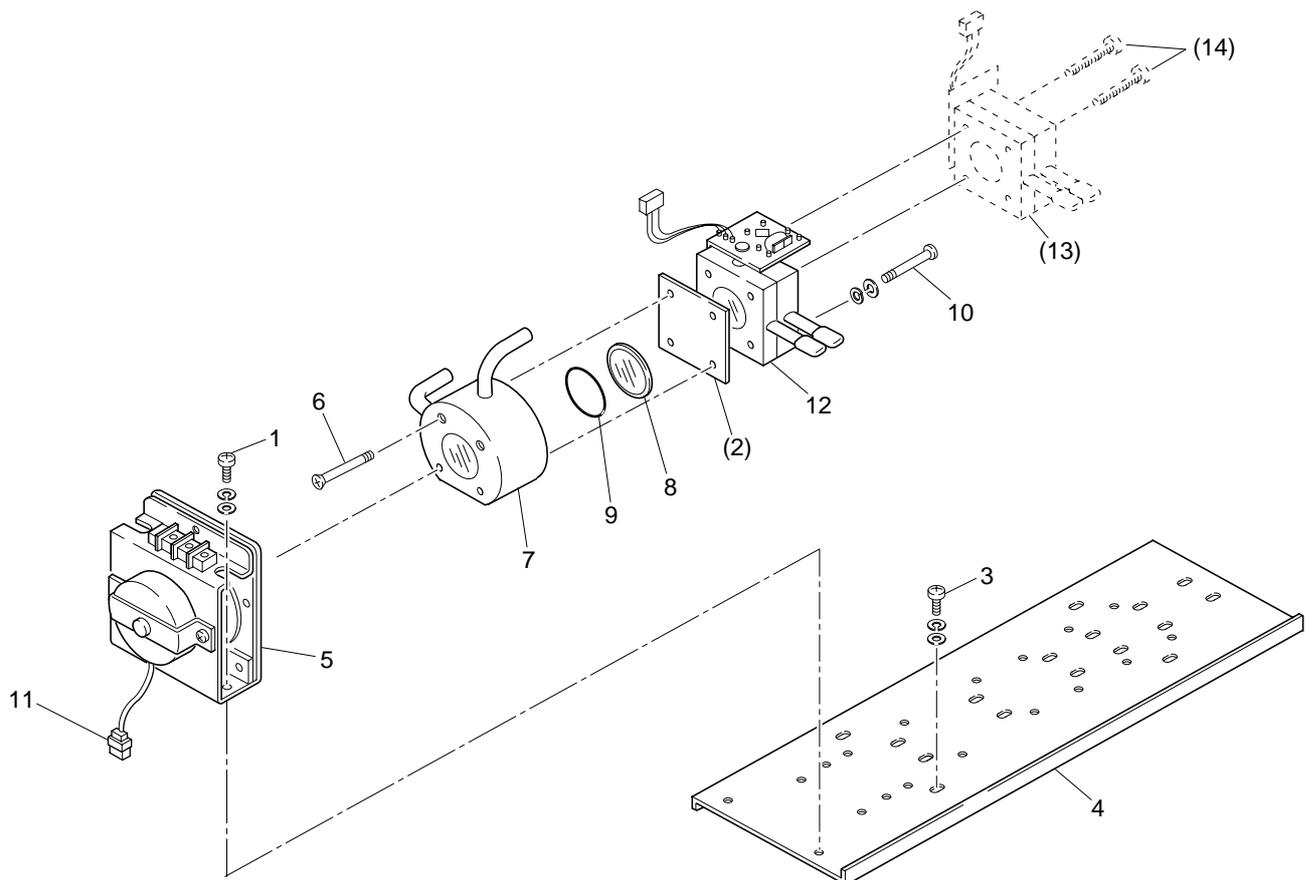


Fig. 5-2 Composition of measurement unit (block cell)

5.5 Airtight test


Perform an airtight test following the procedure shown below.

Set the power switch to OFF, and perform airtight test for the analyzer unit and the sampling unit separately.

5.5.1 Airtight test of analyzer unit

- (1) Close the exhaust gas port (OUTLET).
- (2) Connect the sample gas inlet 1 and sample gas inlet 2 with a T tube.
- (3) Connect standard gas cylinder (N_2 or Air cylinder) provided with pressure controller to the inlet of the T tube.
- (4) Open the valve for the standard gas, and adjust the pressure on the low-pressure side to 30kPa using the handle for pressure regulation of the pressure regulator.
- (5) Fully open the handle on the outlet side, close the master valve of the standard gas cylinder, and open the handle for pressure regulation of the pressure regulator.
- (6) Maintain the above state for one minute and check that no change is found in the reading of the pressure gauge on the low-pressure side of the pressure regulator.
- (7) Airtight test of the analyzer unit has now been completed.

If leak is found, apply soap water in small quantity to each connecting section within the case to locate the position of the leak, and take measures accordingly.

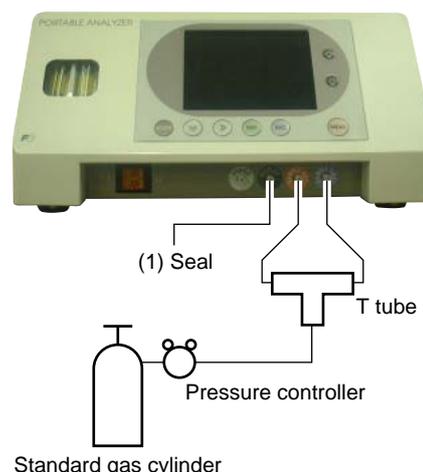


Caution on performing the test

- Do not feed the standard gas at high pressure (100kPa or higher). Otherwise the optical system may be damaged.


5.5.2 Airtight test of sampling unit

- (1) Connect the sample gas inlet 1 and sample gas inlet 2 with a T tube.
- (2) Connect standard gas cylinder (N₂ or Air cylinder) provided with pressure controller to the inlet of the T tube.
- (3) Open the valve of the standard gas, and adjust the pressure on the low-pressure side to 20kPa using the handle for pressure regulation of the pressure regulator.
- (4) Fully open the handle on the outlet side, close the master valve of the standard gas cylinder, and open the handle for pressure regulation of the pressure regulator.
- (5) Maintain the above state for one minute and check that no change is found in the reading of the pressure gauge on the low-pressure side of the pressure regulator.

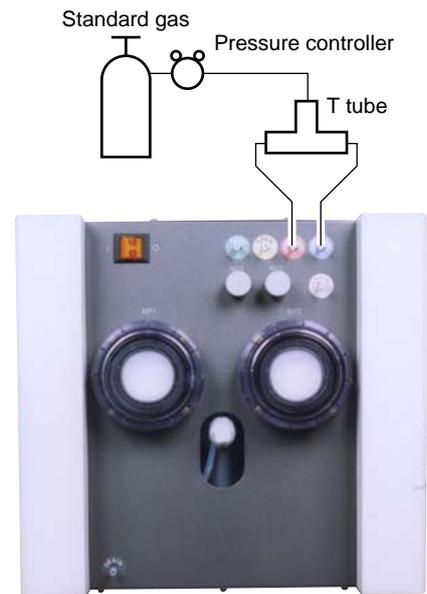

- (6) Then connect standard gas (N₂ or Air cylinder) to the sample gas inlet.
- (7) Perform the test following the procedures in (3) to (5) above.
- (8) Airtight test of the sampling unit has now been completed.

If leak is found, apply soap water in small quantity to each connecting section within the case to locate the position of the leak, and take measures accordingly.

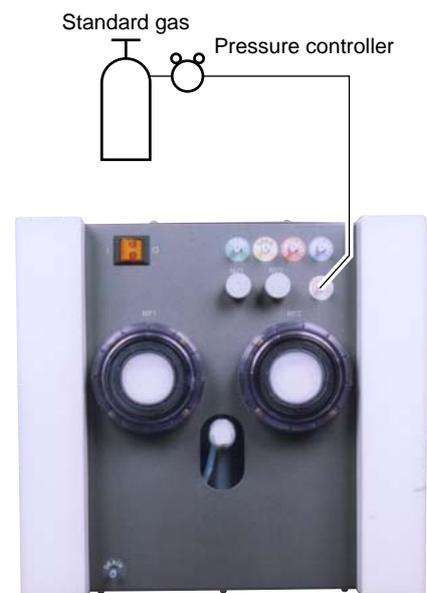

Caution on performing the test

- Do not feed the standard gas at high pressure (30kPa or higher). Otherwise the devices may be damaged.

6. SPARE PARTS

CAUTION

- Do not use replacement parts other than recommended ones. Otherwise, it could result in accident or damage to the instrument.
- Useless replacement parts for maintenance should be disposed of as non-combustible matter.

6.1 Spare parts for 1-year measurement

(1) Designation of code symbols of spare parts










1	2	3	4	5	6	7	8	Description	
Z	B	N	1	S	V		1	(NO _x meter)	(SO ₂ meter)
							1	Without	Without
							2	With	Without
							3	Without	With
							4	With	With

(2) List of spare parts for one year

Note: The replacement cycle varies depending on the conditions of the measured gas.

Specify the type or the parts No. listed in the table shown below when ordering the parts.

Specify item (1) of the code symbols, ZBN1SV *1, when ordering the spare parts in batch.

	Name	Type or parts No.	Q'ty	Application/ replacement cycle	Note	Simplified diagram
1	Filter paper of membrane filter	TK741833P3	12	When provided with SO ₂ analyzer Once/2 months	Teflon 0.1μm	
2	Filter paper of membrane filter	TK700735P2	1pc (25 sheets)	When not provided with SO ₂ analyzer Once/month	Glass wool 0.5μm	
3	Large O-ring for membrane filter	8553765	2	Once/year	Chloroprene	
4	Small O-ring for membrane filter	TK733572P1	2	Once/year	Chloroprene	
5	Filter element for zero gas	TK708816P1	3	Once/4 months		
6	Filter element for mist filter	TK7H8043P1	1	For mist filter Once/year	Polyethylene 2μm	
7	O-ring for mist filter	8553765	1	For mist filter Once/year	Chloroprene	
8	Diaphragm for gas aspirator	TK713248P1	4	For gas aspirator Once/year	Viton	
9	Catalyst for NO ₂ /NO converter	TK726891C1	2	When provided with NO _x analyzer For NO ₂ /NO converter Once/6 months	Carbon beads 2cc	
10	Glass wool for NO ₂ /NO converter	TK726890C1	2	When provided with NO _x analyzer For NO ₂ /NO converter Once/6 months	Glass wool About 0.5g	
11	Coupling for NO ₂ /NO converter	TK7G6890P1	4	When provided with NO _x analyzer For NO ₂ /NO converter Once/6 months		

7. TROUBLESHOOTING

⚠ CAUTION

- In case you find it difficult to judge what happened to the instrument, avoid disassembling the instrument without consulting our sales agent or service engineers. Otherwise, it may result in electrical shock or personal injury.

7.1 Troubleshooting for sampling unit

Phenomena	Items	Check	Remedy
Sample gas flow rate is low	Filter (Mist, Membrane filter)	Check if filter is clogged.	Clean or replace.
	Diaphragm gas aspirator	Check if aspirator is operating normally.	Clean aspirator or replace diaphragm or valve.
		Check for abnormal sound or vibration.	Retighten screws or replace aspirator.
	Electronic gas cooler	Check if cooler is operating normally. Check the cooler temperature, and check if gas flow path is clogged.	Replace.
	Gas leaks	Check if there are gas leaks somewhere in tube connecting to aspirator or joints.	Retighten or replace parts.
	Flow checker	Check if drain or dust is attached to the flow checker. Check the needle valve.	Adjust.
Tube, capillary	Check the tube for breakage, or clogging.	Replace.	
Indication value varies considerably.	Gas leak	Check the mist filter, tube, joints connecting to aspirator for gas leaks.	Retighten or replace parts.
	Diaphragm aspirator	Check if the aspirator is operated normally. Check if sample gas flow is supplied as set.	<ul style="list-style-type: none"> • Clean the aspirator or replace diaphragm or valve. • Adjust the sample gas flow.
	Zero gas pot	Check that water volume is as specified.	Supply water.
	NO ₂ /NO converter	Is catalyst contained.	Replace.
		Is temperature adjusted to the setting (220°C).	Replace.
Dissolution of gas	Check if drain remains in tube.	Clean or tilt tube.	
Indication differs from the anticipated one.	Gas leak	Check if there is gas leak anywhere before the aspirator.	Retighten or replace parts.
	Measuring range	Check if correct range is selected.	Switch to correct range.
	Zero, span	Check zero and span using the standard gas.	Adjust zero and span correctly.
Indication is not deflected.	Power supply and fuse	Check power supply voltage and fuse.	Replace fuse.
Freeze-up	Drain tubing, water drain tube, sampling tube	Check for freeze-up in the tubing.	Implement heat insulation for preventing freeze-up.

7.2 Troubleshooting for analyzer unit

Error message

If errors occur, the following contents are displayed.

Error display	Error contents	Probable causes
Error No.1	Motor rotation detection signal faulty	<ul style="list-style-type: none"> • Motor rotation is faulty or stopped. • Motor rotation detector circuit is faulty.
Error No.4	Zero calibration is not within.	<ul style="list-style-type: none"> • Zero gas is not supplied. • Zero is deflected much due to dirty cell. • Detector is faulty.
Error No.5	Amount of zero calibration (indication value) is over 50% of full scale.	
Error No.6	Span calibration is not within the allowable range.	<ul style="list-style-type: none"> • Span gas is not supplied. • Calibrated concentration setting does not match cylinder concentration. • Zero calibration is not performed normally. • Span is deflected much due to dirty cell. • Detector sensitivity has deteriorated.
Error No.7	Amount of span calibration (difference between indication value and calibrated concentration) is over 50% of full scale.	
Error No.8	Measured values fluctuate too much during zero and span calibration.	<ul style="list-style-type: none"> • Calibration gas is not supplied. • Time for flowing calibration gas is short.

Screen display and operation at the occurrence of error

(1) In case of Error No. 1, No. 4, No. 6 and No. 8

Measurement screen

Menu Mode		▽:Select a range		
Span Cal.		ENT:Span cal.		
CH 1		ESC:Cancel		
		MODE:CH2 Span cal.		
CH	ele.	cal.	range	value
		Error No.6		ppm
				-33.8 ppm
CH1	NO _x	both	0-1000ppm	ppm
			0-2000ppm	ppm
SPAN GAS : 1.0ppm				

- To cancel the error, select <Menu Mode> and execute <6. Cancel Error>.
- Even if the error is canceled, the error display appears again unless the cause of the error is eliminated.


Display of error contents

Error No.6	Out of SPAN Cal. range
ESC:Back	
NO_x Calibration error Calibration is not successfully Cause	
<ul style="list-style-type: none"> • Span gas is not flowing • Setting conc. is different from gas conc. • Zero cal. was not successfully • Dirt in sample cell • Low sensitivity of detector 	


- When more than one error occurs, pressing the  key moves to another error display.

(2) In case of Error No. 5 and No. 7


Menu Mode		∞:Select a range		
Span Cal.		ENT:Span cal.		
CH 1		ESC:Cancel		
		MODE:CH2 Span cal.		
CH	ele.	cal.	range	value
			0-500ppm	ppm
CH1	NC	Error No. 7	0ppm	0 ppm
			0-2000ppm	ppm
SPAN GAS : 965ppm				



Error No. 7	SPAN cal. error
	ENT:Force Cal.
	ESC:Stop cal. and back
NO_x Calibration error	
Cause	
<ul style="list-style-type: none"> • Span gas is not flowing • Setting conc. is different from gas conc. • Zero cal. was not successfully • Dirt in sample cell • Low sensitivity of detector 	

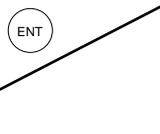

Calibration is continued. Unless another calibration error occurs, calibration is carried out to the end, the Measurement screen returns.



Menu Mode	∞:Select an item
	ENT:Enter
	ESC:Back
<ul style="list-style-type: none"> ▶ 1. Zero/Span Calibration 2. Setting about Calibration 3. Setting about Gas change/purge 4. Changeover of Range 5. Drain 6. Error Cancel 7. Parameter Setting 	

Error log file

If error occurs, the history is saved in an error log file. The error log file exists in the maintenance mode.

Error log screen

Maintenance Error Log		∞:Go next page	
		ENT:Clear error log	
		ESC:Back	
Error No. 6	6-20	15:11	CH1
Error No. 7	6-20	15: 7	CH1
Error No. 6	4- 7	17:54	CH1
Error No. 7	4- 7	15:35	CH1
Error No. 7	3-29	15:29	CH3
Error No. 4	3-29	15:28	CH5
Error No. 5	3-29	15:26	CH5
Page. 1			
▶ Clear Error Log			

Errors that occurred

Date and time when an error occurred

Channel with which the error occurred

New
↓
Old

- * Up to 14 errors can be saved in the error history; the oldest error will be deleted one by one every time a new occurs.
- * If the power supply is turned OFF, the contents in the error log file will not be lost.

Deletion of error history

Press the key on the above screen, and the “Error Log Clear” will be inverted. Further pressing the key will clear the error history.

8. SPECIFICATION

This product is not explosion-proof. When handling dangerous gas, adequate attention shall be paid.

8.1 Specification

Standard Specifications

- Measuring system:
 - NO_x, SO₂, CO₂, CO and CH₄; Non-dispersive infrared absorption method with single light source and single beam (single beam method)
 - O₂; Magnetic force or galvanic cell method
- Measurable component and min./max. measuring range:
 - NO_x; 0 to 500 ppm / 0 to 5000 ppm
 - SO₂; 0 to 500 ppm / 0 to 1 %
 - CO₂; 0 to 200 ppm / 0 to 100 %
 - CO; 0 to 200 ppm / 0 to 100 %
 - CH₄; 0 to 1000 ppm / 0 to 100 %
 - O₂; 0 to 5 % / 0 to 25 %
 - Max. 5 components measurable including O₂
- Number of measuring ranges:
 - 3 ranges
 - Max. range ratio 1:5
- Warm-up time: 30 min after power-on
 - Provided with count-down timer indicating function.
- Analog output: In up to 8 channels.
 - 4 to 20 mA DC or 0 to 1 V DC (linear)
 - Non-isolated output
 - Allowable load; 4 to 20 mA DC, 550Ω or less
 - 0 to 1 V DC, 100 kΩ or more
 - Instantaneous value output of each gas component
 - Instantaneous value output after O₂ correction (when provided with O₂ analyzer)
 - Average value output after O₂ correction (when provided with O₂ analyzer)
 - CP calculation value output (when provided with CO₂ analyzer)
 - * The channel numbers of indicated value and output value correspond to each other one by one.
 - * An exclusive 25-pin cable is standard-equipped.
- Communication output:
 - RS-232C Modbus protocol
 - * Use a commercially available product (D-sub 9-pin cable).
- Control input/output:
 - Input/output signals between the analyzing block and sampling block.
 - * An exclusive 15-pin cable is standard-equipped.
- Indicated values:
 - Digital 4-digit indication (by LCD with back light)
 - Instantaneous values of respective gas components
 - Instantaneous values after O₂ correction (when provided with O₂ analyzer)
 - Average value after O₂ correction (when provided with O₂ analyzer)
 - CP calculation value display (when provided with CO₂ analyzer)
 - * The channel numbers of indicated value and output value correspond to each other one by one.
- Power supply:
 - Rated voltage; 100 to 115 V AC or 200 to 240 V AC
 - Working voltage; 85 to 132 V AC or 180 to 264 V AC
 - * Depending on customer's code selection.
 - Rated frequency; 50/60 Hz
 - Max. rated power; 150 VA for analyzing block 250 VA for sampling block
 - Inlet; Class 1 type conforming with EN60320
- Operating conditions:
 - Ambient temperature; 0 to 40°C
 - Ambient humidity; 90% RH or less
 - * Condensation unallowable
- Storage conditions:
 - Ambient temperature; -20 to 60°C
 - Ambient humidity; 95% RH or less
 - * Condensation unallowable.
 - Water should be drained from the drain pot and zero pot.
- External dimensions (H × W × D mm):
 - Analyzing block; 211 × 365 × 514
 - Sampling block; 377 × 365 × 514
- Mass:
 - Analyzing block; Approx. 12 kg
 - Sampling block; Approx. 18 kg
- Finish color:
 - Cover; White pearl mica
 - Base; Medium gray metallic
- Enclosure design:
 - Casing made of steel plates for indoor installation.
- Gas-contacting part materials:
 - Gas inlet/outlet; Polypropylene
 - Sample cell; SUS304/neoprene rubber
 - Transparent window; CaF₂
 - Internal pipes; Toalon tube/Teflon tube
 - Connection nipple; Polypropylene/Teflon
- Gas inlet/outlet: ø6/ø3 hose end
- Purge gas flow rate:
 - 1 L/min (to be purged as required)

Standard Function

- Auto zero calibration:

Zero point is calibrated periodically at the predetermined cycle.

* For using N₂ gas, prepare zero cylinder gas.

Calibration cycle; OFF/ON (1 to 12 hours) (settable in 1-hour step)

Gas flow time; 180 to 999 sec (settable in 1-sec step)
- Auto draining:

Water is drained periodically at the predetermined cycle.

Draining cycle; 1 to 8 hours (settable in 1-hour step)

Draining time; 30 to 60 sec (settable in 1-sec step)
- Auto indication off:

Indication automatically turns off when no key is operated for the determined period of time in the standby status.

Light off time; OFF/ON (1 to 30 min) (settable in 1-min step)
- Replacement/purge time:

After zero/span calibration or measurement, zero gas or sample gas is automatically flowed.

Gas flow time; 30 to 300 sec (settable in 1-sec step)
- Output holding:

At calibration during measurement, output holds the value just before the calibration according to hold setting. In the standby status, output will not be held. Indication will not be held either.

Hold setting; OFF/ON
- Key lock:

None of the set values can be changed when key lock is turned ON.

This is helpful for reducing operation errors and wrong inputs.
- Instrument/calibration error indication:

When the instrument or calibration is abnormal, an error number is indicated to help analysis of the error.
- O₂ correction:

Conversion of measured NO_x, SO₂ and CO gas concentrations into values at standard O₂ concentration

Calculating equation;

$$C = \frac{21 - O_n}{21 - O_s} \times C_s$$

C; Sample gas concentration after O₂ correction

C_s; Measured concentration of sample gas

O_s; Measured O₂ concentration

O_n; Standard O₂ concentration for conversion (settable within 0 to 19%)

The result of conversion is indicated and output in a signal simultaneously.

* An O_s value of 20% or more is taken as 20% for calculation.

- Averaging after O₂ correction;

The result of O₂ correction is subjected to moving average for the determined period of time. And the result of averaging is indicated and output in a signal simultaneously.

Average value will be taken at a cycle of 30 sec. (Indication and output are updated every 30 sec.)
- Resetting of output average value:

Indication and output of average value are cleared in response to resetting.

* Effective only when average value selection is specified in CODE SYMBOLS.
- CP calculation:

The carbon potential of carburizing furnace and conversion furnace are calculated using furnace temperature (fixed input value) and CO concentration value (fixed or measured value) while referring to CO₂ measured value.

$$\text{Calculation equation; } CP = \frac{CPS \times (PCO)^2}{K1 \times PCO_2}$$

where,

CPS ; Saturated carbon concentration (partial pressure)

$$0.0028t - 1.30 \quad (800^\circ\text{C} \leq 850^\circ\text{C})$$

$$0.0030t - 1.47 \quad (850^\circ\text{C} \leq 950^\circ\text{C})$$

$$0.0034t - 1.85 \quad (950^\circ\text{C} \leq 1000^\circ\text{C})$$

t ; Furnace temperature

PCO ; CO concentration value (partial pressure)

PCO₂ ; CO₂ concentration value (partial pressure)

K1 ; Constant K1 = 10^(9.06-15966/T)

T ; Rankine temperature
(t × 9/5 + 32 + 460)

Performance

- Repeatability: Within $\pm 0.5\%$ of full scale
- Linearity: Within $\pm 2\%$ of full scale
- Zero drift: Within $\pm 1\%$ of full scale/day
- Span drift: Within $\pm 1\%$ of full scale/day
- Response time: Within 50 sec for 90% indication after extracting sample gas through the inlet.
However, within 3 min with SO₂ and galvanic cell type O₂ analyzers
- Other gases' influence:

Interference component/concentration	Sample component/range	NOx analyzer		SO ₂ analyzer		CH ₄ analyzer
		500ppm max	1000ppm min	500ppm max	1000ppm min	All ranges
NO	1000ppm	–	–	Within $\pm 2\%$		Within $\pm 2\%$
SO ₂	1000ppm	Within $\pm 2\%$		–	–	Within $\pm 2\%$
CO ₂	15%	Within $\pm 2\%$		Within $\pm 2\%$		Within $\pm 5\%$
CO	1000ppm	Within $\pm 2\%$		Within $\pm 2\%$		Within $\pm 2\%$
CH ₄	1000ppm	Within $\pm 2\%$		Within $\pm 8\%$	Within $\pm 5\%$	–
NH ₃	50ppm	Within $\pm 8\%$	Within $\pm 5\%$	Within $\pm 8\%$	Within $\pm 5\%$	Within $\pm 2\%$
H ₂ O 2°C saturation		Within $\pm 3\%$	Within $\pm 2\%$	Within $\pm 3\%$	Within $\pm 2\%$	Within $\pm 2\%$

* H₂O interference values in 2°C saturation with NO_x and SO₂ analyzers are values after moisture interference compensation.

Interference component/concentration	Sample component/range	CO ₂ analyzer		CO analyzer		O ₂ analyzer
		200ppm max	500ppm min	200ppm max	500ppm min	All ranges
NO	1000ppm	Within $\pm 2\%$		Within $\pm 2\%$		Within $\pm 2\%$
SO ₂	1000ppm	Within $\pm 2\%$		Within $\pm 2\%$		Within $\pm 2\%$
CO ₂	15%	–	–	Within $\pm 3\%$	Within $\pm 3\%$	Within $\pm 2\%$
CO	1000ppm	Within $\pm 2\%$		–	–	Within $\pm 2\%$
CH ₄	1000ppm	Within $\pm 2\%$		Within $\pm 2\%$		Within $\pm 2\%$
NH ₃	50ppm	Within $\pm 2\%$		Within $\pm 2\%$		Within $\pm 2\%$
H ₂ O 2°C saturation		Within $\pm 3\%$	Within $\pm 2\%$	Within $\pm 3\%$	Within $\pm 2\%$	Within $\pm 2\%$

Standard Requirements for Sample Gas

- Flow rate: 0.5 L/min ± 0.2 L/min for 1 optical system (1 L/min ± 0.4 L/min for 2 optical systems)
- Temperature: 0 to 40°C at inlet of sampling block
10 to 70°C at tip of non-fixed type probe (available at option)
70 to 400°C at tip of fixed type probe (available at option)
- Pressure: 0 to 3 kPa (Gas shall be discharged into atmospheric air.)
- Dust: 50 mg/Nm³ or less
- Mist: Unallowable
- Corrosive gas: HCl 10 ppm or less
Others Unallowable
- Standard gas for calibration:
Zero gas; N₂ or clean air
However, clean air cannot be used if CO₂ and O₂ are included in sample gas components.
Span gas; Concentration limited within 90 to 100% of the range of each sample gas component.
Unusable at concentrations beyond 100%.

Options

- Gas extractor: Used for aspirating sample gas.
Non-fixed type; Since this type is used for intermittent measurement, it cannot be fixed.
Material; SUS304/polypropylene
Fixed type; Used for continuous measurement. Flange 5K25A FF
Sampling pipe length selectable among 300, 400, 600 and 800mm
Material; SUS316
- Sample inlet tube: Used for delivering gas from the extractor to sampling block.
Shape; $\varnothing 6/\varnothing 4 \times 5$ m or $\varnothing 6/\varnothing 4 \times 10$ m
Material; Teflon

Installation Requirements

- Selection of a place which does not receive direct sunlight, rain, wind nor radiation from hot substances.
If such a place cannot be found, a roof or cover should be prepared for protection.
- Avoidance of a place under heavy vibration
- Selection of a place where atmospheric air is clean
- Discharge of exhaust gas into atmospheric air at a safe location
- Avoidance of use in an explosion-proof area

Scope of Delivery

- Gas analyzer system (analyzing and sampling blocks)
- Standard accessories (Refer to the table at top right table.)
- Instruction manual

Item to be Prepared Separately

- Standard gas (ZBM) and pressure regulator (ZBD)
- Recorder (when necessary, Fuji's product type PHR)
- 1-year spares for sampling equipment (Refer to the table at bottom right table.)

Tables of Sample Component and Measuring Range - Availability Check Tables -

Table 1: 1-Component Analyzer (NO_x, SO₂, CO₂, CO, CH₄)

Sample component Range		NO _x analyzer	SO ₂ analyzer	CO ₂ analyzer	CO analyzer	CH ₄ analyzer
		P	A	D	B	E
A	0 to 200/500/1000ppm	—	—	○	○	—
B	0 to 500/1000/2000ppm	○	○	○	○	—
C	0 to 1000/2000/5000ppm	○	○	○	○	○
D	0 to 2000/5000ppm/1%	—	○	○	○	○
E	0 to 5000ppm/1/2%	—	—	○	○	○
F	0 to 1/2/5%	—	—	○	○	○
G	0 to 2/5/10%	—	—	○	○	○
H	0 to 5/10/20%	—	—	○	○	○
J	0 to 10/20/50%	—	—	○	○	○
K	0 to 20/50/100%	—	—	○	○	○

○ : Product available

Table 2: 2-Component Analyzer (NO_x analyzer + SO₂ analyzer)

NO _x analyzer range SO ₂ analyzer range		Range values are the same as those of NO _x analyzer.									
		A	B	C	D	E	F	G	H	J	K
A	0 to 200/500/1000ppm	—	—	—	—	—	—	—	—	—	—
B	0 to 500/1000/2000ppm	—	○	○	○	—	—	—	—	—	—
C	0 to 1000/2000/5000ppm	—	○	○	○	—	—	—	—	—	—
D	0 to 2000/5000ppm/1%	—	—	—	—	—	—	—	—	—	—
E	0 to 5000ppm/1/2%	—	—	—	—	—	—	—	—	—	—
F	0 to 1/2/5%	—	—	—	—	—	—	—	—	—	—
G	0 to 2/5/10%	—	—	—	—	—	—	—	—	—	—
H	0 to 5/10/20%	—	—	—	—	—	—	—	—	—	—
J	0 to 10/20/50%	—	—	—	—	—	—	—	—	—	—
K	0 to 20/50/100%	—	—	—	—	—	—	—	—	—	—

○ : Product available

Table 3: 2-Component Analyzer (CO₂ analyzer + CO analyzer)

CO ₂ analyzer range CO analyzer range		Range values are the same as those of CO ₂ analyzer.									
		A	B	C	D	E	F	G	H	J	K
A	0 to 200/500/1000ppm	○	○	—	—	—	—	—	—	—	—
B	0 to 500/1000/2000ppm	○	○	○	—	—	—	—	—	—	—
C	0 to 1000/2000/5000ppm	—	—	○	○	—	—	—	—	—	—
D	0 to 2000/5000ppm/1%	—	○	○	○	○	—	—	—	—	—
E	0 to 5000ppm/1/2%	—	○	○	○	○	○	○	○	—	—
F	0 to 1/2/5%	○	○	○	○	○	○	○	○	○	—
G	0 to 2/5/10%	○	○	○	○	○	○	○	○	○	○
H	0 to 5/10/20%	○	○	○	○	○	○	○	○	○	○
J	0 to 10/20/50%	—	○	○	○	○	○	○	○	○	○
K	0 to 20/50/100%	—	○	○	○	○	○	○	○	○	○

○ : Product available

Table 4: 2-Component Analyzer (CH₄ analyzer + CO analyzer)

CO analyzer range CH ₄ analyzer range		Range values are the same as those of CH ₄ analyzer.									
		A	B	C	D	E	F	G	H	J	K
A	0 to 200/500/1000ppm	—	—	—	—	—	—	—	—	—	—
B	0 to 500/1000/2000ppm	—	—	—	—	—	—	—	—	—	—
C	0 to 1000/2000/5000ppm	—	—	—	—	—	—	—	—	—	—
D	0 to 2000/5000ppm/1%	—	—	—	—	—	—	—	—	—	—
E	0 to 5000ppm/1/2%	—	—	○	○	○	○	—	—	—	—
F	0 to 1/2/5%	—	—	○	○	○	○	○	○	—	—
G	0 to 2/5/10%	—	○	○	○	○	○	○	○	○	○
H	0 to 5/10/20%	—	○	○	○	○	○	○	○	○	○
J	0 to 10/20/50%	—	○	○	○	○	○	○	○	○	○
K	0 to 20/50/100%	—	○	○	○	○	○	○	○	○	○

○ : Product available

Table 5: 2-Component Analyzer (CO₂ analyzer + CH₄ analyzer)

CH ₄ analyzer range CO ₂ analyzer range		Range values are the same as those of CO ₂ analyzer.									
		A	B	C	D	E	F	G	H	J	K
A	0 to 200/500/1000ppm	—	—	—	—	—	—	—	—	—	—
B	0 to 500/1000/2000ppm	—	—	—	—	—	—	—	—	—	—
C	0 to 1000/2000/5000ppm	—	—	—	—	○	—	—	—	—	—
D	0 to 2000/5000ppm/1%	—	—	—	○	○	○	—	—	—	—
E	0 to 5000ppm/1/2%	—	—	—	○	○	○	○	—	—	—
F	0 to 1/2/5%	—	—	—	○	○	○	○	○	—	—
G	0 to 2/5/10%	—	—	—	○	○	○	○	○	○	—
H	0 to 5/10/20%	—	—	—	○	○	○	○	○	○	○
J	0 to 10/20/50%	—	—	—	○	○	○	○	○	○	○
K	0 to 20/50/100%	—	—	—	○	○	○	○	○	○	○

○ : Product available

- 2-component analyzer (NO_x analyzer + CO analyzer);
Possible range in combination of Table 1 (NO_x analyzer) and Table 1 (CO analyzer)
- 3-component analyzer (NO_x analyzer + SO₂ analyzer + CO analyzer);
Possible range in combination of Table 2 (NO_x analyzer + SO₂ analyzer) and Table 1 (CO analyzer)
- 3-component analyzer (NO_x analyzer + SO₂ analyzer + CO₂ analyzer);
Possible range in combination of Table 2 (NO_x analyzer + SO₂ analyzer) and Table 1 (CO₂ analyzer)
- 3-component analyzer (NO_x analyzer + CO₂ analyzer + CO analyzer);
Possible range in combination of Table 1 (NO_x analyzer) and Table 3 (CO₂ analyzer + CO analyzer)
- 3-component analyzer (SO₂ analyzer + CO₂ analyzer + CO analyzer);
Possible range in combination of Table 1 (SO₂ analyzer) and Table 3 (CO₂ analyzer + CO analyzer)
- 3-component analyzer (CH₄ analyzer + CO₂ analyzer + CO analyzer);
Possible range in combination of Table 1 (CH₄ analyzer) and Table 3 (CO₂ analyzer + CO analyzer)
- 4-component analyzer (NO_x analyzer + SO₂ analyzer + CO₂ analyzer + CO analyzer);
Possible range in combination of Table 2 (NO_x analyzer + SO₂ analyzer) and Table 3 (CO₂ analyzer + CO analyzer)

Fuji Electric Co., Ltd.

International Sales Div Sales Group

Gate City Ohsaki, East Tower, 11-2, Osaki 1-chome,
Shinagawa-ku, Tokyo 141-0032, Japan
<http://www.fujielectric.com>
Phone: 81-3-5435-7280, 7281 Fax: 81-3-5435-7425
<http://www.fujielectric.com/products/instruments/>
