



## Instruction Manual

# ZIRCONIA OXYGEN ANALYZER CONVERTER

Type: ZKM



---

# PREFACE

---

We are grateful for your purchase of Fuji Direct Insertion Type Zirconia Oxygen Analyzer Converter (ZKM).

First read this instruction manual carefully until an adequate understanding is acquired, and then proceed to installation, operation and maintenance of the converter. Improper handling may result in accidents or injury.

The specifications of this converter will be changed without prior notice for further product improvement.

Modification of this converter is strictly prohibited unless a written approval is obtained from the manufacturer. Fuji will not bear any responsibility for a trouble caused by such a modification.

This instruction manual shall be stored by the person who actually uses the converter.

After reading through the manual, be sure to keep it near at hand for future reference.

This product falls within category 9 (Monitoring and control instruments including industrial monitoring and control instruments) of Annex 1 of EU RoHS directive (2011/65/EU).

Please do not use it for consumer use.

This instruction manual should be delivered to the end user without fail.

Manufacturer: Fuji Electric Co., Ltd.  
Type: Described in the nameplate put on the main body  
Date of manufacture: Described in the nameplate put on the main body  
Product nationality: Japan

Related instruction manual

Direct insertion type zirconia oxygen analyzer detector (Type: ZFK8).....INZ-TN5ZFK8-E

## Notice

It is prohibited to transfer part or all of this manual without Fuji Electric's permission in written format.  
Description in this manual is subject to change without prior notice.

Fuji Electric Co., Ltd. 2008

Issued in October 2008  
Revised in December 2008  
Revised in May 2009  
Revised in July 2009  
Revised in April 2011  
Revised in September 2013

# SAFETY PRECAUTIONS

**First of all, read this “SAFETY PRECAUTIONS” carefully, and then use in the correct way.**

Installation, transportation, wiring, use, maintenance of this product shall be carried out by suitably trained personnel.

First-time users should operate the instrument under the supervision of a fully competent person in the operation.

Be sure to observe the instructions shown below, because they describe important information on safety. Those safety precautions are ranked in 3 levels, “DANGER”, “CAUTION” and “PROHIBITION”.

 <b>DANGER</b>	If operation is incorrect, a dangerous situation may occur, resulting in death or serious injuries.
 <b>CAUTION</b>	If handled wrongly, a dangerous situation may occur, and medium trouble or slight injury may be caused and only property damage may be caused.
 <b>PROHIBITION</b>	Items which must not be done are noted.

The items noted under “ CAUTION” may also result in serious trouble depending on circumstances. All the items are important and must be fully observed.

<b>Caution on installation and transportation</b>	
 <b>DANGER</b>	This unit is not explosion-proof type. Do not use it in an atmosphere of explosive gases. Otherwise serious accidents such as explosion or fire may result.
 <b>CAUTION</b>	<p>This unit should be installed in a place which conforms to the conditions noted in the instruction manual. Otherwise, it may cause electric shocks, fire, failure or malfunction of the unit.</p> <p>During installation work, care should be taken to keep the unit free from entry of cable chips or other foreign objects. Otherwise, it may cause fire, failure or malfunction of the unit.</p> <p>For installation, observe the rule on it given in the instruction manual and select a place where the weight of converter can be endured. Installation at an unsuited place may cause turnover or fall and there is a risk of injury.</p> <p>Be sure to wear gloves when handling the unit. Bare hands may invite an injury.</p> <p>Before transport, fix the door so that it will not open. Otherwise, the door may be separated and fall to cause an injury.</p>

<b>Cautions on wiring</b>	
 <b>CAUTION</b>	<p>Be sure to turn off all the power before performing wiring. Otherwise electric shock may result.</p> <p>Be sure to perform class D grounding work. Otherwise, electric shock or failure may result.</p> <p>Select a proper wiring material that satisfies the ratings of the instrument. Otherwise, electric shock or fire may result.</p> <p>Connect power source of correct rating. Connection of a power source of incorrect rating may lead to a risk of fire.</p>

<b>Cautions on use</b>	
 <b>DANGER</b>	<p>If unusual smell or sound has been produced, immediately stop the instrument. Any discharge produced may cause a fire.</p>
 <b>CAUTION</b>	<p>Leaving the converter unused for a long time or restarting it after disuse requires procedures different from normal operation or suspension procedures. Be sure to follow the instructions in each instruction manual. Otherwise, intended performance may not be achieved, or accidents or injury may result.</p> <p>Do not operate the converter for a long time with its door left open. Otherwise, dust, foreign matter, etc. may stick on internal walls, thereby causing failure.</p>
 <b>PROHIBITION</b>	<p>Do not touch the input/output terminals with metal or finger. Otherwise, failure, electric shock or injury may result.</p>

<b>Caution on maintenance and inspection</b>	
 <b>CAUTION</b>	<p>Before maintenance and check, be sure to turn off the main power supply and wait until the detector is cooled adequately. Otherwise, you may suffer a burn.</p> <p>Before removing the detector from the flue for maintenance and check, make sure the furnace is stopped. Otherwise, you may suffer a burn.</p> <p>Before working, take off a wrist watch, finger ring or the like metallic accessories. And never touch the instrument with a wet hand. Otherwise, you will have electric shocks.</p> <p>If the fuse is blown, eliminate the cause, and then replace it with the one of the same capacity and type as before. Otherwise, it may cause electric shocks or failure.</p>

<b>Others</b>	
 <b>CAUTION</b>	<p>If the cause of a failure cannot be identified by referring to the instruction manual, be sure to contact your dealer or Fuji's technician in charge of adjustment. Disassembling the instrument carelessly may result in electric shock or injury.</p> <p>Do not use a replacement part other than specified by the instrument maker. Otherwise, adequate performance will not be provided. Besides, an accident or failure may be caused.</p> <p>Replacement parts such as a maintenance part should be disposed of as incombustibles.</p>



---

# Contents

---

<b>PREFACE</b> .....	<b>i</b>
<b>SAFETY PRECAUTIONS</b> .....	<b>ii</b>
<b>CHECKING OF CONTENTS OF THE PACKAGE</b> .....	<b>viii</b>
<b>STORAGE CONDITIONS</b> .....	<b>viii</b>
<b>1. GENERAL</b> .....	<b>1</b>
1.1 Direct insertion type zirconia oxygen analyzer .....	1
<b>2. OPERATING PARTS AND THEIR FUNCTIONS</b> .....	<b>2</b>
2.1 External appearance.....	2
2.1.1 Outline Drawing.....	2
2.1.2 Terminal block.....	3
2.2 OPERATING PARTS AND THEIR FUNCTIONS.....	4
2.2.1 External appearance .....	4
2.2.2 Internal constitution .....	5
2.3 Description on display/operation panel .....	6
<b>3. INSTALLATION</b> .....	<b>7</b>
3.1 Installation site.....	7
3.2 How to install the converter.....	8
3.2.1 Mounting on panel surface (ZKM1) .....	8
3.2.2 Pipe mounting (ZKM1).....	8
3.2.3 Mounting on panel surface (ZKM2) .....	9
3.2.4 Pipe mounting (ZKM2) .....	9
<b>4. WIRING AND PIPING</b> .....	<b>10</b>
4.1 Before wiring .....	10
4.2 Wiring to terminals .....	11
4.2.1 O <sub>2</sub> sensor input / Input method of O <sub>2</sub> sensor thermocouple .....	11
4.2.2 Cable gland and input and output lines .....	11
4.2.3 Allocation of the terminal block.....	12
4.3 Wiring and piping diagram .....	13
4.4 Handling of standard gas (An article on separate order) .....	17
<b>5. OPERATION</b> .....	<b>18</b>
5.1 Preparation for operation .....	18
5.2 Key operation flow diagram (outline) .....	19
5.3 Initial parameter value table .....	23
5.3.1 Parameters related to measurement.....	23
5.3.2 Parameters related to calibration.....	23
5.3.3 Parameters related to blowdown (displayed if the option is provided).....	24
5.3.4 Parameters related to maintenance.....	24
5.3.5 Other parameters .....	25
<b>6. OPERATION START AND STOP</b> .....	<b>27</b>
6.1 Operation start .....	27
6.2 Operation stop.....	27
6.3 Actions during operation.....	28
6.4 Check the contents of display .....	29
6.4.1 Check of state information .....	29
6.4.2 Checking the error information.....	30

6.4.3 Checking the alarm information.....	30
6.5 Oxygen detector standard output voltage.....	31
<b>7. CALIBRATION.....</b>	<b>32</b>
7.1 Preparation.....	32
7.2 Manual calibration.....	33
7.3 Auto calibration (option).....	35
7.4 Remote calibration.....	37
7.5 All calibration (option).....	39
<b>8. BLOWDOWN (OPTION).....</b>	<b>40</b>
8.1 Preparation for blowdown.....	40
8.2 Manual blowdown.....	40
8.3 Automatic blowdown.....	41
8.4 Remote blowdown.....	43
<b>9. MAINTENANCE AND CHECK.....</b>	<b>45</b>
9.1 Checking.....	45
9.2 Consumable parts.....	45
9.3 Spare parts.....	45
9.4 Replacement of fuse.....	46
9.5 Troubleshooting.....	47
<b>10. SETTING AND OPERATING OF PARAMETER.....</b>	<b>49</b>
10.1 Measured menu.....	49
10.1.1 Display range setting screen.....	49
10.1.2 Decimal point position setting screen.....	50
10.1.3 Full scale setting screen.....	51
10.1.4 Setting screen for calculation time of maximum and minimum values appears.....	52
10.2 Calibration menu.....	53
10.2.1 Automatic calibration setting (option).....	53
10.2.2 Date and time for starting automatic calibration (option).....	54
10.2.3 Cycle time setting of automatic calibration (option).....	55
10.2.4 Performing all calibration (option).....	56
10.2.5 Performing a manual span calibration.....	57
10.2.6 Performing a manual zero calibration.....	58
10.2.7 Calibration gas setting.....	59
10.2.8 Calibration waiting setting (option).....	60
10.2.9 Calibration error clear.....	61
10.2.10 Operation setting screen of calibration range.....	62
10.3 Blowdown menu (option).....	63
10.3.1 Automatic blowdown setting.....	63
10.3.2 Date and time setting of automatic blowdown.....	64
10.3.3 Automatic blowdown cycle setting.....	65
10.3.4 Procedure for setting blowdown time.....	66
10.3.5 Performing manual blowdown.....	67
10.4 Maintenance menu.....	68
10.4.1 Error log display.....	68
10.4.2 Clearing error logs.....	70
10.4.3 Alarm log display.....	71
10.4.4 Clearing alarm logs.....	72
10.4.5 Operation log display.....	73
10.4.6 Clearing operation logs.....	75
10.4.7 Sensor check setting for calibration (option).....	76
10.4.8 Sensor recovery setting for calibration (option).....	77
10.4.9 Performing a manual sensor check.....	78
10.4.10 Performing manual sensor recovery.....	79
10.4.11 Cell internal resistance display.....	80

10.4.12 Maintenance mode setting.....	81
10.4.13 Password setting.....	82
10.4.14 PID auto tuning.....	83
10.5 Parameter menu.....	84
10.5.1 Current date and time setting.....	84
10.5.2 Contact input setting.....	85
10.5.3 Selection of alarm contact output.....	86
10.5.4 High limit setting of oxygen concentration.....	87
10.5.5 Lower limit setting of oxygen concentration.....	88
10.5.6 HH limit setting of oxygen concentration.....	89
10.5.7 LL limit setting of oxygen concentration.....	90
10.5.8 Hysteresis Setting.....	91
10.5.9 Hold treatment setting (maintenance hold).....	93
10.5.10 Hold value setting (maintenance hold).....	94
10.5.11 Setting of hold setting value (maintenance hold).....	95
10.5.12 Setting of measurement recovery time (maintenance hold).....	96
10.5.13 Hold treatment setting (error hold).....	97
10.5.14 Hold value setting (error hold).....	98
10.5.15 Setting of hold setting value (error hold).....	99
10.5.16 Setting of key lock.....	100
10.5.17 LCD brightness adjustment.....	101
10.5.18 Setting of automatic OFF time.....	102
10.5.19 Station number setting.....	103
10.5.20 Adjustment screen for analog output 0%.....	104
10.5.21 Adjustment screen for analog output 100%.....	105
10.5.22 Fuel coefficient setting (option).....	106
10.6 Factory menu.....	107
10.6.1 Password setting screen.....	107
<b>11. HOW TO CHANGE THE SETTING.....</b>	<b>108</b>
11.1 How to change the setting of converter ZKM depending on detector type.....	108
<b>12. SPECIFICATIONS.....</b>	<b>109</b>
12.1 Specifications.....	109
12.2 Code symbols.....	111

## CHECKING OF CONTENTS OF THE PACKAGE

Check that all of the following are contained in the delivered package.

- (1) Zirconia Oxygen Analyzer Converter main unit 1 unit
- (2) Accessories 1 set (Refer to the table below.)

Table 1 Standard accessories

No.	Item	Quantity	Remarks
1	Tube type fuse (250 V T 0.5 A)	2	For main unit (F1)
2	Tube type fuse (250 V T 2.5 A)	2	For heater (F2)
3	Instruction manual	1	The “Japanese,” “English” or “Chinese” manual is attached. (As specified)
4	Communication Manual	1	The instruction manual of “MODBUS” is attached. (As specified)
5	Mounting bracket	1 set	The “panel attachment bracket” and “pipe attachment bracket” are attached. (As specified)

## STORAGE CONDITIONS

Store the unit in a location that meets the following conditions:

- (1) Vibration, dust, dirt, and humidity are minimal.
- (2) A place not subjected to radiated heat from a heating furnace, etc.
- (3) The atmosphere is non-corrosive.
- (4) A place where ambient temperature and humidity are  $-30$  to  $+70^{\circ}\text{C}$  (non condensing) and 95% RH or less.

# 1. GENERAL

This manual describes the installation, operation, and the maintenance of the zirconia oxygen analyzer converter. Read it carefully before using the converter. For the detector, flow guide tube and ejector used with the converter, refer to relevant instruction manuals.

---

## 1.1 Direct insertion type zirconia oxygen analyzer

---

The direct insertion type zirconia oxygen analyzer consists of a direct insertion type zirconia detector (type ZFK) and converter (type ZKM).

The analyzer intended for the measurement of oxygen concentration in exhaust gas is used for combustion control.

### Caution

Power voltage for the converter must conform to that for the detector to be connected. Don't use any power voltage different from the power specifications of the detector. Otherwise it may result in damage to the detector.

100/120V AC50/60Hz for ZFK8R□1

200/240V AC50/60Hz for ZFK8R□3

### Operating environment


- 1) Operating temperature: -20 to 55°C
- 2) Operating humidity: 95%RH or less, non condensing
- 3) Power voltage: 100 to 120V AC 50/60Hz or 200 to 240V AC 50/60Hz
- 4) Pollution degree: 2
- 5) Installation category: II

# 2. OPERATING PARTS AND THEIR FUNCTIONS


## 2.1 External appearance

### 2.1.1 Outline Drawing

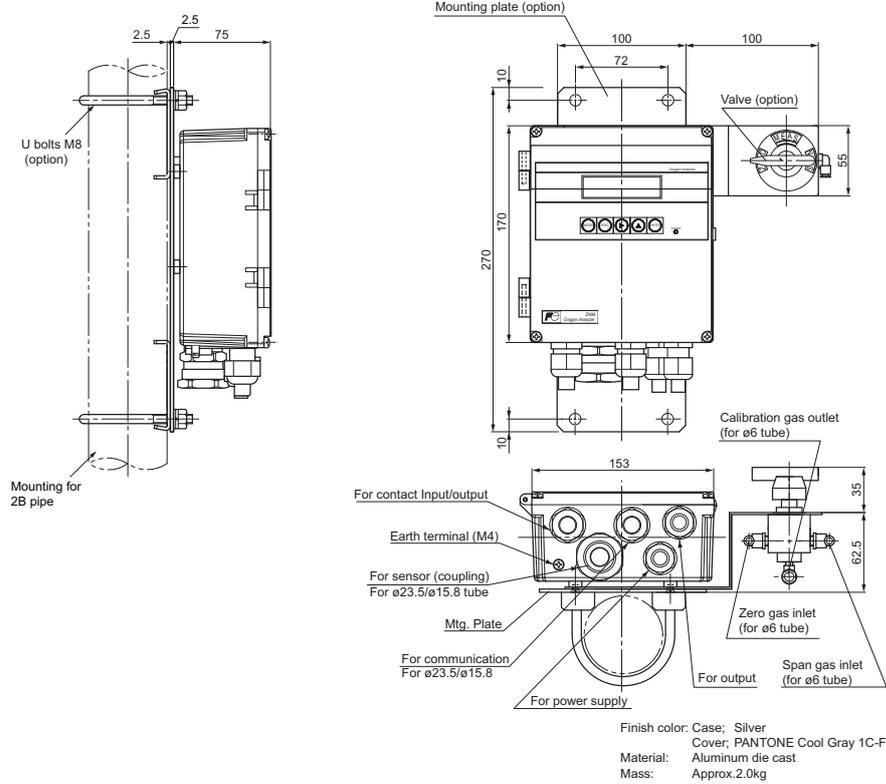ZKM1  
Small case (IP66)




ZKM2  
Large case (IP67)

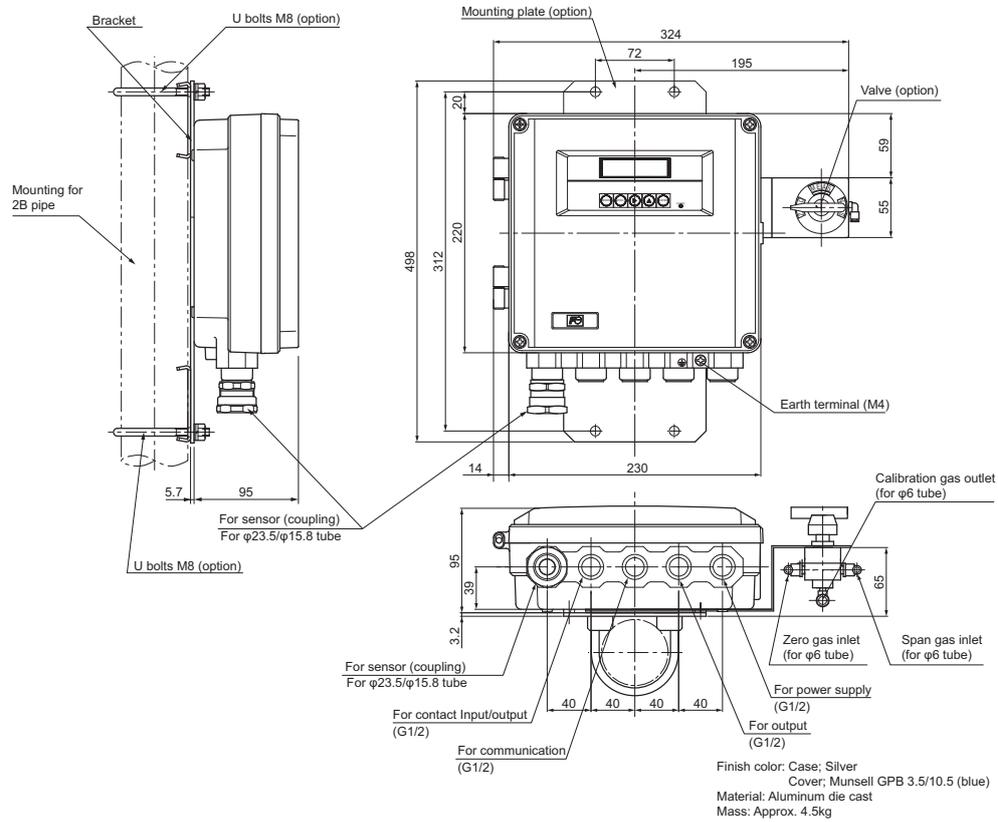

## 2.1.2 Terminal block
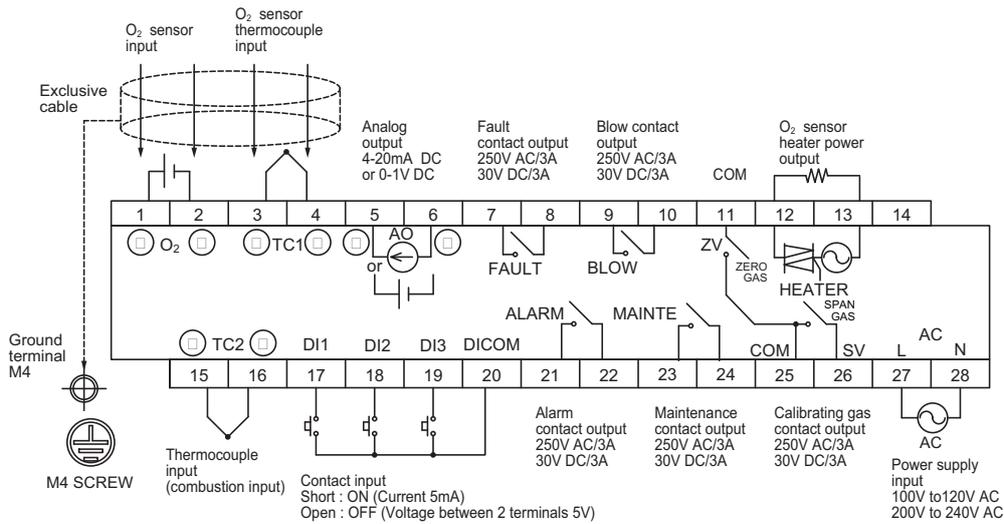
### EXTERNAL TERMINAL (TM1) / M3 SCREW



### COMMUNICATION TERMINAL (TM2) / INSERTION TERMINAL

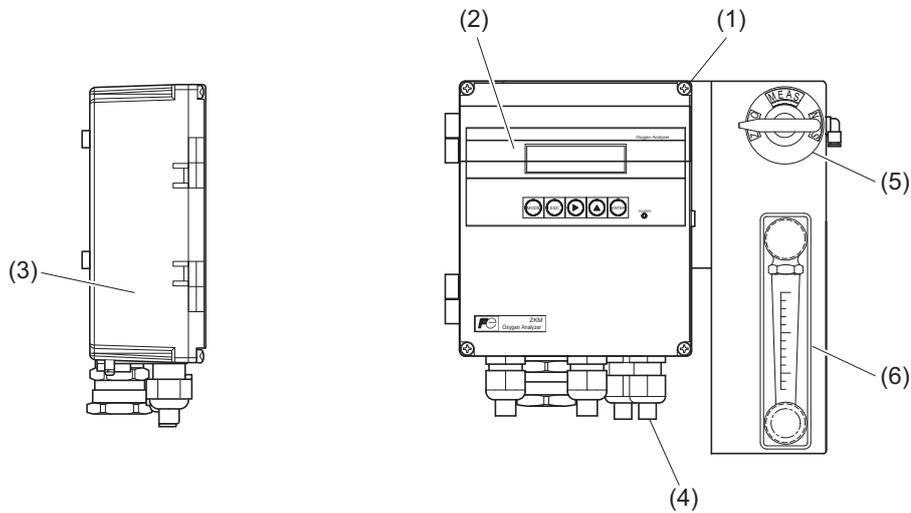
	Terminal number			Remarks
	1	2	3	
RS232C	TXD	RXD	GND	Standard
RS485	TRX+	TRX-	GND	Option

- Note 1) The heater power supply is the same as the converter power supply.
- Note 2) Be sure to connect the shield of the cable to the ground in the main body.


## 2.2 OPERATING PARTS AND THEIR FUNCTIONS

### 2.2.1 External appearance

ZKM1 <IP66>




ZKM2 <IP67>

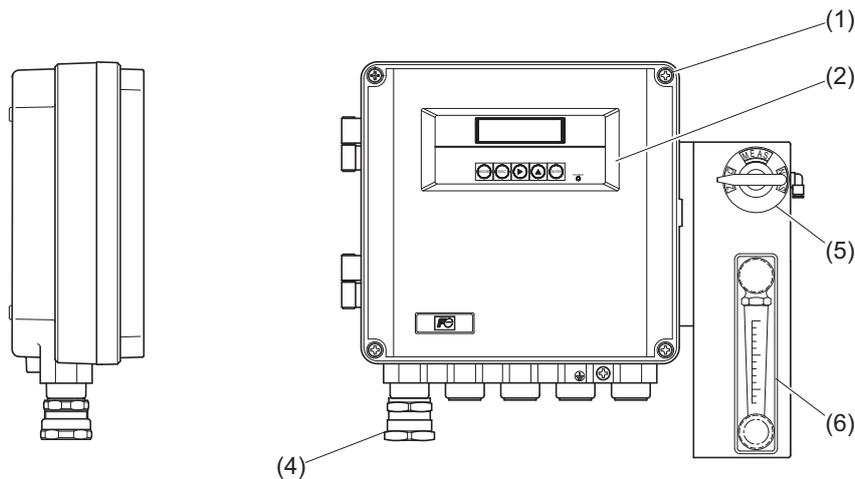


Name	Explanation
(1) Door fixing screw	Fixes the front door. (4-M5)
(2) Display/operation panel	Displays or operates the concentration value or setting values.
(3) Specification nameplate	Describes the equipment identification number, specifications or the like.
(4) Cable gland	The wiring hole for the power wire and output line
(5) Cock	Selects zero or span gas (available at option).
(6) Flow meter	Use to adjust the quantity of the zero/span gas.

## 2.2.2 Internal constitution
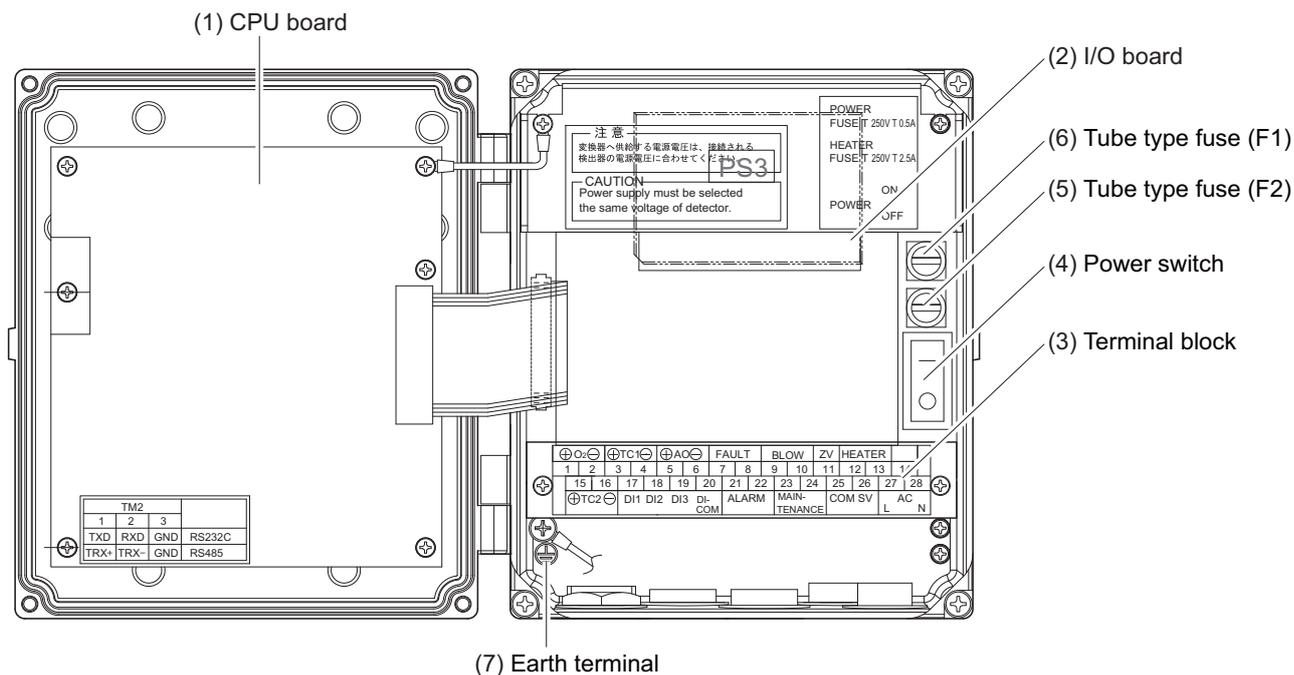
### ZKM1 <IP66>




### ZKM2 <IP67>

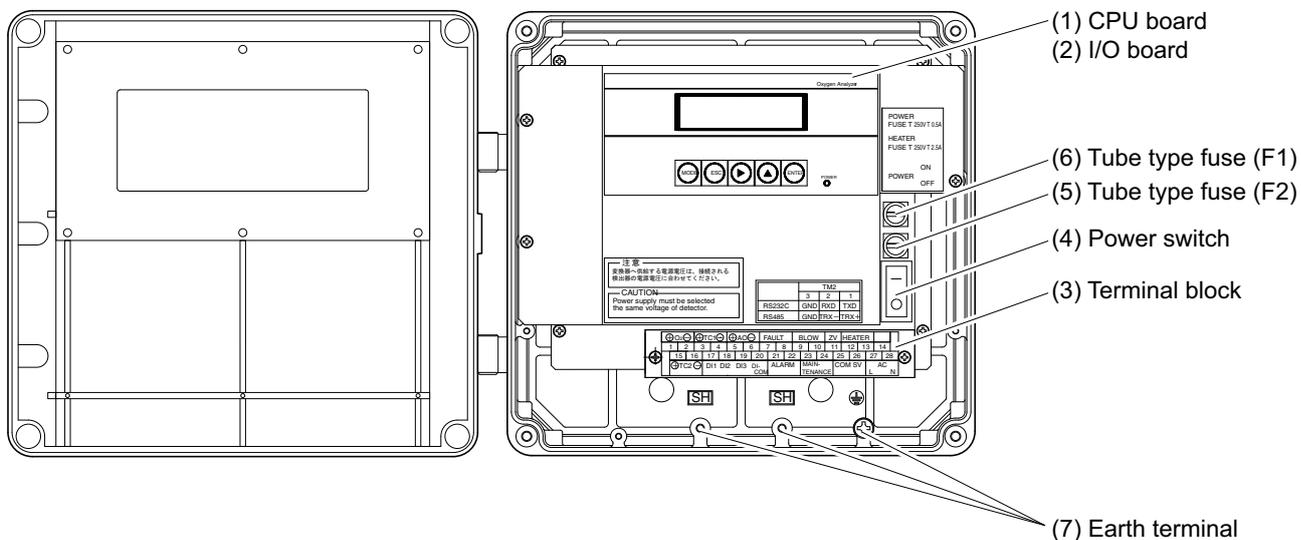

Name	Explanation
(1) CPU board	The liquid crystal display and the memory circuit are installed.
(2) I/O board	The input/output circuit and the power circuit are installed.
(3) Terminal block	Terminal block for various input/output signals.
(4) Power switch	Turns ON/OFF this converter. (“-”: OFF, “o”: ON)
(5) Tube type fuse (F2)	Fuse for the heater. (250 V T 2.5 A)
(6) Tube type fuse (F1)	Fuse for the main unit (250 V T 0.5 A)
(7) Earth terminal	Used as frame gland (FG).

## 2.3 Description on display/operation panel

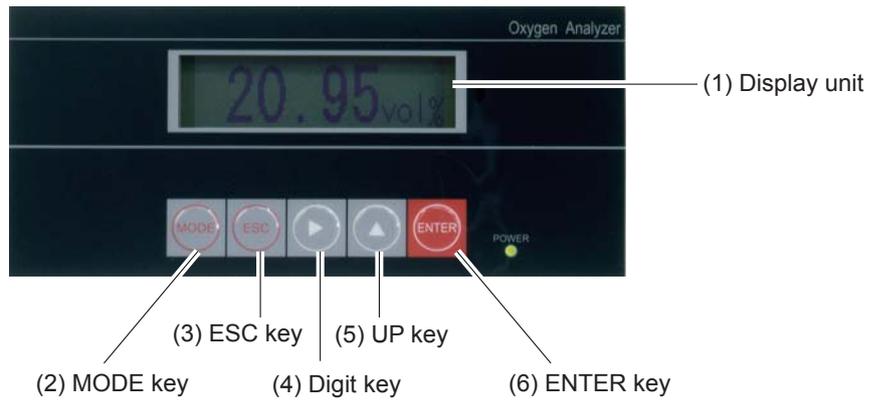

Name	Explanation
(1) Display unit	Displays the concentration value and setting values.
(2) MODE key	Used to switch measurement display and mode display.
(3) ESC key	Used to return to the previous screen or exit the setting.
(4) Digit key	Used to change the setting values.
(5) Up key	
(6) ENTER key	Used to determine the setting values.

# 3. INSTALLATION

## DANGER

This unit is not explosion-proof type. Do not use it in an atmosphere of explosive gases. Otherwise serious accidents such as explosion or fire may result.

## CAUTION

For installation, observe the rule on it given in the instruction manual and select a place where the weight of converter can be endured. Installation at an unsuited place may cause turnover or fall and there is a risk of injury.  
Before transport, fix the door so that it will not open. Otherwise, the casing may be separated and fall to cause an injury.  
During installation work, care should be taken to keep the unit free from entry of cable chips or other foreign objects. Otherwise, it may cause fire, failure or malfunction.

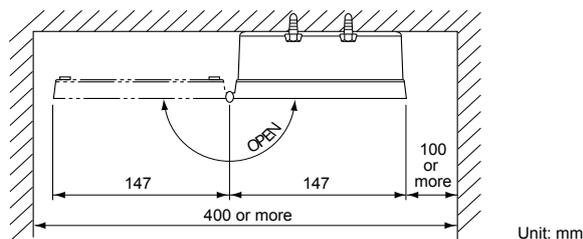
## 3.1 Installation site

Install the converter in a place that satisfies the following conditions.


- (1) Space for periodic inspection and wiring work is available.
- (2) Vibration, dust, dirt, and humidity are minimal.
- (3) A place not subjected to radiated heat from a heating furnace, etc.
- (4) The atmosphere is non-corrosive.
- (5) Away from electrical devices that may cause noise trouble (such as motor and transformer), and equipment that may cause electromagnetic or electrostatic induction trouble.
- (6) A place where ambient temperature and humidity are  $-20$  to  $+55^{\circ}\text{C}$  and 95%RH or less.

Secure at least 100 mm of space between the converter and nearby wall. Also secure a space of opening the front cover for maintenance.

Secure a cable wiring space under the case.



**Top view of mounting (ZKM1: small case)**

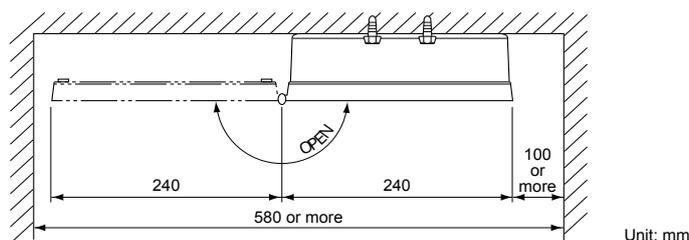

**Top view of mounting (ZKM2: Large case)**

## 3.2 How to install the converter

### 3.2.1 Mounting on panel surface (ZKM1)

Unit: mm

Mounting dimensions	Installation																
		<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>No.</th> <th>Name</th> <th>Quantity</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Converter</td> <td>1</td> </tr> <tr> <td>2</td> <td>Pan head screw (M8×12)</td> <td>4</td> </tr> <tr> <td>3</td> <td>Spring washer (M8)</td> <td>4</td> </tr> <tr> <td>4</td> <td>Plain washer (M8)</td> <td>4</td> </tr> </tbody> </table> <p style="margin-top: 20px;">Code M8      Standard tightening torque 12.5 [N·m]</p>	No.	Name	Quantity	1	Converter	1	2	Pan head screw (M8×12)	4	3	Spring washer (M8)	4	4	Plain washer (M8)	4
No.	Name	Quantity															
1	Converter	1															
2	Pan head screw (M8×12)	4															
3	Spring washer (M8)	4															
4	Plain washer (M8)	4															

### 3.2.2 Pipe mounting (ZKM1)

Installation																						
	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>No.</th> <th>Name</th> <th>Quantity</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Converter</td> <td>1</td> </tr> <tr> <td>2</td> <td>Hexagon nut (M8)</td> <td>4</td> </tr> <tr> <td>3</td> <td>Spring washer (M8)</td> <td>4</td> </tr> <tr> <td>4</td> <td>Plain washer (M8)</td> <td>4</td> </tr> <tr> <td>5</td> <td>U bolt (M8)</td> <td>2</td> </tr> <tr> <td>6</td> <td>Support panel</td> <td>2</td> </tr> </tbody> </table> <p style="margin-top: 20px;">Code M8      Standard tightening torque 12.5 [N·m]</p>	No.	Name	Quantity	1	Converter	1	2	Hexagon nut (M8)	4	3	Spring washer (M8)	4	4	Plain washer (M8)	4	5	U bolt (M8)	2	6	Support panel	2
No.	Name	Quantity																				
1	Converter	1																				
2	Hexagon nut (M8)	4																				
3	Spring washer (M8)	4																				
4	Plain washer (M8)	4																				
5	U bolt (M8)	2																				
6	Support panel	2																				

### 3.2.3 Mounting on panel surface (ZKM2)

Unit: mm

Mounting dimensions	Installation									
	<div style="display: flex; align-items: center;"> </div> <table border="1" style="margin-top: 20px; width: 100%; border-collapse: collapse;"> <thead> <tr> <th>No.</th> <th>Name</th> <th>Quantity</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Converter</td> <td>1</td> </tr> <tr> <td>2</td> <td>Pan head screw (M8×12)</td> <td>4</td> </tr> </tbody> </table> <p style="margin-top: 20px;">Code M8      Standard tightening torque 12.5 [N·m]</p>	No.	Name	Quantity	1	Converter	1	2	Pan head screw (M8×12)	4
No.	Name	Quantity								
1	Converter	1								
2	Pan head screw (M8×12)	4								

### 3.2.4 Pipe mounting (ZKM2)

Installation																						
	<table border="1" style="margin-top: 20px; width: 100%; border-collapse: collapse;"> <thead> <tr> <th>No.</th> <th>Name</th> <th>Quantity</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Converter</td> <td>1</td> </tr> <tr> <td>2</td> <td>Hexagon nut (M8)</td> <td>4</td> </tr> <tr> <td>3</td> <td>Spring washer (M8)</td> <td>4</td> </tr> <tr> <td>4</td> <td>Plain washer (M8)</td> <td>4</td> </tr> <tr> <td>5</td> <td>U bolt (M8)</td> <td>2</td> </tr> <tr> <td>6</td> <td>Support panel</td> <td>2</td> </tr> </tbody> </table> <p style="margin-top: 20px;">Code M8      Standard tightening torque 12.5 [N·m]</p>	No.	Name	Quantity	1	Converter	1	2	Hexagon nut (M8)	4	3	Spring washer (M8)	4	4	Plain washer (M8)	4	5	U bolt (M8)	2	6	Support panel	2
No.	Name	Quantity																				
1	Converter	1																				
2	Hexagon nut (M8)	4																				
3	Spring washer (M8)	4																				
4	Plain washer (M8)	4																				
5	U bolt (M8)	2																				
6	Support panel	2																				

## 4. WIRING AND PIPING

### ⚠ CAUTION

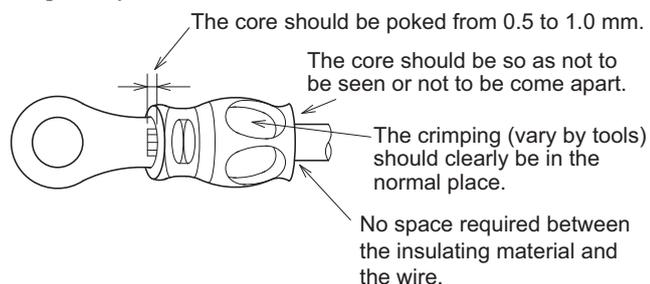
- ⚡ : Wiring work must be carried out with all power supplies turned off. Otherwise electric shock may result.
- ⏚ : Be sure to ground the Converter. (Class D grounding)

### 4.1 Before wiring


- (1) Power voltage for the converter must conform to that for the detector to be connected.
- (2) Power supply wiring
  - Use 1.25sq 600V vinyl insulated cable (JISC3307) or equivalent as power supply cable.
  - Use the main ground wire longer than the L1 and L2 lines.
  - Fix the part of the AC cable sheath that is more inner than the cord bushing by 3 mm or more.
  - Use a solderless terminal for the end of the AC cable. For the main ground wire, use the solderless terminal whose core wire and sheath are caulked separately (double caulking).
  - Connect the ground wire to the following:  
M4 screw / round terminal of the main ground wire / tooth lock washer / casing

#### Note


- Use the cable more than 0.75mm<sup>2</sup> for main ground (earth) line.
- For solderless terminal, doubly caulk the core and the sheath separately.



- Use “◎” type of solderless terminal.

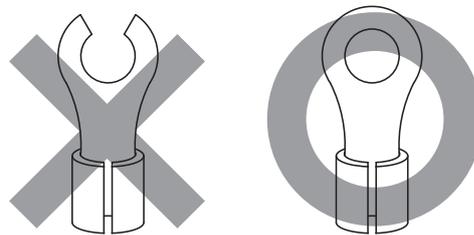

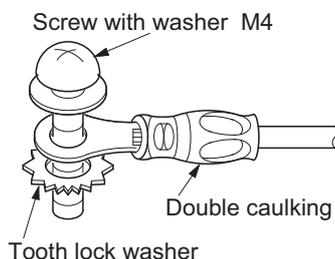Attach the solderless terminals to the grounding terminals with them between the tooth lock washer and screw with washer .  
(recommended tightening torque: 1.8 N·m)




- (3) Provide adequate protection of the exclusive cable (6 cores in total), which connects the detector to converter, using wire protection tube, etc. Separate these cables from the power cable (noise prevention).
- (4) Keep the wire for output signals as far as possible (more than 30cm) from the power line and heavy current lines to prevent induced noise. Also, wherever possible use a shielded cable and earth one point of the shield.

Note) For connection of the lines to the external terminals, use of ring crimp solderless terminal with insulation sleeve is recommended.


## 4.2 Wiring to terminals
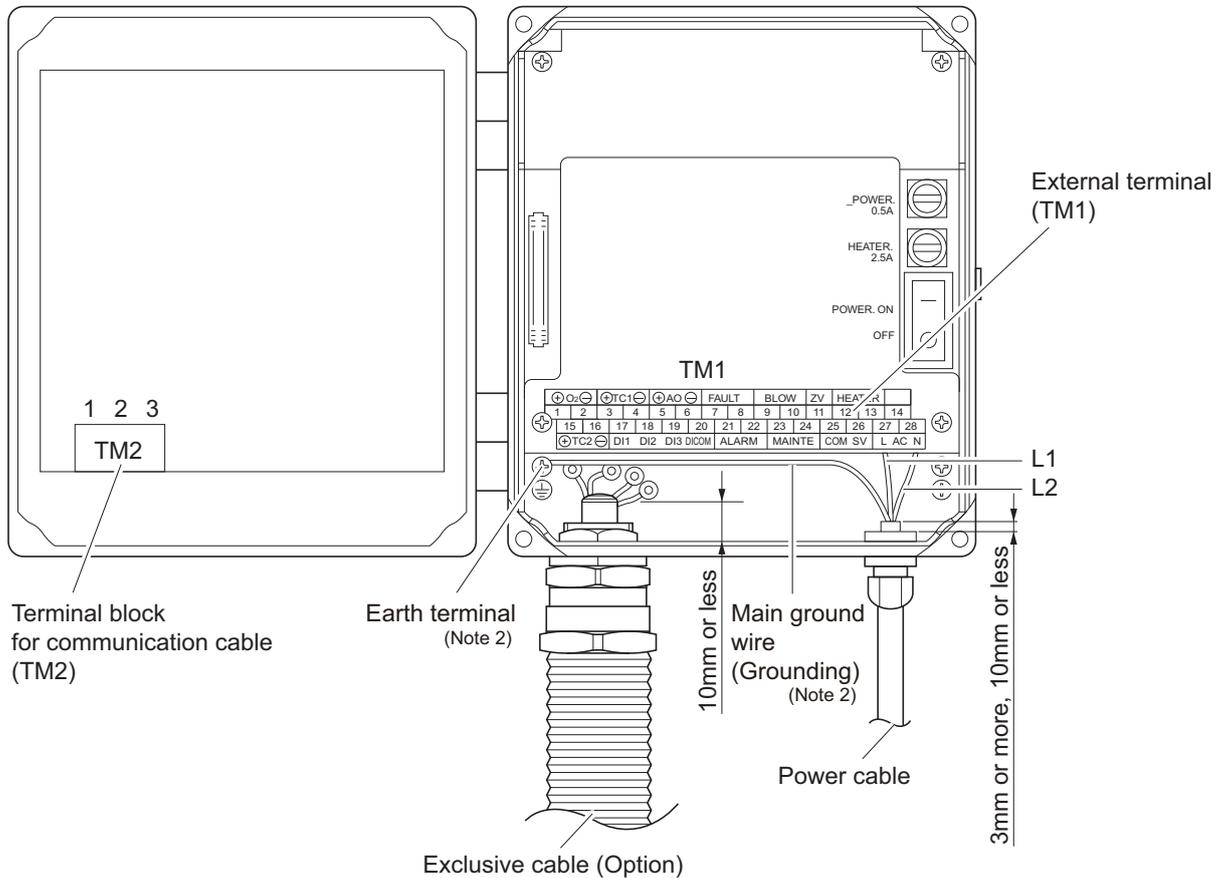
### 4.2.1 O<sub>2</sub> sensor input / Input method of O<sub>2</sub> sensor thermocouple



- Note 1: Fix the exclusive cable (O<sub>2</sub> sensor input / O<sub>2</sub> sensor thermocouple input) with the cable gland so that its sheath is 10 mm or less.  
When attaching the nut, turn it by hand until it does not move and then tighten it with a spanner by about 1/4 turn.
- Note 2: Wire a protective earth to earth terminal of above figure. (Class D, grounding resistance: 100Ω or less)


### 4.2.2 Cable gland and input and output lines

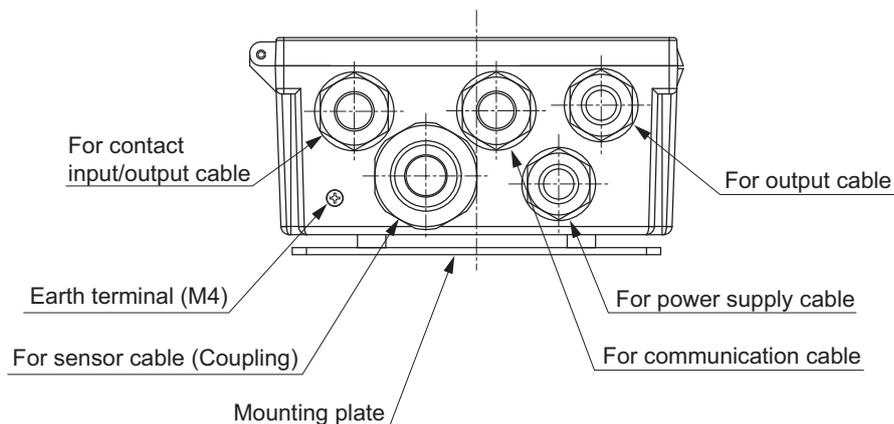




# 4.3 Wiring and piping diagram
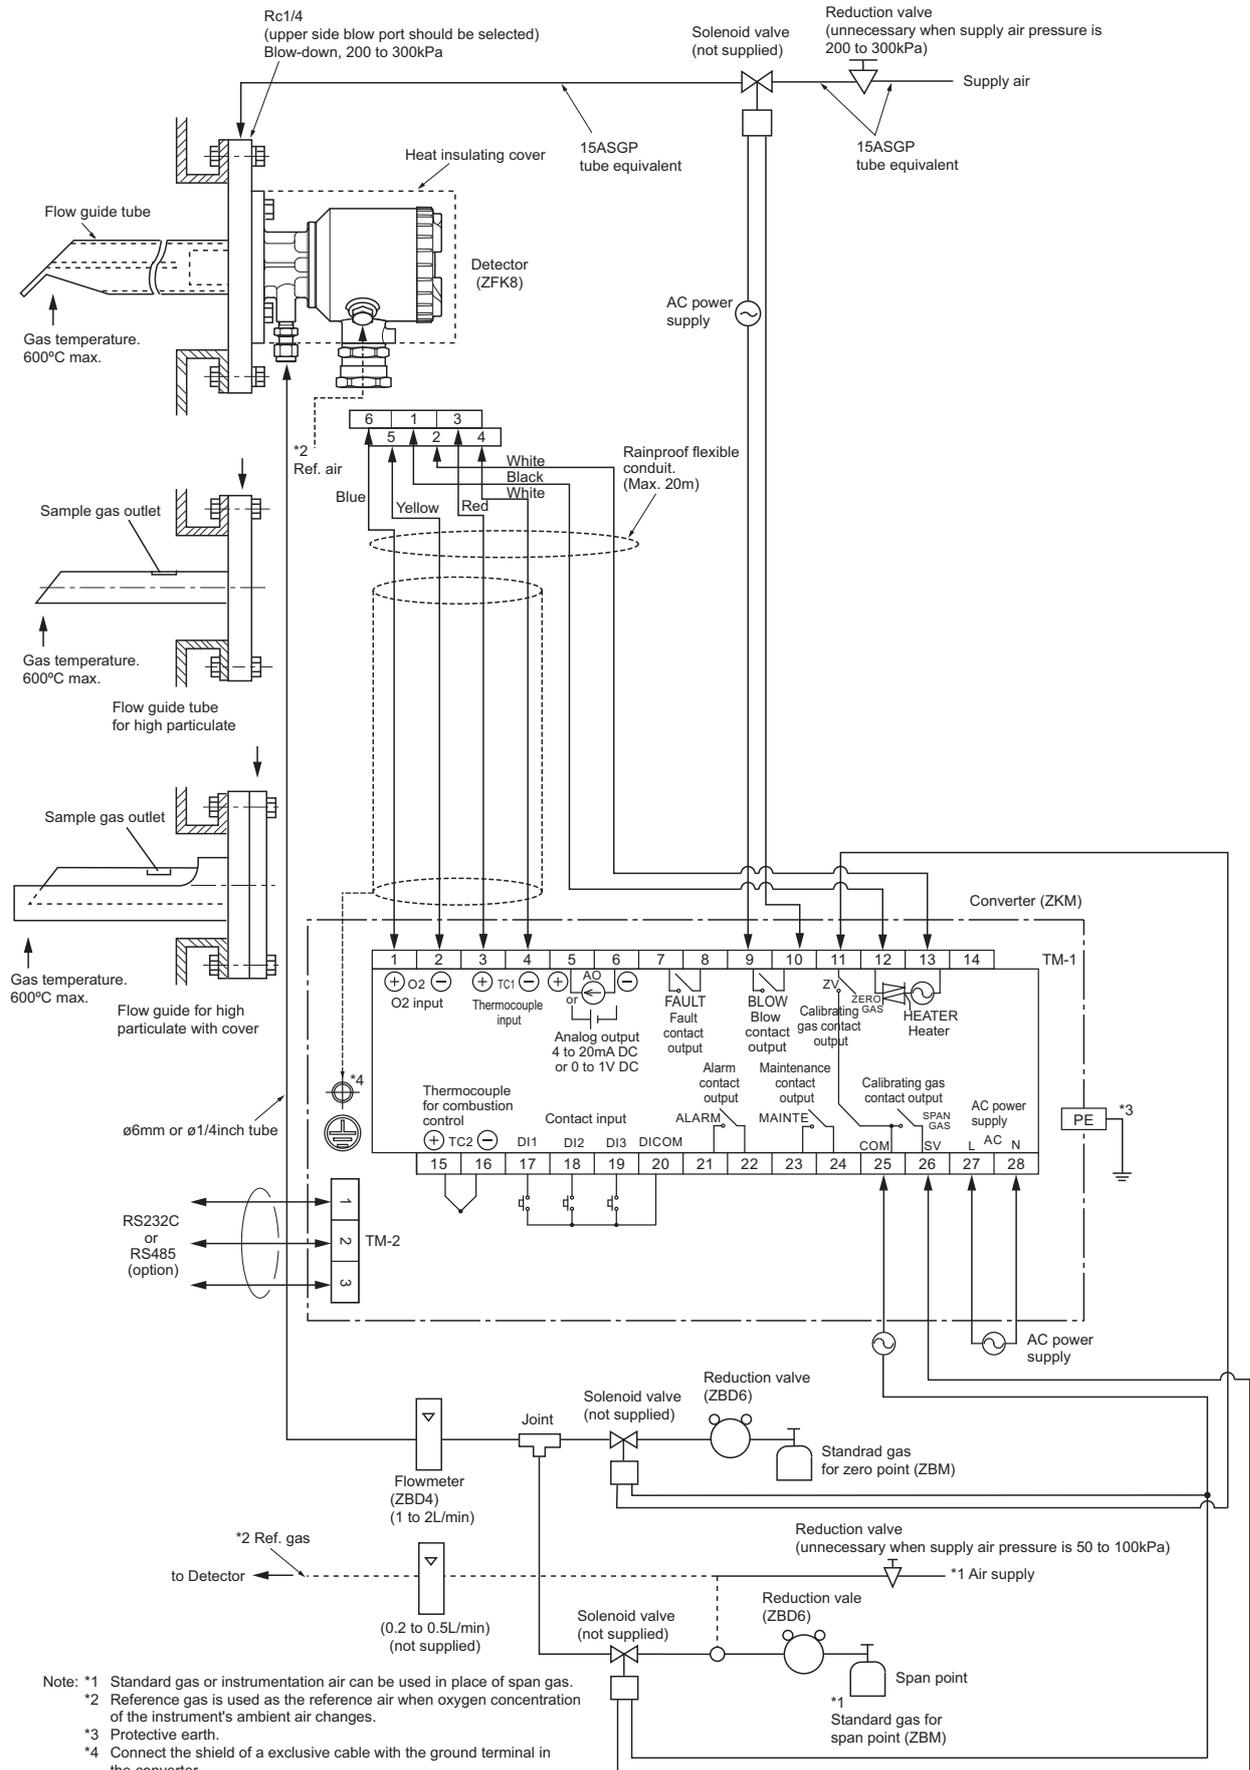
## 4.3.1.1 Flow guide tube system




### 4.3.1.2 Flow guide tube system (with valve)

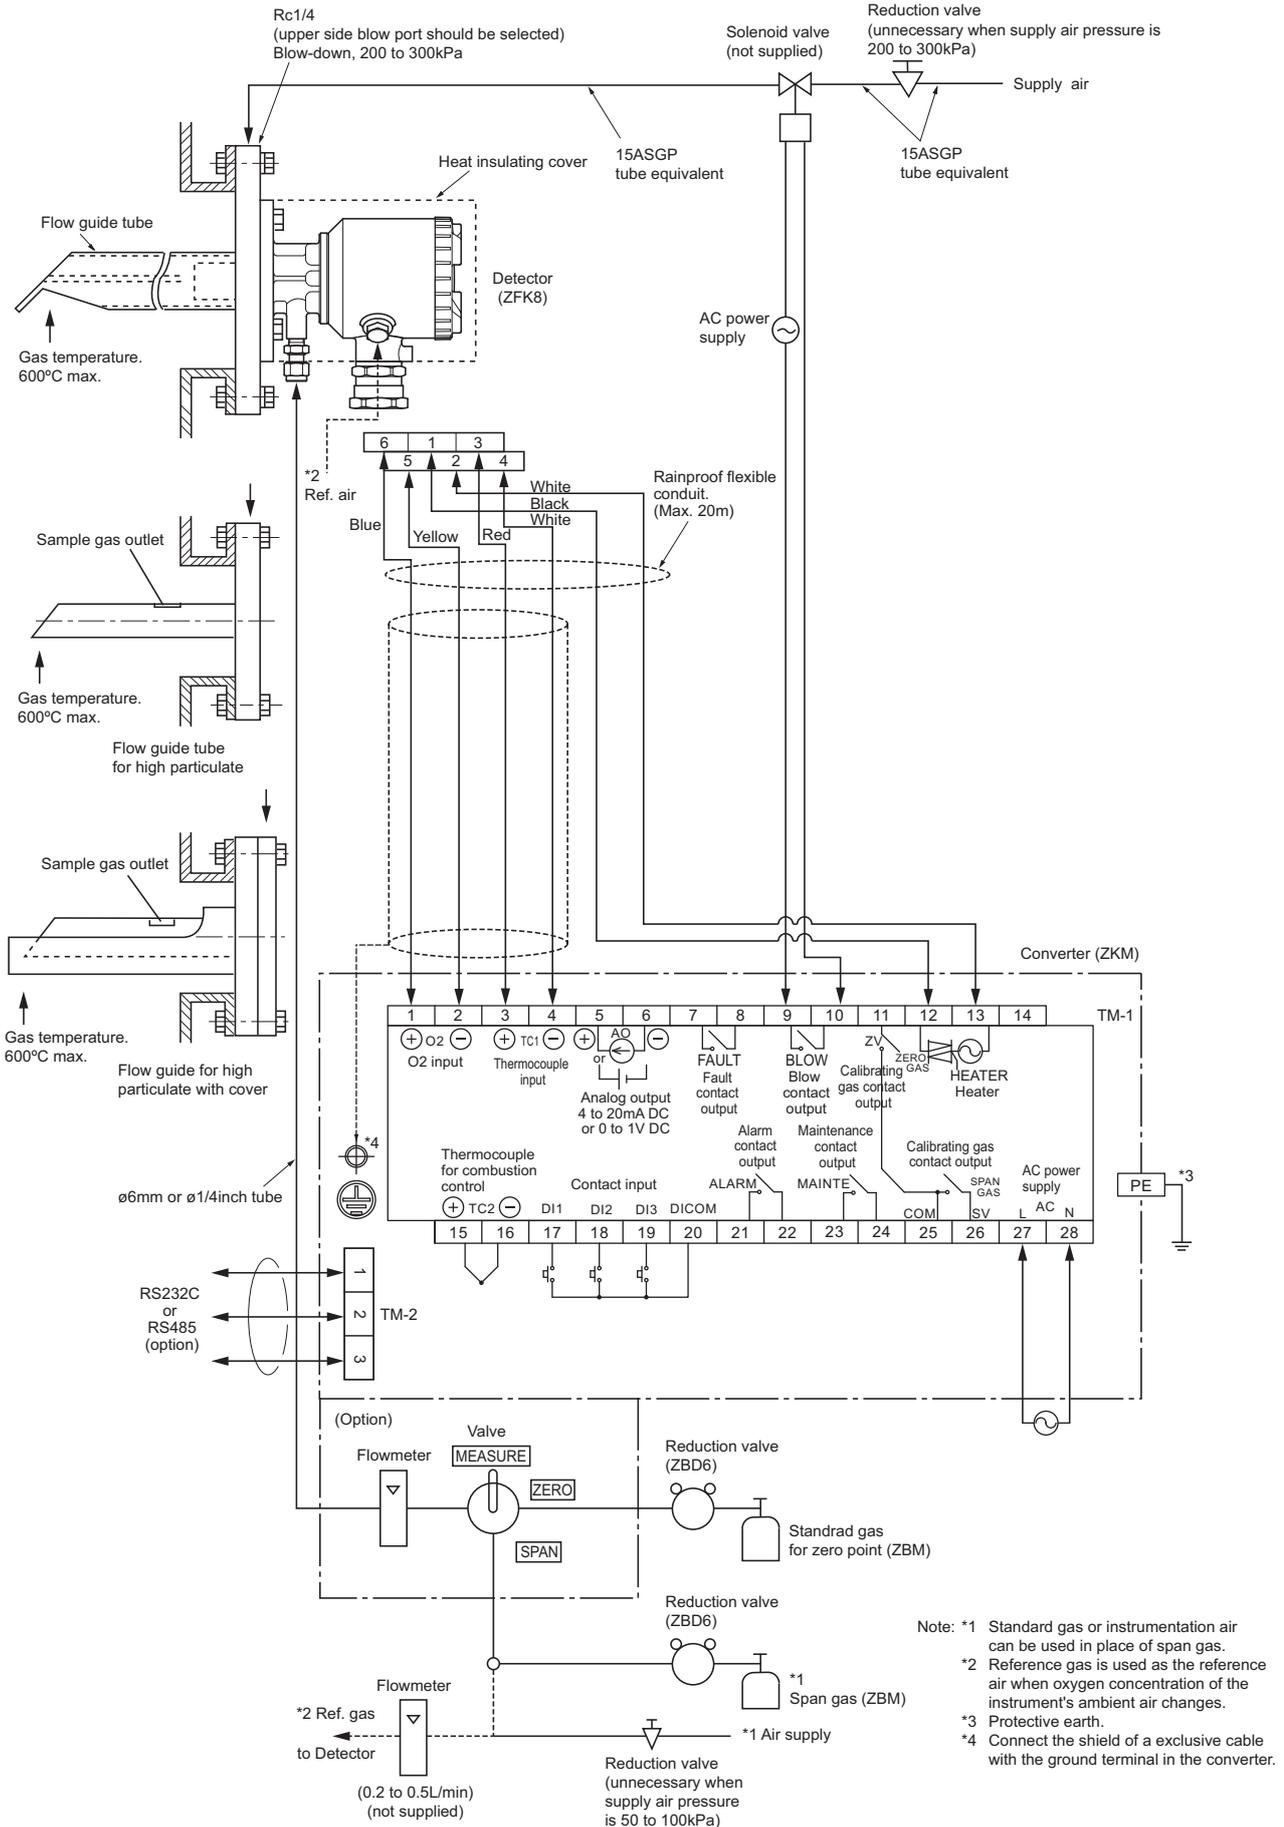


- Note: \*1 Standard gas or instrumentation air can be used in place of span gas.  
 \*2 Reference gas is used as the reference air when oxygen concentration of the instrument's ambient air changes.  
 \*3 Protective earth.  
 \*4 Connect the shield of an exclusive cable with the ground terminal in the converter.

### 4.3.1.3 Ejector system

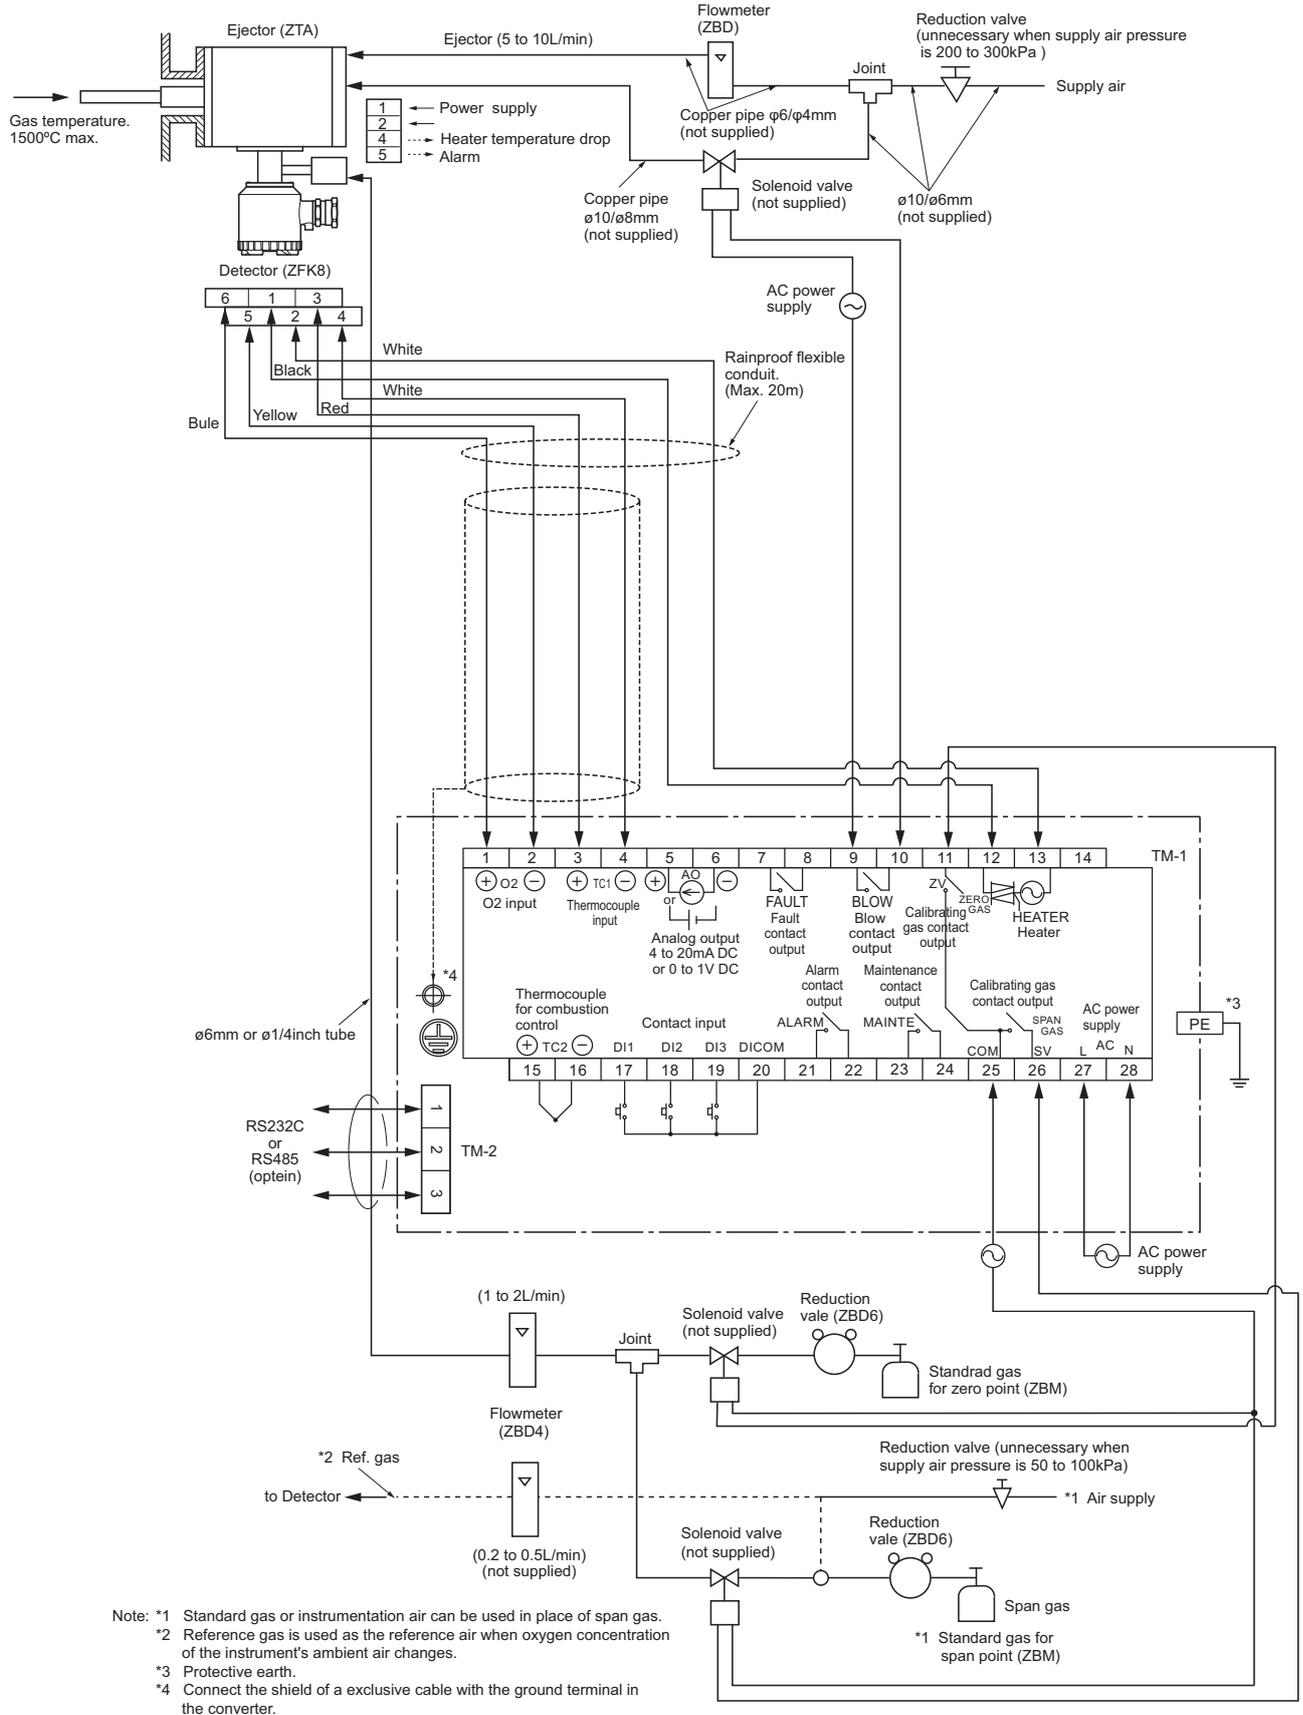

### 4.3.1.4 Ejector system (with valve)

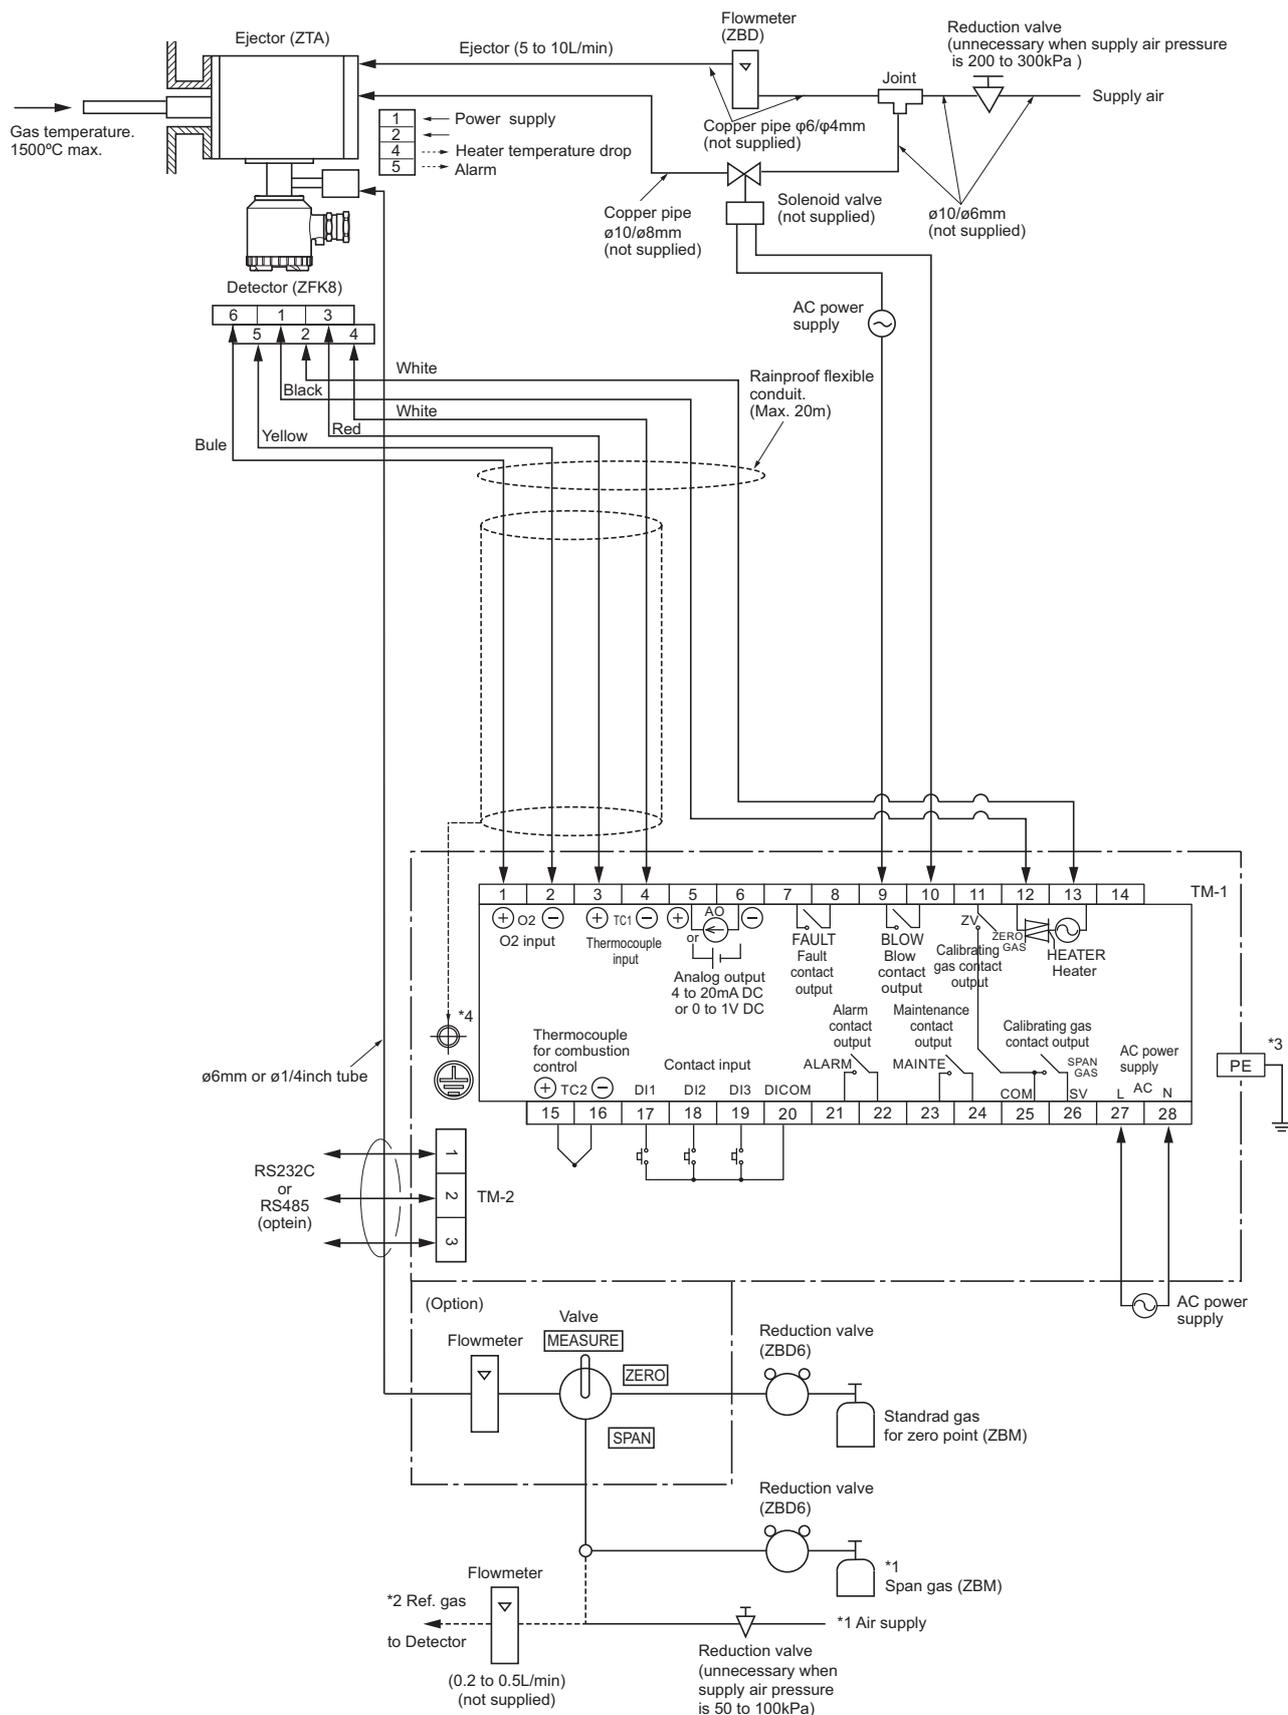

- Note: \*1 Standard gas or instrumentation air can be used in place of span gas.  
 \*2 Reference gas is used as the reference air when oxygen concentration of the instrument's ambient air changes.  
 \*3 Protective earth.  
 \*4 Connect the shield of an exclusive cable with the ground terminal in the converter.


---

## 4.4 Handling of standard gas (An article on separate order)

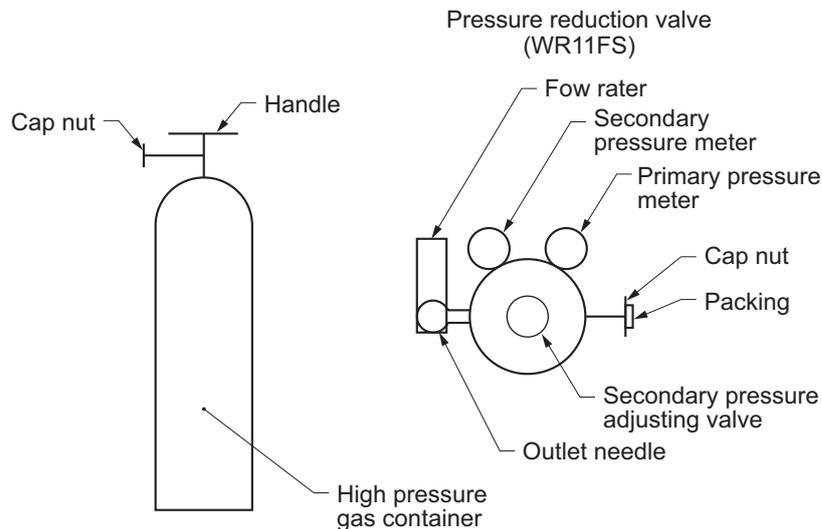---

### 4.4.1.1 Operation

- (1) Make sure the handle is closed on the high pressure gas container, then detach the cap nut.
- (2) Attach the high pressure gas container using the cap nut with packing of the pressure reduction valve.
- (3) Make sure the secondary pressure adjusting valve is turned fully counterclockwise (pressure not applied) and the outlet needle is turned fully clockwise (closed), then open the handle.
- (4) Turn the secondary pressure adjusting valve clockwise and set to the normal value of 20 to 30 kPa, then open the outlet needle slowly to allow the gas to flow.



### 4.4.1.2 Piping

- (1) The gas outlet of the pressure reduction valve is of Rc 1/4 (internal thread). Prepare the joint and tube (such as 6/4 teflon tube).

### 4.4.1.3 Caution

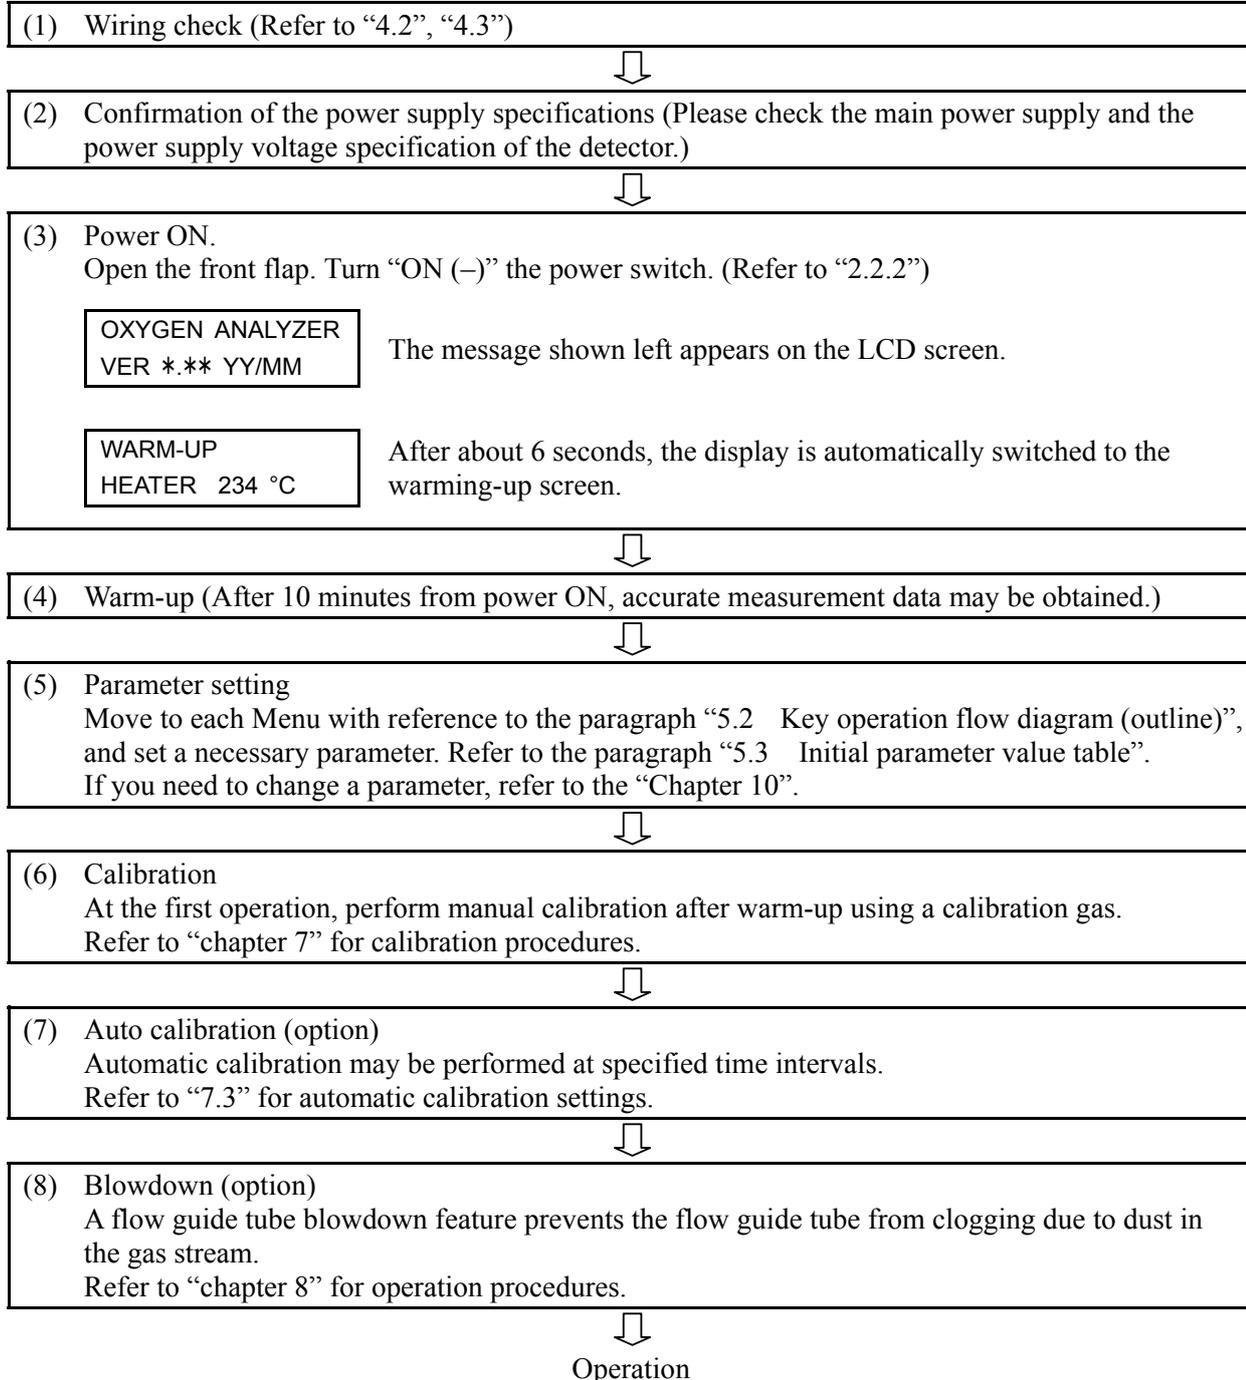
- (1) Fasten securely, so there is no gas leakage from the pressure reduction valve connection or from threaded part of the joint.
- (2) Store high pressure gas containers in a place protected from direct sunlight and rain.
- (3) After use, be sure to close the handle.

# 5. OPERATION


## 5.1 Preparation for operation


Preparation can be performed after installation or on the bench.


Note: If using the existing detector, refer to “11. HOW TO CHANGE THE SETTING”.




## 5.2 Key operation flow diagram (outline)

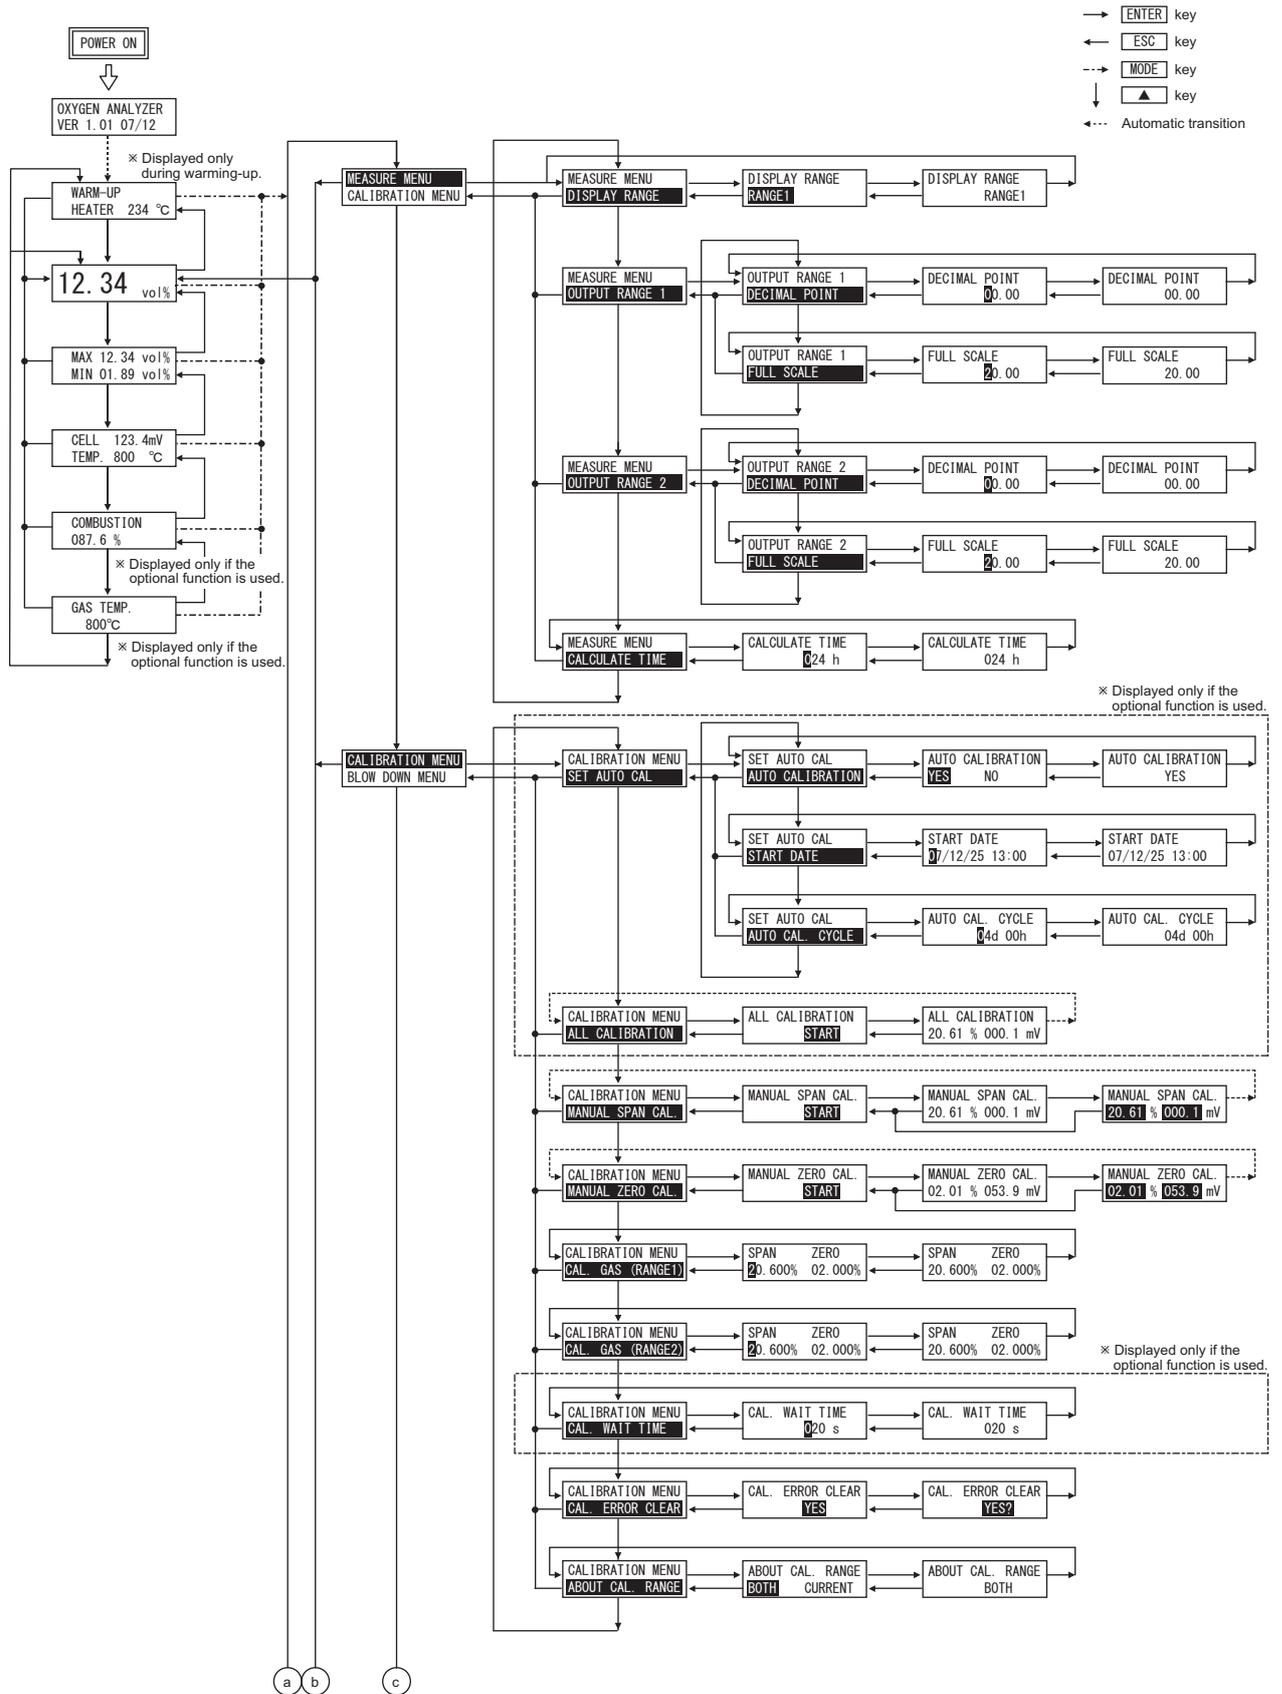

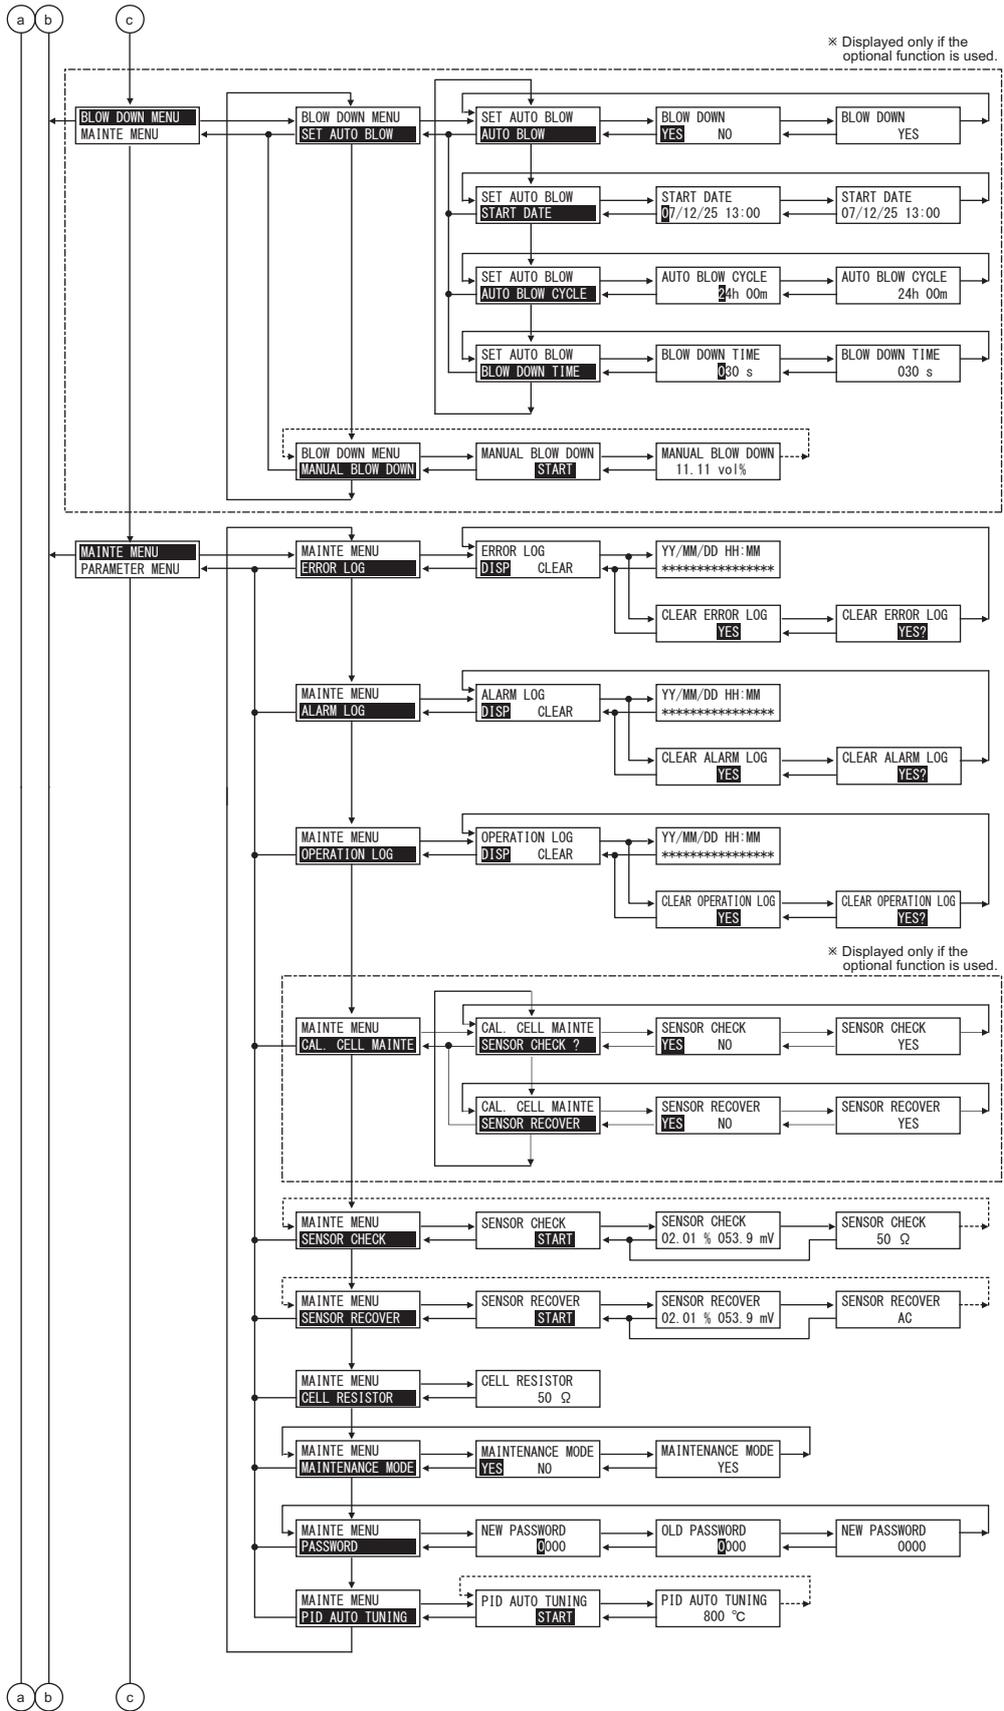

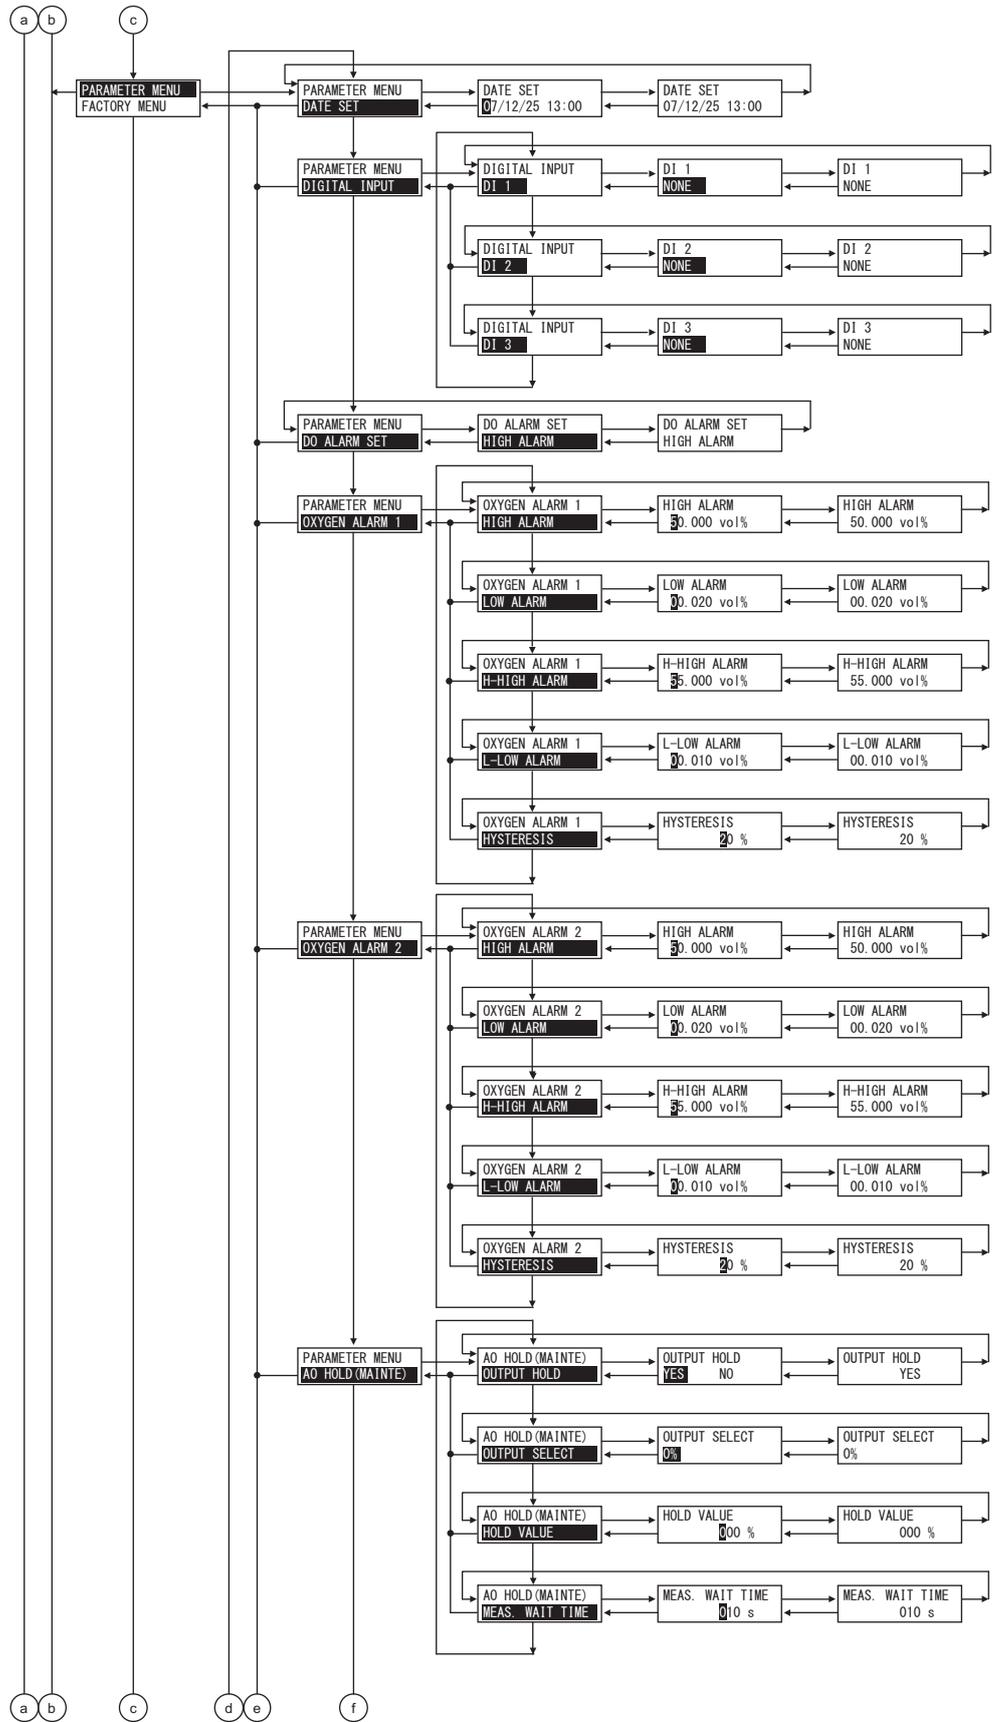

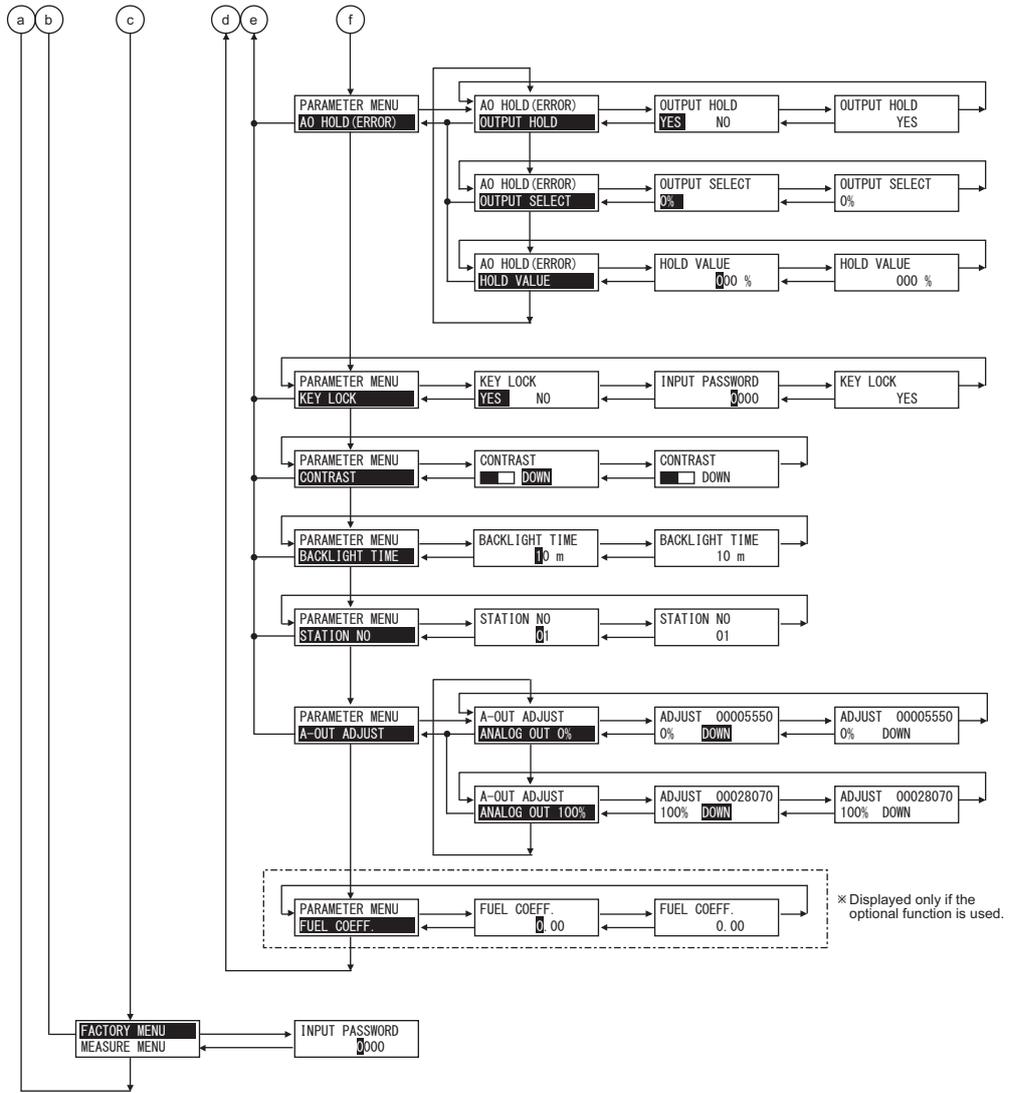

## 5.3 Initial parameter value table

### 5.3.1 Parameters related to measurement

Parameter setting	Displayed message	Range	Initial value	Reference paragraph
Display range	OUTPUT RANGE RANGE1 RANGE2	Range1 or Range2	Range-1	10.1.1
Decimal point position Range1 Range2	DECIMAL POINT 00.00	[00.00] [0.000]	[00.00]	10.1.2
Full scale Range1 Range2	FULL SCALE 25.00	2 to 50 in 1 vol% steps	25.00 vol%	10.1.3
Calculation time of maximum and minimum values	CALCULATE TIME 024 h	0 to 240 hour in 1-hour steps	24 hour	10.1.4

### 5.3.2 Parameters related to calibration

Parameter setting	Displayed message	Range	Initial value	Reference paragraph
Auto calibration function (Displayed if the option is provided.)	AUTO CALIBRATION YES <b>NO</b>	YES or NO	Invalid (Auto calibration function: Invalid)	10.2.1
Date and time for starting automatic calibration (Displayed if the option is provided.)	START DATE 99/01/01 00:00	Date and time in the future in the calendar	99/01/01 00:00	10.2.2
Automatic calibration cycle time (Displayed if the option is provided.)	AUTO CAL. CYCLE 07d 00h	00d 00h to 99d23h (h: 00 to 23)	07d 00h	10.2.3
Calibration gas concentration-1 calibration gas concentration-2	SPAN ZERO 20.600% 02.000%	Span: 00.010 to 50.000 vol% Zero: 00.010 to 25.000 vol% in 0.001 vol% steps	Span: 20.600 vol% Zero: 02.000 vol%	10.2.7
Calibration wait time	CAL. WAIT TIME 020 s	10 to 300 sec. in 1 sec. steps	20 sec.	10.2.8
Calibration range setting	ABOUT CAL. RANGE <b>BOTH</b> CURRENT	Set calibration range Current or both range	BOTH	10.2.10

### 5.3.3 Parameters related to blowdown (displayed if the option is provided)

Parameter setting	Displayed message	Range	Initial value	Reference paragraph
Automatic blowdown function	BLOW DOWN YES <input checked="" type="checkbox"/> NO	YES or NO	NO (The automatic blowdown function is invalid.)	10.3.1
Date and time for starting automatic blowdown	START DATE 99/01/01 00:00	Date and time in the future in the calendar	99/01/01 00:00	10.3.2
Automatic blowdown cycle time	AUTO BLOW CYCLE 24h 00m	00h 00m to 99h 59m (m: 00 to 59)	24h 00m	10.3.3
Blowdown time	BLOW DOWN TIME 030 s	0 to 999 sec. in 1 sec. steps	30 sec.	10.3.4

### 5.3.4 Parameters related to maintenance

Parameter setting	Displayed message	Range	Initial value	Reference paragraph
Sensor check function for calibration	SENSOR CHECK YES <input checked="" type="checkbox"/> NO	YES or NO	NO (Sensor check function for calibration is invalid.)	10.4.7
Sensor recovery function for calibration	SENSOR RECOVER YES <input checked="" type="checkbox"/> NO	YES or NO	NO (Sensor recovery function for calibration is invalid.)	10.4.8
Password	NEW PASSWORD 0123	0000 to 9999	0000	10.4.13

## 5.3.5 Other parameters

Parameter setting	Displayed message	Range	Initial value	Reference paragraph
Current date and time	DATE SET 00/00/01 00:00	Date and time in the calendar	(00/01/01 00:00)	10.5.1
Contact inputs 1 to 3	DI 1 NONE	DI1 to DI3 [NONE] [BLOW DOWN ON] [HEATER OFF] [PROHIBIT CAL.] [REMOTE CAL.] [REMOTE HOLD] [CALCULATE REST] [OUTPUT RANGE]	DI1 [NONE] DI2 [NONE] DI3 [NONE]	10.5.2
Alarm contact output	DO ALARM SET ALARM NONE	[ALARM NONE] [HIGH ALARM] [LOW ALARM] [H-HIGH ALARM] [L-LOW ALARM] [H/L ALARM] [HH/LL ALARM]	[ALARM NONE]	10.5.3
Upper limit of oxygen concentration Range-1 Range-2	HIGH ALARM 50.000 vol%	0.001 to 55.000 vol% in 0.001 vol% steps	50.000 vol%	10.5.4
Lower limit of oxygen concentration Range-1 Range-2	LOW ALARM 00.020 vol%	0.001 to 55.000 vol% in 0.001 vol% steps	00.020 vol%	10.5.5
Upper 2 limit of oxygen concentration Range-1 Range-2	H-HIGH ALARM 55.000 vol%	0.001 to 55.000 vol% in 0.001 vol% steps	55.000 vol%	10.5.6
Lower 2 limit of oxygen concentration Range-1 Range-2	L-LOW ALARM 00.010 vol%	0.001 to 55.000 vol% in 0.001 vol% steps	00.010 vol%	10.5.7
Hysteresis (Oxygen concentration alarm) Range-1 Range-2	HYSTERESIS 10 %	0 to 20 % in 1 % steps	10 %	10.5.8
Analog output hold function Maintenance hold Error hold	OUTPUT HOLD YES NO	YES or NO	NO (Analog output hold function is invalid.)	10.5.9 10.5.13
Output value of analog output hold Maintenance hold Error hold	OUTPUT SELECT 0%	[0 %] (4 mA/0V) [100 %] (20 mA/1V) [Last output value] [Setting value]	[0 %](4 mA/0V)	10.5.10 10.5.14
Setting the value of analog output hold Maintenance hold Error hold	HOLD VALUE 00 %	0 to 100 % in 1 % steps	0 %	10.5.11 10.5.15

Parameter setting	Displayed message	Range	Initial value	Reference paragraph
Measurement recovery time	MEAS. WAIT TIME 010 s	0 to 300 sec. in 1 sec. steps	10 sec.	10.5.12
Key lock function	KEY LOCK YES NO	YES or NO	No (Key lock function is invalid.)	10.5.16
Adjustment of brightness	CONTRAST  DOWN	(0 to 100 %)	50 %	10.5.17
Automatic OFF time	BACKLIGHT TIME 10 m	0 to 99 min. in 1 min. steps	10 min.	10.5.18
Station No.	STATION NO 01	0 to 99	01	10.5.19
FUEL COEFFICIENT	FUEL COEFF. 0.70	0.00 to 1.99	0.70	10.5.22

# 6. OPERATION START AND STOP

---

## 6.1 Operation start

---

After correct wiring and piping has been completed, turn the power switch in the converter ON, and measuring operation will begin.

Note: 10 min. of warm-up time is necessary after power ON.

### Caution of before starting

- (1) Furnace operation should be started after an elapsed time of 10 minutes from the point of turning "ON" the power supply of this unit
- (2) When a detector is to be installed in a furnace already in operation, take care to blow out harmful gas from the furnace and then install the fully warmed up detector quickly.

## 6.2 Operation stop

---

### 6.2.1.1 When a process (furnace etc.) is to be shutdown for a short time i.e. a week or so

It is strongly recommended to keep the detector in operation to avoid possible deterioration of platinum electrodes in the detector and detector break-down due to repetition of power ON-OFF in a moisture absorption state.

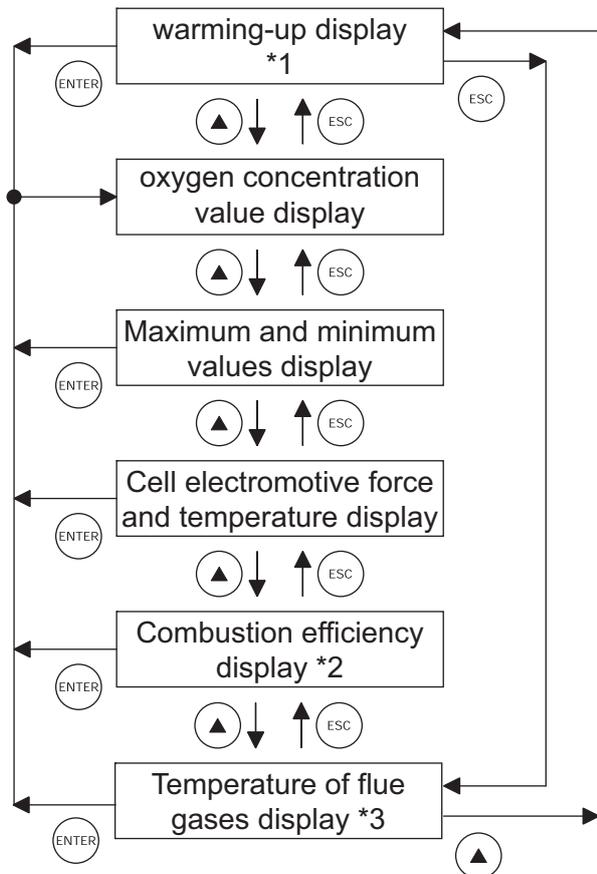
In case of the detector with an ejector (option), shutdown the air source.

### 6.2.1.2 When a process (furnace etc.) is to be shutdown for a long time

Turn OFF the power switch of the instrument after gas in the furnace has been replaced completely by ambient air.

## 6.3 Actions during operation

While the instrument is operating, the following displays can be changed.



\*1: This screen is displayed only during warm-up process.

Analog output during warming-up is output at 4 mA/0 V constantly.

\*2: This optional screen is displayed only if the option is selected.

Combustion efficiency is calculated using the oxygen concentration, temperature of flue gases, and fuel coefficient in this function.

\*3: This optional screen is displayed only if the option is selected.

Temperature of flue gases is displayed, which is detected by the temperature sensor (R-type thermocouple) of the auxiliary input.

## 6.4 Check the contents of display

The condition of the unit is displayed on the left of the LCD with three letters. The maximum of three items are displayed on one display. If there are four or more items, “▼” is displayed at the bottom of the screen. Scroll the screen with the  key to display the fourth and subsequent items.

The unit displays the following three pieces of information:

- (1) Condition information (“6.4.1”), (2) Error information (“6.4.2”), (3) Alarm information (“6.4.3”)

### 6.4.1 Check of state information

Display message	State	Remarks
WUP	Warm-up	Appears during warm-up
CAL	Auto calibration	Appears during auto calibration
S	Span calibration	Displayed together with “CAL” or “RIC” during span calibration.
Z	Zero calibration	Displayed together with “CAL” or “RIC” during zero calibration.
SCK	Sensor check	Displayed during sensor check.
SRC	Sensor recovery	Displayed during sensor recovery.
BLW	Automatic blowdown	Displayed during automatic blowdown.
RIC	Rich mode	Combustion efficiency option Displayed when electromotive force is 200mV but no more than 260mV
KYL	Key Lock	Displayed during key lock
RHO	Remote heater is off.	Displayed while remote heater is off.
RCP	Remote calibration is prohibited.	Displayed while remote calibration is prohibited.
RAH	Remote analog output hold	Displayed during remote analog output hold.
RCL	Remote calibration	Displayed during remote calibration.
RBL	Remote blowdown	Displayed during remote blowdown.

## 6.4.2 Checking the error information

Display message	State	Remarks
Er1	Fault of heater temperature	Appears when control temperature of the heater exceeds the set range. The heater control is stopped.
Er2	Disconnection detection	Appears when disconnection is detected at the sensor, or thermocouples for temperature control. The heater control is stopped.
Er3	Sensor error	Appears when the A/D value is saturated.
Er4	Span calibration error	Appears when the span calibration is abnormal. (The calibration gas is unstable. / The calibration factor setting is inappropriate.)
Er5	Zero calibration error	Appears when the zero calibration is abnormal. (The calibration gas is unstable. / The calibration factor setting is inappropriate.)

## 6.4.3 Checking the alarm information

Display message	State	Remarks
ALM	Oxygen concentration error	Appears when the oxygen concentration exceeds any of specified HH / High / Lower / LL limit values. (Refer to “10.5.4” to “10.5.8”)
H	High limit error	Appears together with ALM.
L	Lower limit error	Appears together with ALM.
HH	HH limit error	Appears together with ALM.
LL	LL limit error	Appears together with ALM.

You can select one of the following seven alarms to output to the alarm contact (Contact No. 21 and 22 of the external terminal blocks) when an oxygen concentration error occurs.

- (1) [Not used] : No alarm is output to the contact output.
- (2) [High limit alarm] : Alarm contact is output when an high limit alarm occurs.
- (3) [Lower limit alarm] : Alarm contact is output when a lower limit alarm occurs.
- (4) [HH limit alarm] : Alarm contact is output when an HH limit alarm occurs.
- (5) [LL limit alarm] : Alarm contact is output when a LL limit alarm occurs.
- (6) [High/lower limit alarm] : Alarm contact is output when an high or lower limit alarm occurs.
- (7) [HH / LL limit alarm] : Alarm contact is output when an HH or LL limit alarm occurs.

---

## 6.5 Oxygen detector standard output voltage

---

O <sub>2</sub> concentration (%)	Output value (mV)	O <sub>2</sub> concentration (%)	Output value (mV)	O <sub>2</sub> concentration (%)	Output value (mV)
0.01	176.38	5.0	32.73	25.0	-4.475
0.1	123.15	10.0	16.71	30.0	-8.689
0.5	85.95	15.0	7.333	40.0	-15.34
1.0	69.93	20.0	0.683	50.0	-20.50
1.5	60.56	20.6	0	–	–
2.0	53.91	21.0	-0.445	–	–

# 7. CALIBRATION

In order to maintain good accuracy, proper calibration using standard gas is necessary. The following 4 methods of calibration are provided.

- (1) Manual calibration (“7.2”), (2) Auto calibration (option) (“7.3”),
- (3) Remote calibration (“7.4”), (4) All calibration (option) (“7.5”)

---

## 7.1 Preparation

---

Check of piping and wiring

Perform wiring and piping correctly referring to Item “4.3”. At this time, the main valve of standard gas should be left open. Since high pressure is present at piping connections, use cap nut joints and take special care with regard to air-tightness. Calibration gas flow should be  $1.5 \pm 0.5$  L/min.

Setting of calibration gas concentration

Referring to “10.2.7 Calibration gas setting” set the oxygen concentration in standard gas cylinder to be used.

Setting of calibration range

Set the range for calibration according to “10.2.10 Operation setting screen of calibration range.”

## 7.2 Manual calibration

### Description

Span/zero is calibrated once by key operation.

Calibration must be made in the order of span and zero.

Perform calibration after a calibration gas is supplied to the detector and the output signal of the detector becomes stable.

If the unit does not have an auto calibration function, the operator shall perform open and close operations, or adjust the flow rate of calibration gas.

During calibration, if the analog output hold function (maintenance hold) is enabled, the analog output signal is held at the set value. Even after the calibration, the hold is maintained during the set time as a measurement recovery time.

Procedure	Operation (example)	Executes span calibration and zero calibration.	
	Key operation	Description	Displayed message (LCD)
(1)	ENTER	Display the screen on the right in accordance with the key operation summary and press the  key, the manual span calibration screen appears.	CALIBRATION MENU <b>MANUAL SPAN CAL.</b>
(2)	ENTER	Press the  key to perform manual span calibration. If supplying calibration gas manually (without the auto-calibration function) The operator shall open the span gas valve manually and adjust the flow rate to $1.5 \pm 0.5$ L/min. In the case of unit with the auto calibration function, an external solenoid valve can be driven by using the contact output signal from the terminal block.	MANUAL SPAN CAL. <b>START</b>
(3)		Oxygen concentration value and cell electromotive force are displayed. Wait until the oxygen concentration is stabilized.	MANUAL SPAN CAL. 20.61 % 000.1 mV
(4)	ENTER	Press the  key to determine the span calibration factor. During the process, the oxygen concentration value and cell electromotive force are highlighted.	MANUAL SPAN CAL. <b>20.61</b> % <b>000.1</b> mV
(5)		After the calibration is completed, the display returns to the screen on the right.	CALIBRATION MENU <b>MANUAL SPAN CAL.</b>
(6)		If the operator opened the span gas valve manually, close the valve.	
(7)	ENTER	Display the screen on the right in accordance with the key operation summary and press the  key, the manual zero calibration screen appears.	CALIBRATION MENU <b>MANUAL ZERO CAL.</b>

(8)		<p>Press the  key to perform manual zero calibration.</p> <p>If supplying calibration gas manually (without the auto-calibration function)</p> <p>The operator shall open the span gas valve manually and adjust the flow rate to <math>1.5 \pm 0.5</math> L/min.</p> <p>In the case of unit with the auto calibration function, an external solenoid valve can be driven by using the contact output signal from the terminal block.</p>	<div style="border: 1px solid black; padding: 2px; text-align: center;">       MANUAL ZERO CAL.  <b>START</b> </div>
(9)		<p>Oxygen concentration value and cell electromotive force are displayed.</p> <p>Wait until the oxygen concentration is stabilized.</p>	<div style="border: 1px solid black; padding: 2px; text-align: center;">       MANUAL ZERO CAL.        2.01 % 053.9 mV     </div>
(10)		<p>Press the  key to determine the zero calibration factor.</p> <p>During the process, the oxygen concentration value and cell electromotive force are highlighted.</p>	<div style="border: 1px solid black; padding: 2px; text-align: center;">       MANUAL ZERO CAL.  <b>2.01</b> % <b>053.9</b> mV     </div>
(11)		<p>After the calibration is completed, the display returns to the screen on the right.</p>	<div style="border: 1px solid black; padding: 2px; text-align: center;">       CALIBRATION MENU  <b>MANUAL ZERO CAL.</b> </div>
(12)		<p>If the operator open the zero gas valve manually, close the valve.</p>	

How to cancel

Press the  key to cancel the operation.

After the cancellation, be sure to close the valves of span gas and zero gas.

## 7.3 Auto calibration (option)

### Description

Calibration is performed at time intervals set in advance.

The solenoid valve is driven by contact signal to feed the standard gas for automatic calibration with span gas and zero gas.

“CAL” is displayed on the left of the measurement screen during automatic calibration.

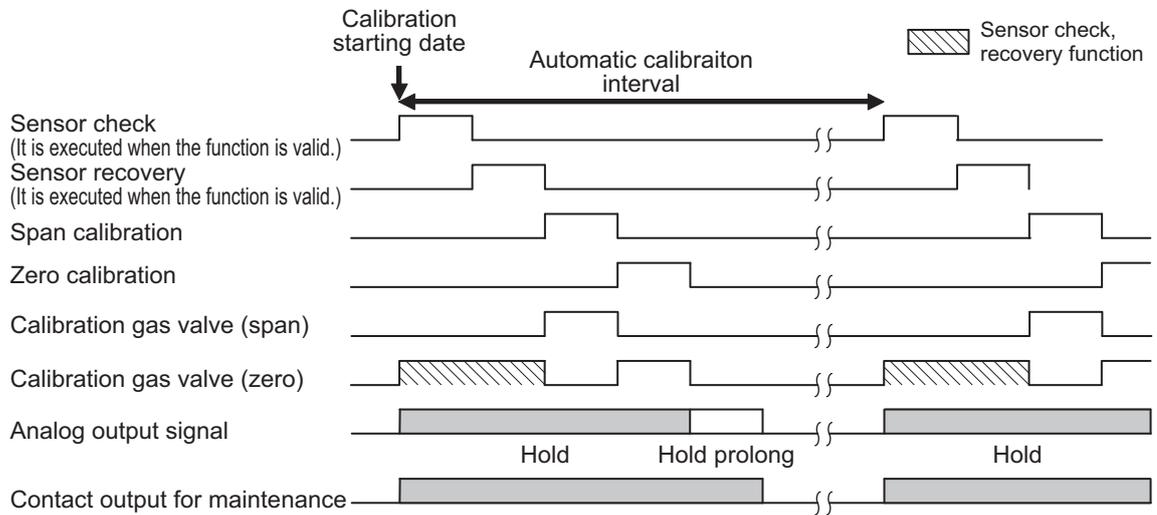
If the output signal hold is set, the output signal is held to the set value during calibration.

After the calibration, the hold is maintained until the time set in the measurement waiting time elapses.

For automatic calibration, it is necessary to set “10.2.2 Date and time for starting automatic calibration (option)”, “10.2.3 Cycle time setting of automatic calibration (option)”, “10.2.7 Calibration gas setting”.

To perform sensor maintenance (sensor check, sensor recovery), “10.4.7 Sensor check setting for calibration (option)” and “10.4.8 Sensor recovery setting for calibration (option)” are required.

Refer to Sections “4.2” and “4.3” for the wiring of solenoid valves.



Procedure	Operation (example)	Setting the automatic calibration so that it is performed every four days from 13:00, 08/02/25	
	Key operation	Description	Displayed message (LCD)
(1)	⏎	Display the screen on the right in accordance with the key operation summary and press the ⏎ key.	CALIBRATION MENU <b>SET AUTO CAL</b>
(2)	⏎	Press the ⏎ key. The auto calibration valid/invalid setting screen appears.	SET AUTO CAL <b>AUTO CALIBRATION</b>
(3)	▶ ⏎	Use the ▶ key to select the auto calibration valid (YES). Press the ⏎ key to set the value.	AUTO CALIBRATION <b>YES</b> NO
(4)	⏎	Press the ⏎ key to set the value.	AUTO CALIBRATION YES

(5)		The screen on the right appears.	<div style="border: 1px solid black; padding: 2px;">           SET AUTO CAL  <b>AUTO CALIBRATION</b> </div>
(6)	 	<p>Press the  key to display the screen on the right and press the  key.</p> <p>The date and time for starting automatic calibration screen appears.</p>	<div style="border: 1px solid black; padding: 2px;">           SET AUTO CAL  <b>START DATE</b> </div>
(7)	   	<p>Use the  and  key to set the auto calibration starting date and time. (Set the date and time of the future.)</p> <p>Press the  key to set the value.</p>	<div style="border: 1px solid black; padding: 2px;">           START DATE  <b>08/02/25 13:00</b> </div>
(8)		Press the  key.	<div style="border: 1px solid black; padding: 2px;">           START DATE            08/02/25 13:00         </div>
(9)		The screen on the right appears.	<div style="border: 1px solid black; padding: 2px;">           SET AUTO CAL  <b>START DATE</b> </div>
(10)	 	<p>Press the  key to display the screen on the right and press the  key.</p> <p>The cycle time setting of automatic calibration screen appears.</p>	<div style="border: 1px solid black; padding: 2px;">           SET AUTO CAL  <b>AUTO CAL. CYCLE</b> </div>
(11)	   	<p>Use the  and  key to set the auto calibration cycle time.</p> <p>Press the  key to set the value.</p>	<div style="border: 1px solid black; padding: 2px;">           AUTO CAL. CYCLE  <b>04d 00h</b> </div>
(12)		Press the  key.	<div style="border: 1px solid black; padding: 2px;">           AUTO CAL. CYCLE            04d 00h         </div>
(13)		The display returns to the screen on the right.	<div style="border: 1px solid black; padding: 2px;">           SET AUTO CAL  <b>AUTO CAL. CYCLE</b> </div>

How to cancel

Press the  key to cancel the operation.

Note


Automatic calibration is not performed under the following conditions.

- Warm-up is being performed.
- Contact of “Prohibition of calibration” is being input.
- Contact of “Heater off” is being input.

## 7.4 Remote calibration

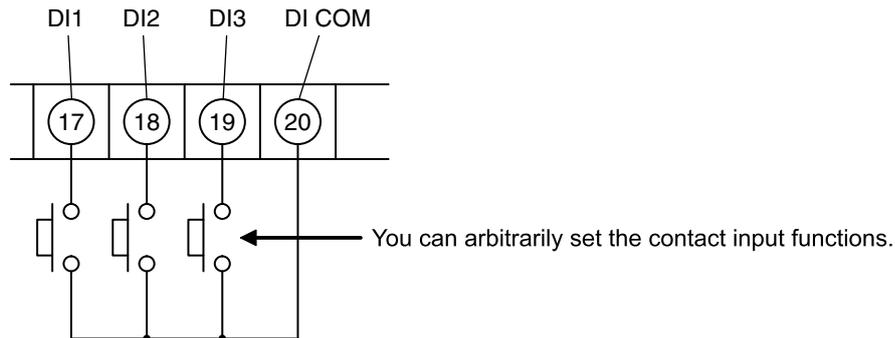You can perform all calibration by the contact input of the external terminal block. To perform remote calibration, install piping and wiring for the standard gas cylinder and the solenoid valve according to Section 4.

- (1) Set one of the contact inputs DI 1 to 3 to “Remote calibration” in accordance with the following operation procedure.
- (2) Close the contact set to the “Remote contact” for one second or more (depending on the settings of (17) to (19) and (20) of the terminal block).
- (3) Remote calibration is started. “RCL” is displayed on the left of the display panel, which disappears when the calibration is completed.



You can arbitrarily set the contact inputs (17), (18), (19) and (20) of the external terminal block (see “10.5.2 Contact input setting”).

Piping and wiring for the standard gas cylinder and the solenoid valve shall be installed.

### Description

You can perform all calibration by the contact input using this function. The solenoid valve is driven by contact signal from the terminal block to feed the standard gas for automatic calibration with span gas and zero gas. Refer to Sections “4.2” and “4.3” for the wiring of solenoid valves.

Procedure	Operation (example)	Executes remote calibration.	
	Key operation	Description	Displayed message (LCD)
(1)	⏏	Display the screen on the right in accordance with the key operation summary and press the ⏏ key. The contact input setting screen appears.	<div style="border: 1px solid black; padding: 2px; width: fit-content; margin: 0 auto;">                     PARAMETER MENU  <b>DIGITAL INPUT</b> </div>
(2)	▲ ⏏	Press the ▲ key several times and select one of DI 1 to DI 3. Press the ⏏ key.	<div style="border: 1px solid black; padding: 2px; width: fit-content; margin: 0 auto;">                     DIGITAL INPUT  <b>DI *</b> </div>
(3)	⏏	Press the ⏏ key. Contact is set.	<div style="border: 1px solid black; padding: 2px; width: fit-content; margin: 0 auto;">                     DI 1  <b>NONE</b> </div>
(4)	▲ ⏏	Press the ▲ key several times and select “REMOTE CAL.”. Press the ⏏ key to set the value.	<div style="border: 1px solid black; padding: 2px; width: fit-content; margin: 0 auto;">                     DI 1  <b>REMOTE CAL.</b> </div>

(5)		Press the  key.	
(6)		<p>The screen on the right appears.</p> <p>Press the  key several times and return to the measurement screen.</p>	
(7)		Close the contact set to the “REMOTE CAL.” Remote calibration is performed.	

How to cancel

Press the  key to cancel the operation.

Note

Automatic calibration is not performed under the following conditions.

- Warm-up is being performed.
- Contact of “Remote blow” is being input.
- Contact of “Prohibition of calibration” is being input.
- Contact of “Heater off” is being input.

## 7.5 All calibration (option)

### Description

Perform sensor maintenance [sensor check (setting), sensor recovery (setting)], span and zero calibration once for each sequentially by key operation.

Actuate the solenoid valve attached to the exterior by the contact signal from the terminal block and supply standard gases sequentially. Span and zero gas calibration are automatically performed.

If the output signal hold is set, the output signal is held to the set value during calibration. After the calibration, the hold is maintained until the time set in the measurement waiting time elapses.

To perform sensor maintenance (sensor check, sensor recovery) during calibration, “10.4.7 Sensor check setting for calibration (option)” and “10.4.8 Sensor recovery setting for calibration (option)” are required.

Note that the sensor recovery is performed if it is determined to be required by the sensor check.

Refer to Sections “4.2” and “4.3” for the wiring of solenoid valves.

Procedure	Operation (example)	Executes all calibration.	
	Key operation	Description	Displayed message (LCD)
(1)	Ⓔ	Display the screen on the right in accordance with the key operation summary and press the Ⓔ key, the all calibration performing screen appears.	<div style="border: 1px solid black; padding: 5px;">           CALIBRATION MENU  <b>ALL CALIBRATION</b> </div>
(2)	Ⓔ	Press the Ⓔ key to perform all calibration.	<div style="border: 1px solid black; padding: 5px;">           ALL CALIBRATION  <b>START</b> </div>
(3)		The value of the concentration of oxygen and the cell electromotive force are displayed while executing the all calibration.	<div style="border: 1px solid black; padding: 5px;">           ALL CALIBRATION            20.61 % 000.1 mV         </div>
(4)		After the all calibration is completed, the display returns to the screen on the right.	<div style="border: 1px solid black; padding: 5px;">           CALIBRATION MENU  <b>ALL CALIBRATION</b> </div>

### How to cancel

Press the Ⓕ key to cancel the operation.

## 8. BLOWDOWN (OPTION)

In order to prevent the flow guide tube from clogging with dust contained in gas being measured, dust deposits in the flow guide tube is removed by blowing compressed air such as instrumentation air, etc. Use the blowdown function by one of the following three methods.

- (1) Manual blowdown (“8.2”), (2) Automatic blowdown (“8.3”),
- (3) Remote blowdown (“8.4”)

### 8.1 Preparation for blowdown

Wiring/piping check

Perform wiring and piping correctly referring to Item. “4.3”. Since high pressure is applied to the piping, be sure to use blind-nut type joints at connections. Special care should be taken with regard to air-tightness.

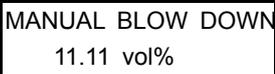
Setting of blowdown time

Referring to “10.3.4 Procedure for setting blowdown time”, set blowdown time.

### 8.2 Manual blowdown

#### Description

You can perform blowdown operation once by key operation using this function.

Procedure	Operation (example)	Performing manual blowdown	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key, the manual blowdown performing screen enters.	
(2)		Press the  key to perform manual blowdown.	
(3)		While executing, the screen on the right appears.	
(4)		After the calibration is completed, the display returns to the screen on the right.	

#### How to cancel

Press the  key to cancel the operation.

## 8.3 Automatic blowdown

### Description

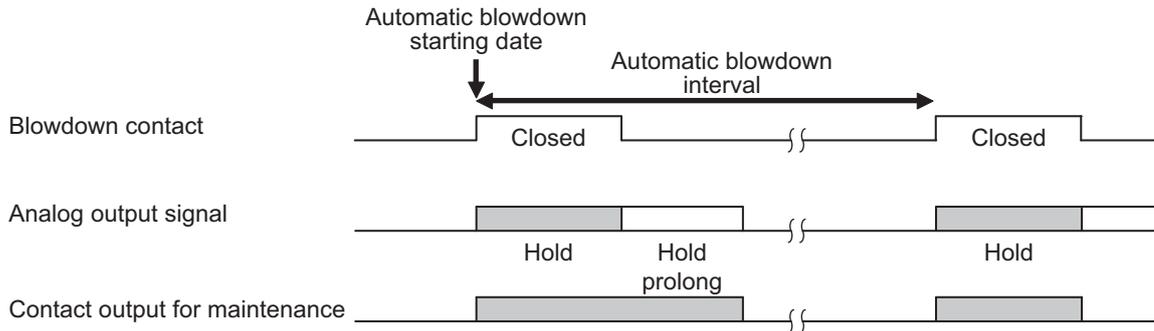
Blowdown operation is performed at time intervals set in advance.

Using contact signal from the terminal block, drive the solenoid valve and remove dust by blowing instrumentation air, etc. into the flow guide tube with blowdown nozzle.

“BLW” is displayed on the left of the measurement screen during automatic blowdown.

If the output signal hold is set, the output signal is held to the set value before start of blowdown during blowdown. After the calibration, the hold is maintained until the time set in the measurement waiting time elapses.

To perform automatic blowdown, “10.3.2 Date and time setting of automatic blowdown” and “10.3.3 Automatic blowdown cycle setting” and “10.3.4 Procedure for setting blowdown time” are required.



Procedure	Operation (example)	Setting the blowdown so that it is performed for 30 seconds every 24 hours from 13:00, 08/02/25	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key.	
(2)		Press the  key. The auto blowdown valid/invalid setting screen appears.	
(3)	 	Use the  key to select the auto blowdown valid (YES). Press the  key to set the value.	
(4)		Press the  key.	
(5)		The screen on the right appears.	
(6)	 	Press the  key to display the screen on the right and press the  key. The date and time setting of automatic blowdown screen appears.	

(7)	   	<p>Use the  and  key to set the auto blowdown starting date and time. (Set the date and time of the future.) Press the  key to set the value.</p>	<div style="border: 1px solid black; padding: 5px;">START DATE 08/02/25 13:00</div>
(8)		<p>Press the  key.</p>	<div style="border: 1px solid black; padding: 5px;">START DATE 08/02/25 13:00</div>
(9)		<p>The screen on the right appears.</p>	<div style="border: 1px solid black; padding: 5px;">SET AUTO BLOW START DATE</div>
(10)	 	<p>Press the  key to display the screen on the right and press the  key. The auto setting blowdown interval screen appears.</p>	<div style="border: 1px solid black; padding: 5px;">SET AUTO BLOW AUTO BLOW CYCLE</div>
(11)	  	<p>Use the  and  key to set the auto blowdown interval. Press the  key to set the value.</p>	<div style="border: 1px solid black; padding: 5px;">AUTO BLOW CYCLE 24h 00m</div>
(12)		<p>Press the  key.</p>	<div style="border: 1px solid black; padding: 5px;">AUTO BLOW CYCLE 24h 00m</div>
(13)		<p>The screen on the right appears.</p>	<div style="border: 1px solid black; padding: 5px;">SET AUTO BLOW AUTO BLOW CYCLE</div>
(14)	 	<p>Press the  key to display the screen on the right and press the  key. The setting blowdown time screen appears.</p>	<div style="border: 1px solid black; padding: 5px;">SET AUTO BLOW BLOW DOWN TIME</div>
(15)	  	<p>Use the  and  key to set the blowdown time. (Common with the manual blowdown.) Press the  key to set the value.</p>	<div style="border: 1px solid black; padding: 5px;">BLOW DOWN TIME 030 S</div>
(16)		<p>Press the  key.</p>	<div style="border: 1px solid black; padding: 5px;">BLOW DOWN TIME 030 S</div>
(17)		<p>The display returns to the screen on the right.</p>	<div style="border: 1px solid black; padding: 5px;">SET AUTO BLOW BLOW DOWN TIME</div>

How to cancel


Press the  key to cancel the operation.

## 8.4 Remote blowdown

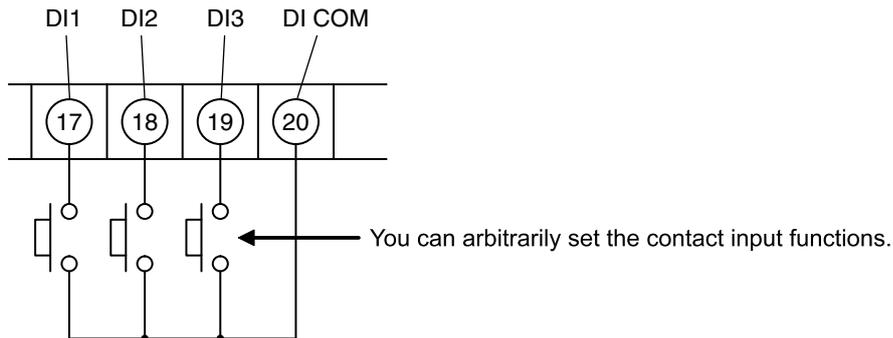You can perform blowdown by the contact input of the external terminal block.

To perform remote blowdown, install piping and wiring for the supply air and the solenoid valve according to Section 4.

- (1) Set one of the contact inputs DI 1 to 3 to “Blowdown ON” in accordance with the following operation procedure.
- (2) Close the contact set to the “Blowdown ON” for one second or more (depending on the settings of (17) to (19) and (20) of the terminal block).
- (3) Blowdown is started. “RBL” is displayed on the left of the display panel, which disappears when the blowdown is completed.



You can arbitrarily set the contact inputs (17) to (19) and (20) of the terminal block (see “10.5.2 Contact input setting”).

Piping and wiring for the supply air and the solenoid valve shall be installed.

### Description

You can perform blowdown by the contact input using this function.

Actuate the solenoid valve attached to the exterior by the contact signal from the terminal block and flow supply air sequentially. Blowdown is automatically performed.

Refer to Sections “4.2” and “4.3” for the wiring of solenoid valves.

Procedure	Operation (example)	Performing remote blowdown	
	Key operation	Description	Displayed message (LCD)
(1)	⏏	Display the screen on the right in accordance with the key operation summary and press the ⏏ key. The contact input setting screen appears.	PARAMETER MENU DIGITAL INPUT
(2)	▲ ⏏	Press the ▲ key several times and select one of DI 1 to DI 3. Press the ⏏ key.	DIGITAL INPUT DI 1
(3)	⏏	Press the ⏏ key. Contact is set.	DI 1 NONE
(4)	▲ ⏏	Press the ▲ key several times and select “BLOW DOWN ON”. Press the ⏏ key to set the value.	DI 1 BLOW DOWN ON

(5)		Press the  key.	<div data-bbox="1118 163 1393 241" style="border: 1px solid black; padding: 2px;">DI 1 BLOW DOWN ON</div>
(6)		<p>The screen on the right appears.</p> <p>Press the  key several times and return to the measurement screen.</p>	<div data-bbox="1118 293 1393 371" style="border: 1px solid black; padding: 2px;">DIGITAL INPUT <b>DI 1</b></div>
(7)		Close the contact set to the “Blowdown ON.” Blowdown is performed.	<div data-bbox="1118 421 1393 499" style="border: 1px solid black; padding: 2px;">12.34 Vol%</div>

How to cancel

Press the  key to cancel the operation.

# 9. MAINTENANCE AND CHECK

## 9.1 Checking

Please regularly maintenance, check, and use it always in good condition.

Check and remedy the following items especially.

Perform maintenance and check once every year or 2, or at time of furnace check.

	Items for check	Recommended interval, method of checking, remedy for abnormalities, etc.
Daily check	Span, zero calibration	Calibrate once every week ((Refer to “Chapter 7. CALIBRATION”))
	Deterioration of packings and O-rings	If deteriorated, replace with new ones.
	Check for loose cable ground	Retighten. Replace a packing.
	Check the remain pressure in the calibration gas cylinder	Check the amount using primary pressure.
Periodic check	Clogging or corrosion of flow guide tubes	Remove the flow guide tube from the furnace wall, remove the detector and wash the flow guide tube with water.
	Clogging or corrosion of ejector type sampling probe	Remove the ejector from the furnace wall, disassemble the probe and wash it with water.
	Clogging of air outlet of ejectors	Remove the ejector from the furnace wall and clean the air outlet located in the heat insulation layer of the furnace wall.

## 9.2 Consumable parts

No.	Product name	Part number for order (Code to order)
1	Ceramic filter	*ZZPZFK4-TK750201P1
2	O-ring for detector	*ZZPZFK4-8552836

## 9.3 Spare parts

No.	Product name	Code to order
3	Replacement detector	Depends on type designation. See “12.2 Code symbols”
4	Flow guide tube	*ZZP-TK□ See [INZ-TN5ZFK8-E] for details.

---

## 9.4 Replacement of fuse

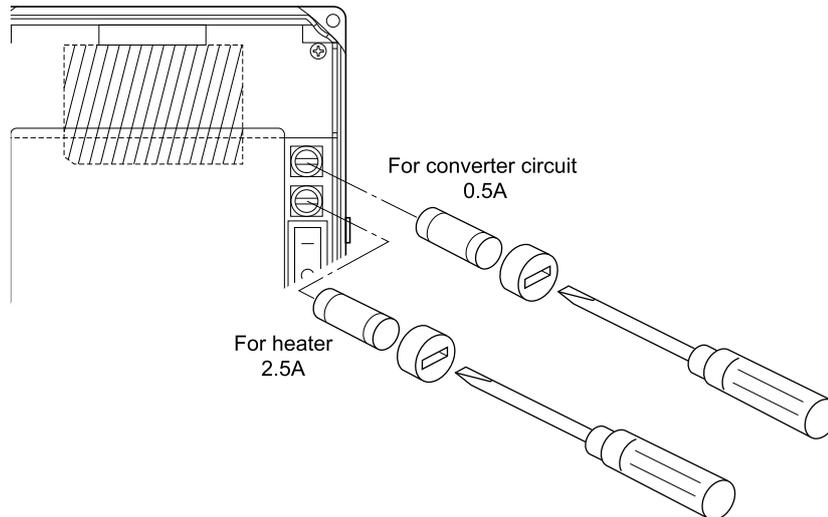
---

If a fuse blows, turn off the power switch, and replace the fuse after investigating the cause.

Open the front door and you can see the two fuses. The upper fuse is for protection of the converter circuit and the lower one is for protection of the heater. Take care that these fuses are different each other in the rated current.

To replace the fuse, insert a flathead screwdriver or coin into the fuse cap and turn it to the left while pressing it in order to remove the cap and replace the fuse.

Put the cap on the fuse and turn it to the right to fix it.



**The specifications of the fuse**

	Specifications
For converter circuit	$\Phi 5 \times 20$ mm 0.5 A (Example: 0213, 0.5 A, manufactured by Littelfuse)
For heater	$\Phi 5 \times 20$ mm 2.5 A (Example: 0213, 2.5 A, manufactured by Littelfuse)

Note: Use time-lag fuses.

## 9.5 Troubleshooting

Phenomena	Probable causes	Checking methods (normal value)	Remedy
No display	Converter fuse blown out	Check the fuse and supply voltage specification.	Replace fuse Check Power supply voltage
Indication does not change or slow response	Filter and/or flow guide tube clogged	Visual check of filter and flow guide tube for contamination or clogging. Check for loosen and gas leaks at piping connections and mounting place of detector.	Clean or replace filter Tighten pipe connections
	Sensor deterioration	Change over between zero and span gas and check if 5 minutes or longer is needed for 90% response.	Replace sensor
	Decrease in flow velocity of exhaust gas	Check response to process gas after shutting down calibration gas. Move the direction (mounting position) of "arrow" of the flow guide slightly.	Increase process gas Flow into the flow guide tube.
Temperature alarm continues for more than 10 min. after power switched ON	Break of wiring Wrong wiring Source voltage is too low.	Cable check of wiring Wiring check Check of supply voltage specification	Replacement Correct wiring Check power supply
	Break of thermocouples	Break check	Replace sensor
	Blown heater fuse	Cable check of fuse	Replace fuse
	Break in detector heater	Check heater resistance 50 to 55Ω for 115V, 200 to 250Ω for 220V (Excluding wiring resistance)	Replace sensor
Automatic calibration is not possible	Difference between calibration gas concentration and its setting	Check the set value for calibration gas concentration.	Set proper value (Refer to "10.2.7")
	Wrong parameters setting	Check automatic calibration intervals.	Set proper parameters
	The calibration is prohibited in the contact input of the external terminal block.	Check if the calibration is not prohibited in the contact input of the external terminal block.	Set proper parameters Correct wiring
	The heater is set to off at the contact input of the external terminal block.	Check if the heater is set to off at the contact input of the external terminal block.	Set proper parameters Correct wiring
Zero and/or span alarm	Difference between calibration gas concentration and its setting or misconnection between zero and span gas	Check the set value for calibration gas concentration.	Set proper value
		Check piping.	Correct wiring
Indication too high or too low	Loose flange and its surroundings Deteriorated O-rings	Check for gas leaks in detector and mounting part of flow guide tube flange.	Tighten mounting screws Replace sensor
		Check for leaks from the outside.	Seal
	Detector is faulty.	Check for gas leaks at calibration gas inlet. Check sensor voltage (mV) for higher or lower than other detector when flowing zero gas. (See "6.5 Oxygen detector standard output voltage")	Tighten connectors Replace sensor
	Abnormal detector temperature	Refer to check items for detector temperature alarm described above.	Replace sensor
	Indication difference between dry and wet base measurement	Oxygen concentration is higher in dry base.	Normal

Phenomena	Probable causes	Checking methods (normal value)	Remedy
Disconnection detection error	Break of thermocouples Break of sensor Wrong wiring	Cable check of wiring Wiring check	Replace the defective parts. Correct wiring Turn on/off the power supply.
Range cannot be switched.	“Range setting” is set in the contact input setting.	Check if “Range setting” is set in the contact input setting.	Cancel “Range setting” in the contact input setting.

# 10. SETTING AND OPERATING OF PARAMETER

## 10.1 Measured menu

### 10.1.1 Display range setting screen

#### Description

You can set the display range of oxygen concentration value using this function.  
 Settable range: Select one of the following  
 (1) "Range 1": Displayed in the range set in the range setting 1.  
 (2) "Range 2": Displayed in the range set in the range setting 2.

Procedure	Operation (example)	Setting the display range to "Range 1"	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key. The display range setting screen appears.	
(2)	 	Use the  key to select the range-1. Press the  key to set the value.	
(3)		Press the  key.	
(4)		When it is fixed, the display returns to the screen on the right.	

#### Note

If "Range setting" is set in the contact input setting, you cannot change the display range on this screen.

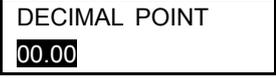
## 10.1.2 Decimal point position setting screen

### Description

You can set the decimal point position of full scale for oxygen concentration display using this function.

Settable range: Select one of the following.

- (1) "00.00": Displayed with two-digit integer and two decimal places.
- (2) "0.000": Displayed with one-digit integer and three decimal places.

Procedure	Operation (example)	Setting the display of two-digit integer and two decimal places (Range 1)	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key.	
(2)		Press the  key. The decimal point position setting screen appears.	
(3)	 	Use the  key to select the two-digit integer and two decimal places. Press the  key to set the value.	
(4)		Press the  key.	
(5)		When it is fixed, the display returns to the screen on the right.	

### Note

If changing "0.000" to "00.00," "25.00" is set as the full scale value.

If changing "00.00" to "0.000," "5.000" is set as the full scale value.

## 10.1.3 Full scale setting screen

### Description

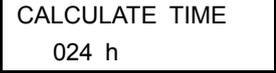
You can set the full scale value for display of oxygen concentration value using this function.  
 Settable range: If the decimal point position is set to “00.00”: 02.00 to 50.00 vol%  
 If the decimal point position is set to “0.000”: 2.000 to 9.000 vol%

Procedure	Operation (example)	Setting the full scale value to 20.00% (Range-1)	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key.	
(2)	 	Press the  key to display the screen on the right and press the  key. The full scale setting screen appears.	
(3)	  	Use the  and  key to set the full scale value. Press the  key to set the value.	
(4)		Press the  key.	
(5)		The display returns to the screen on the right.	

## 10.1.4 Setting screen for calculation time of maximum and minimum values appears

### Description

You can set the calculation time of maximum and minimum values of oxygen concentration value using this function.  
 Settable range: 0 to 240h

Procedure	Operation (example)	Setting the calculation time of maximum and minimum values to 24 hours	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key. The setting screen for calculation time of maximum and minimum values appears.	
(2)	  	Use the  and  key to set the calculation time of maximum and minimum values. Press the  key to set the value.	
(3)		Press the  key.	
(4)		When it is fixed, the display returns to the screen on the right.	

## 10.2 Calibration menu

### 10.2.1 Automatic calibration setting (option)

#### Description

You can set the automatic calibration to valid or invalid using this function.  
If changing the automatic calibration setting from valid to invalid during automatic calibration or remote calibration, the calibration is forcibly canceled.

Procedure	Operation (example)	Setting the automatic calibration to valid	
	Key operation	Description	Displayed message (LCD)
(1)	ENTER	Display the screen on the right in accordance with the key operation summary and press the ENTER key.	<div style="border: 1px solid black; padding: 5px;">           CALIBRATION MENU  <b>SET AUTO CAL</b> </div>
(2)	ENTER	Press the ENTER key. The auto calibration valid/invalid setting screen appears.	<div style="border: 1px solid black; padding: 5px;">           SET AUTO CAL  <b>AUTO CALIBRATION</b> </div>
(3)	▶ ENTER	Use the ▶ key to select the auto calibration valid (YES). Press the ENTER key to set the value.	<div style="border: 1px solid black; padding: 5px;">           AUTO CALIBRATION  <b>YES</b> NO         </div>
(4)	ENTER	Press the ENTER key.	<div style="border: 1px solid black; padding: 5px;">           AUTO CALIBRATION            YES         </div>
(5)		The display returns to the screen on the right.	<div style="border: 1px solid black; padding: 5px;">           SET AUTO CAL  <b>AUTO CALIBRATION</b> </div>

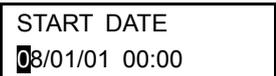
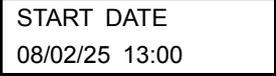
#### Note

If the time for automatic calibration comes during manual treatments (calibration, blowdown, sensor check, or sensor recovery) or remote treatments (calibration, blowdown, or heater off), the treatment being performed is prioritized and the automatic calibration starts after the treatment is completed.  
If the time for automatic calibration comes at the same time with automatic blowdown, the automatic blowdown starts first and the automatic calibration starts after the automatic blowdown is completed.  
If “Prohibition of calibration” is set in the contact input setting and the contact input is on, automatic calibration is not performed.  
If disconnection is detected (O<sub>2</sub> sensor input, O<sub>2</sub> sensor thermocouple input, or thermocouple input (combustion control: option)), or a heater temperature error or A/D saturation error occurs, automatic calibration is not performed.

## 10.2.2 Date and time for starting automatic calibration (option)

### Description

You can set the date and time for starting automatic calibration using this function.  
 Automatic calibration is performed in a specified cycle from a specified date and time.  
 If it is invalid, the automatic calibration does not start at a specified date and time.  
 Settable range: date and time in the future in the calendar

Procedure	Operation (example)	Setting the automatic calibration so that it is performed from 13:00, 08/02/25	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key.	
(2)	 	Press the  key to display the screen on the right and press the  key. The auto calibration starting date and time setting screen appears.	
(3)	  	Use the  and  key to set the auto calibration starting date and time. Press the  key to set the value.	
(4)		Press the  key.	
(5)		The display returns to the screen on the right.	

### Note

You cannot change the setting value during automatic calibration or remote calibration.  
 Check that “Current date and time setting” in the parameter menu is properly set.

## 10.2.3 Cycle time setting of automatic calibration (option)

### Description

You can set the automatic calibration cycle using this function.  
 The cycle starts from a specified date and time for automatic calibration.  
 Settable range: 00d 00h to 99d 23h (h: 00 to 23)

Procedure	Operation (example)	Setting the automatic calibration so that it is performed every four days	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key.	
(2)	 	Press the  key to display the screen on the right and press the  key. The cycle time setting of automatic calibration appears.	
(3)	  	Use the  and  key to set the auto calibration starting date and time. Press the  key to set the value.	
(4)		Press the  key.	
(5)		The display returns to the screen on the right.	

### Note

You cannot change the setting value during automatic calibration or remote calibration.

## 10.2.4 Performing all calibration (option)

### Description

You can perform all calibration on the screen using this function.  
 Zero calibration is automatically performed after the span calibration.  
 If the execution of the treatment is set in “10.4.7 Sensor check setting for calibration (option)” and “10.4.8 Sensor recovery setting for calibration (option),” sensor check and sensor recovery are performed before the calibration.  
 Note that the sensor recovery is performed if it is determined to be required at the sensor check.

Procedure	Operation (example)	Performing all calibration on the screen	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key, the all calibration performing screen appears.	<div style="border: 1px solid black; padding: 5px; width: fit-content;">           CALIBRATION MENU  <b>ALL CALIBRATION</b> </div>
(2)		Press the  key to perform all calibration.	<div style="border: 1px solid black; padding: 5px; width: fit-content;">           ALL CALIBRATION  <b>START</b> </div>
(3)		Oxygen concentration value and cell electromotive force are displayed during all calibration.	<div style="border: 1px solid black; padding: 5px; width: fit-content;">           ALL CALIBRATION            20.61 % 000.1 mV         </div>
(4)		After the all calibration is completed, the display returns to the screen on the right.	<div style="border: 1px solid black; padding: 5px; width: fit-content;">           CALIBRATION MENU  <b>ALL CALIBRATION</b> </div>

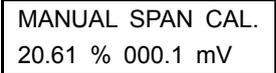
### How to cancel

Press the  key to cancel the operation.

## 10.2.5 Performing a manual span calibration

### Description

Before starting span calibration, the operator shall supply span gas to the detector and check that the display is stabilized.

Procedure	Operation (example)	Performing span calibration on the screen	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key, the manual span calibration screen appears.	
(2)		Press the  key to perform manual span calibration. If supplying calibration gas manually (without the auto-calibration function) The operator shall open the span gas valve manually and adjust the flow rate to $1.5 \pm 0.5$ L/min.  If your detector has the auto-calibration function, you can activate the external solenoid valve using the contact output signal at the terminal block.	
(3)		Oxygen concentration value and cell electromotive force are displayed. Wait until the oxygen concentration is stabilized.	
(4)		Press the  key to determine the span calibration factor. During the process, the oxygen concentration value and cell electromotive force are highlighted.	
(5)		After the calibration is completed, the display returns to the screen on the right.	
(6)		If the operator opened the span gas valve manually, close the valve.	

### How to cancel

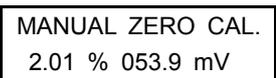
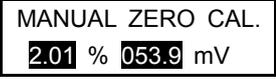
Press the  key to cancel the operation.

After the cancellation, be sure to close the valves of span gas.

## 10.2.6 Performing a manual zero calibration

### Description

Before starting zero calibration, the operator shall supply zero gas to the detector and check that the display is stabilized.

Procedure	Operation (example)	Performing zero calibration on the screen	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key, the manual zero calibration screen appears.	
(2)		Press the  key to perform manual zero calibration. If supplying calibration gas manually (without the auto-calibration function) The operator shall open the zero gas valve manually and adjust the flow rate to $1.5 \pm 0.5$ L/min.  If your detector has the auto-calibration function, you can activate the external solenoid valve using the contact output signal at the terminal block.	
(3)		Oxygen concentration value and cell electromotive force are displayed. Wait until the oxygen concentration is stabilized.	
(4)		Press the  key to determine the zero calibration factor. During the process, the oxygen concentration value and cell electromotive force are highlighted.	
(5)		After the calibration is completed, the display returns to the screen on the right.	
(6)		The operator shall close the zero gas valve manually.	

### How to cancel

Press the  key to cancel the operation.

After the cancellation, be sure to close the valves of zero gas.

## 10.2.7 Calibration gas setting

### Description

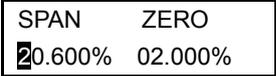
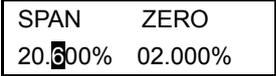
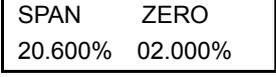
Set calibration gas concentration (span/zero calibration gas concentrations).

Use the calibration gas concentration 1 for the range 1, and the calibration gas concentration 2 for the range 2.

Use normal air (atmosphere) as a span calibration gas and set its concentration to 20.600% O<sub>2</sub>/N<sub>2</sub>.

Settable range: Span calibration gas 00.010 to 50.000 %O<sub>2</sub>/N<sub>2</sub>

Zero calibration gas 00.010 to 25.000 %O<sub>2</sub>/N<sub>2</sub>

Procedure	Operation (example)	Setting the span/zero calibration gas concentrations (Range 1)	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key.	
(2)		The set content is displayed now.	
(3)	  	Use the  and  key to change the calibration gas concentrations. Press the  key to set the value.	
(4)		The set content is displayed. Press the  key.	
(5)		The display returns to the screen on the right.	

### Note

You cannot change the setting value during automatic calibration or remote calibration.

Set with span calibration gas concentrations  $\geq$  zero calibration gas concentrations.

## 10.2.8 Calibration waiting setting (option)

### Description

Set the waiting time from supply of calibration gas to start of calibration.  
 (Set the time so that the calibration gas becomes stable before the calibration.)  
 Settable range: 10 to 300sec.

Procedure	Operation (example)	Setting the wait time to start of calibration to 20 seconds	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key.	
(2)	  	The currently set content is displayed. Use the  and  key to change the wait time. Press the  key to set the value.	
(3)		Press the  key.	
(4)		The display returns to the screen on the right.	

### Note

You cannot change the setting value during automatic calibration or remote calibration.

## 10.2.9 Calibration error clear

### Description

You can clear the errors occurred during calibration using this function.  
 If an error occurs during calibration, an error display (Er4, Er5) and abnormal contact output (close) continues until the next calibration is properly completed.  
 Clear the error display on the measurement screen and open the abnormal contact output.  
 Error log information is not cleared.

Procedure	Operation (example)	Clearing a calibration error	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key. The calibration error clear screen appears.	
(2)		Press the  key. (The calibration error is not cleared yet.)	
(3)		Press the  key. (Calibration error cleared.)	
(4)		The display returns to the screen on the right.	

## 10.2.10 Operation setting screen of calibration range

### Description

During calibration, you can select single or common range for the calibration factor using this function.

Settable range: Select one of the following.

- (1) "Range interlock": Performs calibration of the range that is currently displayed and sets the calibration factors of the other ranges to the same value as above.
- (2) "Display range": Performs calibration of the range that is currently displayed.

Procedure	Operation (example)	Setting the calibration range to range interlock	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key. The operation setting screen of calibration range appears.	
(2)	 	Use the  key to select the range interlock. Press the  key to set the value.	
(3)		Press the  key.	
(4)		When it is fixed, the display returns to the screen on the right.	

## 10.3 Blowdown menu (option)

### 10.3.1 Automatic blowdown setting

#### Description

You can set the automatic blowdown to valid or invalid using this function.  
 If changing the automatic blowdown setting from valid to invalid during automatic blowdown, the blowdown is forcibly canceled.

Procedure	Operation (example)	Setting the automatic blowdown to valid	
	Key operation	Description	Displayed message (LCD)
(1)	⏏	Display the screen on the right in accordance with the key operation summary and press the ⏏ key.	<div style="border: 1px solid black; padding: 5px;">                     BLOW DOWN MENU                      SET AUTO BLOW                 </div>
(2)	⏏	Press the ⏏ key. The auto blowdown valid/invalid setting screen appears.	<div style="border: 1px solid black; padding: 5px;">                     SET AUTO BLOW                      BLOW DOWN                 </div>
(3)	▶ ⏏	Use the ▶ key to select the auto blowdown valid (YES). Press the ⏏ key to set the value.	<div style="border: 1px solid black; padding: 5px;">                     BLOW DOWN                      YES NO                 </div>
(4)	⏏	Press the ⏏ key.	<div style="border: 1px solid black; padding: 5px;">                     BLOW DOWN                      YES                 </div>
(5)		The display returns to the screen on the right.	<div style="border: 1px solid black; padding: 5px;">                     SET AUTO BLOW                      BLOW DOWN                 </div>

#### Note

If the time for automatic calibration comes during manual treatments (calibration, blowdown, sensor check, or sensor recovery) or remote treatments (calibration, blowdown, or heater off), the treatment being performed is prioritized and the automatic calibration starts after the treatment is completed.  
 If the time for automatic blowdown comes at the same time with automatic calibration, the automatic blowdown starts first.  
 If disconnection is detected (O<sub>2</sub> sensor input, O<sub>2</sub> sensor thermocouple input, or thermocouple input (combustion control: option)), or heater temperature error or A/D saturation error occurs, automatic calibration is not performed.

## 10.3.2 Date and time setting of automatic blowdown

### Description

You can set the date and time for starting automatic blowdown using this function.  
 Automatic blowdown is performed in a specified cycle from a specified date and time.  
 If it is invalid, automatic blowdown does not start at a specified date and time.  
 Settable range: date and time in the future in the calendar

Procedure	Operation (example)	Setting the date and time for starting automatic blowdown to 13:00, 08/02/25	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key.	
(2)		Press the  key. The date and time setting of automatic blowdown screen appears.	
(3)	 	Use the  and  key to set the automatic blowdown starting date and time screen.	
(4)		Press the  key to set the value.	
(5)		Press the  key.	
(5)		The display returns to the screen on the right.	

### Note

You cannot change the setting value during automatic blowdown or remote blowdown.  
 Check that "Current date and time setting" in the parameter menu is properly set.

### 10.3.3 Automatic blowdown cycle setting

#### Description

You can set the automatic blowdown cycle using this function.  
 The cycle starts from a specified date and time for automatic blowdown.  
 Settable range: 00h 00m to 99h 59m (m: 00 to 59)

Procedure	Operation (example)	Setting automatic blowdown cycle to 24 hours.	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key.	
(2)	 	Press the  key to display the screen on the right and press the  key. The auto blowdown cycle setting screen appears.	
(3)	  	Use the  and  key to select the auto blowdown cycle. Press the  key to set the value.	
(4)		Press the  key.	
(5)		The display returns to the screen on the right.	

#### Note

You cannot change the setting value during automatic blowdown or remote blowdown.  
 Set the blowdown cycle value larger than the blowdown time.

## 10.3.4 Procedure for setting blowdown time

### Description

You can set the blowdown time using this function (common with manual blow down).  
 Settable range: 0 to 999 sec.

Procedure	Operation (example)	Setting blowdown time to 30 seconds.	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key.	
(2)	 	Press the  key to display the screen on the right and press the  key. The procedure for setting blowdown time screen appears.	
(3)	  	Use the  and  key to set the blowdown time. Press the  key to set the value.	
(4)		Press the  key.	
(5)		The display returns to the screen on the right.	

### Note

You cannot change the setting value during automatic blowdown or remote blowdown.  
 Set the blowdown cycle value smaller than the blowdown time.

## 10.3.5 Performing manual blowdown

### Description

You can perform blowdown on the screen using this function.

Procedure	Operation (example)	Performing blowdown on the screen	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key, the manual blowdown performing screen appears.	
(2)		Press the  key to perform manual blowdown.	
(3)		Oxygen concentration value is displayed during manual blowdown.	
(4)		After the calibration is completed, the display returns to the screen on the right.	

### How to cancel

Press the  key to cancel the operation.

## 10.4 Maintenance menu

### 10.4.1 Error log display

#### Description

You can display an error log on the screen using this function.  
 A latest piece of error information is displayed first.  
 The maximum of 12 pieces of error information are saved.  
 Press the  key to display the older pieces of error information.  
 The latest piece of error information is displayed next to the oldest piece of error information.  
 The oldest piece of error information is overwritten by a new one.

Procedure	Operation (example)	Displaying an error log on the screen	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key.	<div style="border: 1px solid black; padding: 5px; width: fit-content;">           MAINTE MENU  <b>ERROR LOG</b> </div>
(2)		Use the  key to select the error log screen.	<div style="border: 1px solid black; padding: 5px; width: fit-content;">           ERROR LOG  <b>DISP</b> CLEAR         </div>
(3)		Press the  key, the latest error log appears.	<div style="border: 1px solid black; padding: 5px; width: fit-content;">           YY/MM/DD HH:MM            *****         </div>
(4)		Press the  key to display the previous piece of error log information.	<div style="border: 1px solid black; padding: 5px; width: fit-content;">           YY/MM/DD HH:MM            *****         </div>
(5)		Press the  key, the display returns to the screen on the right.	<div style="border: 1px solid black; padding: 5px; width: fit-content;">           ERROR LOG  <b>DISP</b> CLEAR         </div>
(6)		Press the  key again to return to the screen on the right.	<div style="border: 1px solid black; padding: 5px; width: fit-content;">           MAINTE MENU  <b>ERROR LOG</b> </div>

## Error logs

Display message	Status
Sensorline Error	Sensor line disconnection of the zirconia oxygen sensor was detected.
TC-line Error	Temperature control line disconnection of the zirconia oxygen sensor was detected.
Sub temp. Error	Line disconnection of the thermocouple for combustion control was detected.
Warm-up Error	Warm-up was not completed within the warm-up monitoring time (45 minutes). Warm-up is properly completed if the heater temperature of the zirconia oxygen sensor becomes the control temperature ( $800^{\circ}\text{C} \pm 1^{\circ}\text{C}$ ) and stable for one minute.
Cell temp. Error	Heater temperature exceeds the specified range ( $800^{\circ}\text{C} \pm 70^{\circ}\text{C}$ )
Span gas Error	The concentration of the calibration span gas being supplied is not stable. (In a discrimination treatment of stability, the error of $\pm 0.2\%$ or more compared to the value in the previous treatment continues.)
Zero gas Error	The concentration of the calibration zero gas being supplied is not stable. (In a discrimination treatment of stability, the error of $\pm 0.2\%$ or more compared to the value in the previous treatment continues.)
Span cal. Error	Span calibration failed. (Calibration factor could not be determined.)
Zero cal. Error	Zero calibration failed. (Calibration factor could not be determined.)
Sensor Error	An error was detected in the A/D conversion of oxygen concentration value of the zirconia oxygen sensor. (260 mV or more, $-50$ mV or less)
A/D data Error	An error was detected in the A/D conversion of oxygen concentration value of the zirconia oxygen sensor. (260 mV or more, $-50$ mV or less)

## 10.4.2 Clearing error logs

### Description

You can clear all error logs saved using this function.

Procedure	Operation (example)	Clearing all error logs saved	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key.	<div style="border: 1px solid black; padding: 5px;">           MAINTE MENU  <b>ERROR LOG</b> </div>
(2)		Use the  key to select the error log clear screen.	<div style="border: 1px solid black; padding: 5px;">           ERROR LOG            DISP <b>CLEAR</b> </div>
(3)		Press the  key to clearing error logs. (However, it has not been deleted yet.)	<div style="border: 1px solid black; padding: 5px;">           CLEAR ERROR LOG  <b>YES</b> </div>
(4)		The screen is displayed again to check. Press the  key to clear all the error logs.	<div style="border: 1px solid black; padding: 5px;">           CLEAR ERROR LOG  <b>YES?</b> </div>
(5)		After the processing is completed, the display changes to the menu screen.	<div style="border: 1px solid black; padding: 5px;">           ERROR LOG            DISP <b>CLEAR</b> </div>
(6)		Press the  key again to return to the screen on the right.	<div style="border: 1px solid black; padding: 5px;">           MAINTE MENU  <b>ERROR LOG</b> </div>

## 10.4.3 Alarm log display

### Description

You can display alarm logs on the screen using this function.  
 A latest piece of alarm information is displayed first.  
 The maximum of 12 pieces of alarm information are saved.  
 Press the  key to display the older pieces of alarm information.  
 The latest piece of alarm information is displayed next to the oldest piece of alarm information.  
 The oldest piece of alarm information is overwritten by a new one.

Procedure	Operation (example)	Displaying alarm logs on the screen	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key.	<div style="border: 1px solid black; padding: 5px;">           MAINTe MENU  <b>ALARM LOG</b> </div>
(2)		Use the  key to select the alarm log display screen.	<div style="border: 1px solid black; padding: 5px;">           ALARM LOG  <b>DISP</b> CLEAR         </div>
(3)		Press the  key, the latest alarm log appears.	<div style="border: 1px solid black; padding: 5px;">           YY/MM/DD HH:MM            *****         </div>
(4)		Press the  key to display the previous piece of alarm log information.	<div style="border: 1px solid black; padding: 5px;">           YY/MM/DD HH:MM            *****         </div>
(5)		Press the  key, the display returns to the screen on the right.	<div style="border: 1px solid black; padding: 5px;">           ALARM LOG  <b>DISP</b> CLEAR         </div>
(6)		Press the  key again to return to the screen on the right.	<div style="border: 1px solid black; padding: 5px;">           MAINTe MENU  <b>ALARM LOG</b> </div>

### Alarm logs

Display message	Status
High alarm	Oxygen concentration value exceeded a specified upper limit.
Low alarm	Oxygen concentration value exceeded a specified lower limit.
Hi-High alarm	Oxygen concentration value exceeded a specified Hi-High limit.
Low-Low alarm	Oxygen concentration value exceeded a specified Low-Low limit.

## 10.4.4 Clearing alarm logs

### Description

You can clear all alarm logs using this function.

Procedure	Operation (example)	Clearing all alarm logs saved	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key.	<div style="border: 1px solid black; padding: 5px;">           MAINTE MENU  <b>ALARM LOG</b> </div>
(2)		Use the  key to select the alarm log clear screen.	<div style="border: 1px solid black; padding: 5px;">           ALARM LOG            DISP <b>CLEAR</b> </div>
(3)		Press the  key to perform clearing alarm logs. (However, it has not been deleted yet.)	<div style="border: 1px solid black; padding: 5px;">           CLEAR ALARM LOG  <b>YES</b> </div>
(4)		The screen is displayed again to check. Press the  key to clear all the alarm logs.	<div style="border: 1px solid black; padding: 5px;">           CLEAR ALARM LOG  <b>YES?</b> </div>
(5)		After the processing is completed, the display changes to the menu screen.	<div style="border: 1px solid black; padding: 5px;">           ALARM LOG            DISP <b>CLEAR</b> </div>
(6)		Press the  key again to return to the screen on the right.	<div style="border: 1px solid black; padding: 5px;">           MAINTE MENU  <b>ALARM LOG</b> </div>

## 10.4.5 Operation log display

### Description

You can display operation logs on the screen using this function.

A latest piece of operation information is displayed first.

The maximum of 12 pieces of operation information are saved.

Press the  key to display the older pieces of operation information.

The latest piece of operation information is displayed next to the oldest piece of operation information.

The oldest piece of operation information is overwritten by a new one.

Procedure	Operation (example)	Displaying operation logs on the screen	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key.	<div style="border: 1px solid black; padding: 5px;">           MAINTÉ MENU  <b>OPERATION LOG</b> </div>
(2)		Use the  key to select the operation log display screen.	<div style="border: 1px solid black; padding: 5px;">           OPERATION LOG  <b>DISP</b> CLEAR         </div>
(3)		Press the  key, the latest operation log appears.	<div style="border: 1px solid black; padding: 5px;">           YY/MM/DD HH:MM            *****         </div>
(4)		Press the  key to display the previous piece of operation log information.	<div style="border: 1px solid black; padding: 5px;">           YY/MM/DD HH:MM            *****         </div>
(5)		Press the  key, the display returns to the screen on the right.	<div style="border: 1px solid black; padding: 5px;">           OPERATION LOG  <b>DISP</b> CLEAR         </div>
(6)		Press the  key again to return to the screen on the right.	<div style="border: 1px solid black; padding: 5px;">           MAINTÉ MENU  <b>OPERATION LOG</b> </div>

## Operation logs

Display message	Status
Auto cal.	Automatic calibration was performed.
All calibration	All calibration was performed.
Manual span cal.	Manual span calibration was performed.
Manual zero cal.	Manual zero calibration was performed.
M sensor check	Manual sensor check was performed.
M sensor recover	Manual sensor recovery was performed.
Auto blow down	Automatic blowdown was performed.
Manual blow down	Manual blowdown was performed.
Prohibit cal.	Calibration was prohibited by contact input.
Heater off	Heater was turned off by contact input.
Cancel Auto cal.	Automatic calibration was forcibly canceled.
Cancel all cal.	All calibration was forcibly canceled.
Cancel span cal.	Manual span calibration was forcibly canceled.
Cancel zero cal.	Manual zero calibration was forcibly canceled.
Cancel zr-check	Manual sensor check was forcibly canceled.
Cancel zr-recover	Manual sensor recovery was forcibly canceled.
Cancel A-blow	Automatic blowdown was forcibly canceled.
Cancel M-blow	Manual blowdown was forcibly canceled.
Remote blow down	Blowdown was performed by contact input.
Remote cal.	Calibration was performed by contact input.
Remote Aout hold	Analog output hold was performed by contact input.
Remote reset	Calculations of maximum and minimum of oxygen concentration values were reset by contact input.
Cancel R-cal.	Remote calibration was forcibly canceled.

## 10.4.6 Clearing operation logs

### Description

You can clear all operation logs saved using this function.

Procedure	Operation (example)	Clearing all operation logs saved	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key.	<div style="border: 1px solid black; padding: 2px;">           MAINTENANCE MENU  <b>OPERATION LOG</b> </div>
(2)		Use the  key to select the operation log clear screen.	<div style="border: 1px solid black; padding: 2px;">           OPERATION LOG            DISP <b>CLEAR</b> </div>
(3)		Press the  key to perform clearing operation logs. (However, it has not been deleted yet.)	<div style="border: 1px solid black; padding: 2px;">           CLEAR OPERAT. LOG  <b>YES</b> </div>
(4)		The screen is displayed again to check. Press the  key to clear all the operation logs.	<div style="border: 1px solid black; padding: 2px;">           CLEAR OPERAT. LOG  <b>YES?</b> </div>
(5)		After the processing is completed, the display changes to the menu screen.	<div style="border: 1px solid black; padding: 2px;">           OPERATION LOG            DISP <b>CLEAR</b> </div>
(6)		Press the  key again to return to the screen on the right.	<div style="border: 1px solid black; padding: 2px;">           MAINTENANCE MENU  <b>OPERATION LOG</b> </div>

## 10.4.7 Sensor check setting for calibration (option)

### Description

You can set if a sensor check is performed for calibration using this function.

Procedure	Operation (example)	Making a setting so that a sensor check is performed for calibration	
	Key operation	Description	Displayed message (LCD)
(1)	ENTER	Display the screen on the right in accordance with the key operation summary and press the ENTER key.	<div style="border: 1px solid black; padding: 2px;">           MAINTE MENU  <b>CAL. CELL MAINTE</b> </div>
(2)	ENTER	Press the ENTER key. The sensor check setting for calibration screen appears.	<div style="border: 1px solid black; padding: 2px;">           CAL. CELL MAINTE  <b>SENSOR CHECK</b> </div>
(3)	▶ ENTER	Use the ▶ key to select the sensor check valid (YES). Press the ENTER key to set the value.	<div style="border: 1px solid black; padding: 2px;">           SENSOR CHECK  <b>YES</b> NO         </div>
(4)	ENTER	Press the ENTER key.	<div style="border: 1px solid black; padding: 2px;">           SENSOR CHECK            YES         </div>
(5)		The display returns to the screen on the right.	<div style="border: 1px solid black; padding: 2px;">           CAL. CELL MAINTE  <b>SENSOR CHECK</b> </div>
(6)	ESC	Press the ESC key again to return to the screen on the right.	<div style="border: 1px solid black; padding: 2px;">           MAINTE MENU  <b>CAL. CELL MAINTE</b> </div>

## 10.4.8 Sensor recovery setting for calibration (option)

### Description

You can set if a sensor recovery is performed for calibration using this function.  
 Note that the sensor recovery is performed only if it is determined to be required at the sensor check.  
 This function is performed only if valid is selected in the sensor check setting for calibration.

Procedure	Operation (example)	Making a setting so that sensor recovery is performed for calibration	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key.	<div style="border: 1px solid black; padding: 2px;">                     MAINTÉ MENU                      CAL. CELL MAINTÉ                 </div>
(2)		Use the  key to select the sensor recovery setting screen for calibration.	<div style="border: 1px solid black; padding: 2px;">                     CAL. CELL MAINTÉ                      SENSOR RECOVER                 </div>
(3)		Use the  key to select the sensor recovery valid (YES).	<div style="border: 1px solid black; padding: 2px;">                     SENSOR RECOVER                      YES NO                 </div>
(4)		Press the  key to set the value.	<div style="border: 1px solid black; padding: 2px;">                     SENSOR RECOVER                      YES                 </div>
(5)		After the setting is completed, the display returns to the screen on the right.	<div style="border: 1px solid black; padding: 2px;">                     CAL. CELL MAINTÉ                      SENSOR RECOVER                 </div>
(6)		Press the  key again to return to the screen on the right.	<div style="border: 1px solid black; padding: 2px;">                     MAINTÉ MENU                      CAL. CELL MAINTÉ                 </div>

## 10.4.9 Performing a manual sensor check

### Description

Supply zero calibration gas to the detector in order to calculate the internal impedance R of the sensor. If the internal impedance R is more than 100  $\Omega$ , perform the sensor recovery process.

Procedure	Operation (example)	Performing a sensor check on the screen	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key, the manual sensor check performing screen appears.	<div style="border: 1px solid black; padding: 5px; text-align: center;">           MAINTENANCE MENU  <b>SENSOR CHECK</b> </div>
(2)		Press the  key to perform manual sensor check. If supplying calibration gas manually (without the auto-calibration function) The operator shall open the zero gas valve manually and adjust the flow rate to $1.5 \pm 0.5$ L/min.  If your detector has the auto-calibration function, you can activate the external solenoid valve using the contact output signal at the terminal block.	<div style="border: 1px solid black; padding: 5px; text-align: center;">           SENSOR CHECK  <b>START</b> </div>
(3)		Oxygen concentration value and cell electromotive force are displayed. Wait until the oxygen concentration is stabilized.	<div style="border: 1px solid black; padding: 5px; text-align: center;">           SENSOR CHECK            2.01 % 053.9 mV         </div>
(4)		Press the  key to perform sensor check process. During the process, the sensor impedance is displayed.	<div style="border: 1px solid black; padding: 5px; text-align: center;">           SENSOR CHECK            50 <math>\Omega</math> </div>
(5)		After the calibration is completed, the display returns to the screen on the right.	<div style="border: 1px solid black; padding: 5px; text-align: center;">           SENSOR CHECK  <b>START</b> </div>
(6)		If the operator opened the zero gas valve manually, close the valve.	

### How to cancel

Press the  key to cancel the operation.  
After the cancellation, be sure to close the valves of zero gas.

### Note

You cannot measure an oxygen concentration during sensor check.

## 10.4.10 Performing manual sensor recovery

### Description

Apply an alternating current to the sensor if the internal impedance  $R > 100 \Omega$  in a sensor diagnosis. If  $R \leq 100 \Omega$ , this process cannot be performed.

Procedure	Operation (example)	Performing sensor recovery on the screen	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key, the manual sensor recovery performing screen appears.	<div style="border: 1px solid black; padding: 5px; width: fit-content;">           MAINTENANCE MENU  <b>SENSOR RECOVER</b> </div>
(2)		Press the  key to perform manual sensor recovery. If supplying calibration gas manually (without the auto-calibration function) The operator shall open the zero gas valve manually and adjust the flow rate to $1.5 \pm 0.5$ L/min.	<div style="border: 1px solid black; padding: 5px; width: fit-content;">           SENSOR RECOVER  <b>START</b> </div>
(3)		If your detector has the auto-calibration function, you can activate the external solenoid valve using the contact output signal at the terminal block.  Oxygen concentration value and cell electromotive force are displayed. Wait until the oxygen concentration is stabilized.	<div style="border: 1px solid black; padding: 5px; width: fit-content;">           SENSOR RECOVER            2.01 % 053.9 mV         </div>
(4)		Press the  key to perform the sensor recovery process. During the process, the treating method is displayed.	<div style="border: 1px solid black; padding: 5px; width: fit-content;">           SENSOR RECOVER            AC         </div>
(5)		After the calibration is completed, the display returns to the screen on the right.	<div style="border: 1px solid black; padding: 5px; width: fit-content;">           SENSOR RECOVER  <b>START</b> </div>
(6)		If the operator opened the zero gas valve manually, close the valve.	

### How to cancel

Press the  key to cancel the operation.  
After the cancellation, be sure to close the valves of zero gas.

### Note

You cannot measure an oxygen concentration during sensor check.

## 10.4.11 Cell internal resistance display

### Description

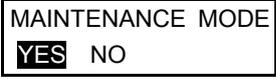
You can display the latest cell internal resistance of the zirconia oxygen sensor in a sensor check, using this function.

Procedure	Operation (example)	Displaying an internal resistance of the zirconia oxygen sensor	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key.	
(2)		Press the  key.	
(3)		The display returns to the screen on the right.	

## 10.4.12 Maintenance mode setting

### Description

You can set the maintenance mode to valid or invalid with this function.  
 If the maintenance mode is set to valid, the analog output signal is held at the set value (see “10.5.10 Hold value setting.”) and the contact output for maintenance of the external contact is on. The data portion of the measurement screen flickers.

Procedure	Operation (example)	Setting the maintenance mode to valid	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key, the maintenance mode setting screen appears.	
(2)	 	Use the  key to select the maintenance mode valid (YES). Press the  key to set the value.	
(3)		Press the  key.	
(4)		The display returns to the screen on the right.	

### Note

If an error occurs while the maintenance mode is enabled, error handling is prioritized.  
 If the analog output hold function (error hold) is enabled, the analog output signal is held at the value set at the hold value setting (error hold).  
 The data portion of the measurement screen flickers and is highlighted.

## 10.4.13 Password setting

### Description

You can set a password for switching the “Key lock function” valid /invalid, which is to prevent unauthorized people from making various setting or operating the unit manually (modification, etc.)

Note: Refer to “Setting of key lock” Paragraph (“10.5.16”).

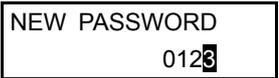
When you set the “new password” you desire, the screen transits to the password authentication screen automatically.

After you input the “old password” in the password authentication screen, the new password will be registered.

The factory-set password is “0000”.

An authorized person should manage the set password for remembrance’ sake.

Settable value: 4 digits from 0 to 9

Procedure	Operation (example)	Setting to change from old password “9999” to new password “0000”	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key.	
(2)	 	Use the  key and the  key to input the new password.	
(3)		Press the  key.	
(4)	 	Use the  key and the  key to input the old password.	
(5)		The new password is displayed by pressing the  key.	
(6)		Press the  key to go back to the screen on the right.	

## 10.4.14 PID auto tuning

### Description

Heater temperature of the detector is PID controlled.

Optimize each value of P (proportion), I (integration) and D (derivation) under the environment that the unit is installed.

Note: Each value of P, I and D has been set at shipping. If temperature is not controllable under that environment, execute PID auto tuning.

Execute PID auto tuning during measurement.

Measured value and analog output get to be unstable during PID auto tuning, because of making control temperature up and down.

PID auto tuning is a part of maintenance that an analog output can be a hold value (Refer to the paragraph "10.5.9").

PID auto tuning is not executed during auto calibration or automatic blowdown.

(You can not start PID auto tuning at the same time as them.)

Auto calibration or automatic blowdown is not executed during PID auto tuning, and it is executed after PID auto tuning is over.

Operation logs of PID auto tuning are not stored. (Refer to the paragraph "10.4.5").

Procedure	Operation (example)	Execute PID auto tuning from the screen	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key to display the PID AUTO TUNING START screen.	
(2)		Press the  key to start PID auto tuning.	
(3)		Temperature to be displayed changes during PID auto tuning.	
(4)		When PID auto tuning is finished automatically, the display returns to the screen on the right.	

### How to cancel

Press the  key to cancel PID auto tuning.

If you cancel PID auto tuning, each value of P, I and D is to be the value before tuning.

## 10.5 Parameter menu

### 10.5.1 Current date and time setting

#### Description

You can set a current date and time for the unit using this function.  
 Settable range: date and time in the future in the calendar

Procedure	Operation (example)	Setting the current date and time to 13:00, 08/02/25	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key.	<div style="border: 1px solid black; padding: 5px; width: fit-content; margin: auto;">                     PARAMETER MENU  <b>DATE SET</b> </div>
(2)	  	Use the  and  key to set the date and time. Press the  key to set the value.	<div style="border: 1px solid black; padding: 5px; width: fit-content; margin: auto;">                     DATE SET  <b>08/02/25 13:00</b> </div>
(3)		Press the  key.	<div style="border: 1px solid black; padding: 5px; width: fit-content; margin: auto;">                     DATE SET                      08/02/25 13:00                 </div>
(4)		The display returns to the screen on the right.	<div style="border: 1px solid black; padding: 5px; width: fit-content; margin: auto;">                     PARAMETER MENU  <b>DATE SET</b> </div>

## 10.5.2 Contact input setting

### Description

You can set the functions for the contact inputs 1 to 3 using this function.

Settable range: Select one of the following

- (1) [NONE] : Performs no treatment by contact input.
- (2) [BLOW DOWN ON] : Performs blowdown by contact input.  
(Switch OFF to ON to perform blowdown.)
- (3) [HEATER OFF] : Turn off the heater by contact input.  
(OFF/ON: Heater ON/Heater OFF)
- (4) [PROHIBIT CAL.] : Sets if calibration is prohibited or valid by contact input.  
(OFF/ON: Calibration is valid/prohibited.)
- (5) [REMOTE CAL.] : Performs all calibration by contact input.  
(Switch OFF to ON to perform calibration.)
- (6) [REMOTE HOLD] : Holds the AO by contact input.  
(OFF/ON: not held/held)
- (7) [CALCULATE REST] : Resets maximum and minimum calculations of O<sub>2</sub> by contact input.  
(Switch OFF to ON to perform calibration.)
- (8) [OUTPUT RANGE] : Switches the range by contact input.  
(OFF/ON: Range-1/Range-2)

Note) The functions other than “NONE” cannot be set for multiple contacts.

Procedure	Operation (example)	Setting the blowdown function for the contact input 1	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key.	
(2)	 	Use the  key to select the contact input 1 setting screen. Press the  key to set the value. (Also follow this procedure for the contact inputs 2 and 3.)	
(3)		Use the  key to select the function for contact input 1.	
(4)		The item selected is highlighted. Press the  key to set the value.	
(5)		Press the  key.	
(6)		The display returns to the screen on the right.	

### 10.5.3 Selection of alarm contact output

#### Description

You can set the alarm conditions for alarm contact output using this function.

Settable range: Select one of the following.

- (1) [ALARM NONE] : Alarm contact output is not performed.
- (2) [HIGH ALARM] : Alarm contact output is performed when an high limit alarm occurs.
- (3) [LOW ALARM] : Alarm contact output is performed when an lower limit alarm occurs.
- (4) [HH ALARM] : Alarm contact output is performed when an HH limit alarm occurs.
- (5) [LL ALARM] : Alarm contact output is performed when an LL limit alarm occurs.
- (6) [H/L ALARM] : Alarm contact output is performed when an high or lower limit alarm occurs.
- (7) [HH/LL ALARM] : Alarm contact output is performed when an HH or LL limit alarm occurs.

Procedure	Operation (example)	Setting the lower limit alarm function for alarm contact output	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key.	
(2)		The selection of alarm contact output setting screen appears.	
(3)	 	Use the  key to select the low alarm. Press the  key to set the value.	
(4)		Press the  key.	
(5)		The display returns to the screen on the right.	

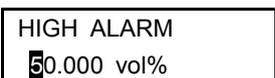
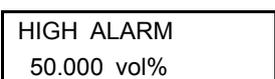
## 10.5.4 High limit setting of oxygen concentration

### Description

You can set the high limit of oxygen concentration using this function.

Use the oxygen concentration alarm 1 for the range 1, and the oxygen concentration alarm 2 for the range 2.

Settable range: 0.001 to 55.000 vol%

Procedure	Operation (example)	Setting the high limit of oxygen concentration to “50.000 vol%” (Range 1)	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key.	
(2)	 	Use the  key to select the oxygen concentration high limit value setting screen, and press the  key.	
(3)	  	Use the  and  key to set the oxygen concentration high limit value. Press the  key to set the value.	
(4)		Press the  key.	
(5)		Press the  key.	
(6)		The display returns to the screen on the right.	

### Note

A setting error occurs if the following condition is not satisfied:

“HH limit of oxygen concentration”  $\geq$  “high limit of oxygen concentration”  $\geq$  “Lower limit of oxygen concentration”  $\geq$  “LL limit of oxygen concentration”

## 10.5.5 Lower limit setting of oxygen concentration

### Description

You can set the lower limit of oxygen concentration using this function.  
 Use the oxygen concentration alarm 1 for the range 1, and the oxygen concentration alarm 2 for the range 2.  
 Settable range: 0.001 to 55.000 vol%

Procedure	Operation (example)	Setting the lower limit of oxygen concentration to “00.020 vol%” (Range 1)	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key.	
(2)	 	Use the  key to select the oxygen concentration lower limit value setting screen, and press the  key.	
(3)	  	Use the  and  key to set the oxygen concentration lower limit value. Press the  key to set the value.	
(4)		Press the  key.	
(5)		Press the  key.	
(6)		The display returns to the screen on the right.	

### Note

A setting error occurs if the following condition is not satisfied:  
 “HH limit of oxygen concentration”  $\geq$  “high limit of oxygen concentration”  $\geq$  “Lower limit of oxygen concentration”  $\geq$  “LL limit of oxygen concentration”

## 10.5.6 HH limit setting of oxygen concentration

### Description

You can set the HH limit of oxygen concentration using this function.

Use the oxygen concentration alarm 1 for the range 1, and the oxygen concentration alarm 2 for the range 2.

Settable range: 0.001 to 55.000 vol%

Procedure	Operation (example)	Setting the HH limit of oxygen concentration to "55.000 vol%" (Range 1)	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key.	
(2)	 	Use the  key to select the oxygen concentration HH limit value setting screen, and press the  key.	
(3)	  	Use the  and  key to set the oxygen concentration HH limit value. Press the  key to set the value.	
(4)		Press the  key.	
(5)		Press the  key.	
(6)		The display returns to the screen on the right.	

### Note

A setting error occurs if the following condition is not satisfied:

"HH limit of oxygen concentration"  $\geq$  "High limit of oxygen concentration"  $\geq$  "Lower limit of oxygen concentration"  $\geq$  "Low-Low limit of oxygen concentration"

## 10.5.7 LL limit setting of oxygen concentration

### Description

You can set the LL limit of oxygen concentration using this function.  
 Use the oxygen concentration alarm 1 for the range 1, and the oxygen concentration alarm 2 for the range 2.  
 Settable range: 0.001 to 55.000 vol%

Procedure	Operation (example)	Setting the Low-Low limit of oxygen concentration to “00.010 vol%” (Range 1)	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key.	
(2)	 	Use the  key to select the oxygen concentration LL limit value setting screen, and press the  key.	
(3)	  	Use the  and  key to set the oxygen concentration LL limit value. Press the  key to set the value.	
(4)		Press the  key.	
(5)		Press the  key.	
(6)		The display returns to the screen on the right.	

### Note

A setting error occurs if the following condition is not satisfied:  
 “HH limit of oxygen concentration”  $\geq$  “High limit of oxygen concentration”  $\geq$  “Lower limit of oxygen concentration”  $\geq$  “LL limit of oxygen concentration”

## 10.5.8 Hysteresis Setting

### Description

You can set the hysteresis for alarm condition of oxygen concentration.  
 Use the oxygen concentration alarm 1 for the range 1, and the oxygen concentration alarm 2 for the range 2.  
 Perform the setting using the percentage (%) of the range compared to the full scale.  
 Settable range: 0 to 20 %

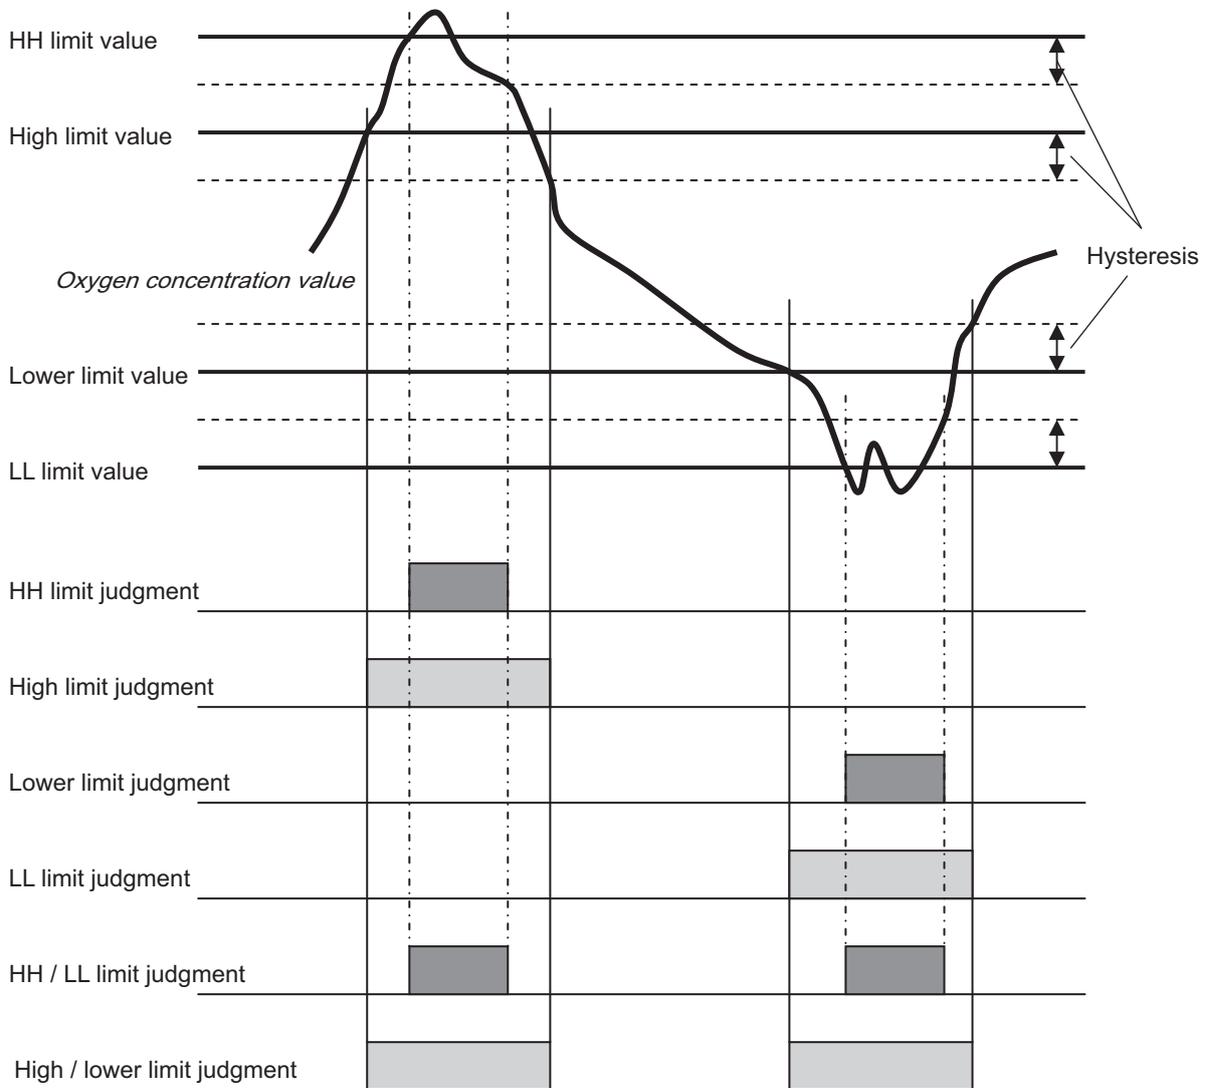
Procedure	Operation (example)	Setting the hysteresis for alarm condition of oxygen concentration to “20%” (Range 1)	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key.	
(2)	 	Use the  key to select the hysteresis setting screen, and press the  key.	
(3)	  	Use the  and  key to set the hysteresis. Press the  key to set the value.	
(4)		Press the  key.	
(5)		Press the  key.	
(6)		The display returns to the screen on the right.	

Hysteresis:

If the value fluctuates around the condition value, there is a possibility that alarms occur frequently. When determining alarms, set a hysteresis width for the condition in order to prevent chattering.

For alarm check, set the percentage (%) of the range compared to the full scale as hysteresis width (see the figure below).

This is common among “HH limit value,” “High limit value,” “Lower limit value,” and “LL limit value.”





## 10.5.9 Hold treatment setting (maintenance hold)

### Description

You can set if the analog output hold function is valid or invalid using this function. If the analog output hold function is valid, the value set for the analog output (see “10.5.10 Hold value setting (maintenance hold)”) is held at the value set for analog output when the following treatment is performed.

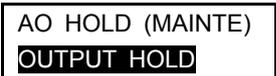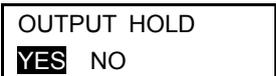- Calibration (Auto, All, Manual, Remote)
- Blowdown (Auto, Manual, Remote)
- Sensor diagnosis, Sensor recovery process, PID auto tuning
- While the maintenance mode is set to “Valid.”

Procedure	Operation (example)	Setting the analog output hold function to valid	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key.	
(2)		Press the  key. The analog output hold setting screen appears.	
(3)	 	Use the  key to select the output hold valid (YES). Press the  key to set the value.	
(4)		Press the  key.	
(5)		The display returns to the screen on the right.	

### Note

If an error occurs while the analog output hold function (error hold) is set to “Valid,” error hold processing is prioritized.

Analog output signal during warm-up is held at 0% (4 mA/0 V).

## 10.5.10 Hold value setting (maintenance hold)

### Description

Using this function, you can set (select) the output value of analog output signal when the analog output hold function (maintenance hold) is enabled.

If the maintenance mode is set to “Valid,” analog output signal is held at the value set in this procedure.

Settable range: Select one of the following.

- (1) [0%] : Held at 0% (4 mA/0 V)..
- (2) [100%] : Held at 100% (20 mA/1 V).
- (3) [Last value] : Held at the value immediately before the value for analog hold.
- (4) [Setting value] : Held at the value set as the “10.5.11 Setting of hold setting value (maintenance hold)”.

Procedure	Operation (example)	Setting the output value of analog output hold to “0%”	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key.	
(2)	 	Press the  key to display the screen on the right and press the  key. The analog output hold value setting screen appears.	
(3)	 	Use the  key to select the hold value. Press the  key to set the value.	
(4)		Press the  key.	
(5)		The display returns to the screen on the right.	

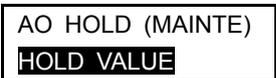
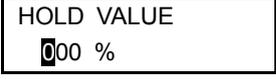
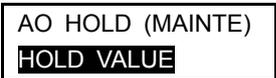
## 10.5.11 Setting of hold setting value (maintenance hold)

### Description

Using this function, you can set the output value of analog output signal to an arbitrary value when the analog output hold function (maintenance hold) is enabled.

This function is to set the output value of an analog output at a percentage (%) of the full-scale value, when “setting value” is selected and specified on the “10.5.10 Hold value setting (maintenance hold).”


Settable range: 0 to 100 %

Procedure	Operation (example)	Setting the output value of analog output hold to “000%”	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key.	
(2)	 	Press the  key to display the screen on the right and press the  key. The hold setting value setting screen appears.	
(3)	  	Use the  and  key to set the hold value. Press the  key to set the value.	
(4)		Press the  key.	
(5)		The display returns to the screen on the right.	

## 10.5.12 Setting of measurement recovery time (maintenance hold)
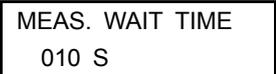
### Description

This function is to set the recovery time (hold of extension) from the analog output hold function (maintenance hold).  
 Settable range: 0 to 300 sec.




Procedure	Operation (example)	Setting the time for extension of hold to “10 seconds”	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key.	
(2)	 	Press the  key to display the screen on the right and press the  key. The measurement recovery time setting screen appears.	
(3)	  	Use the  and  key to set the measurement recovery time. Press the  key to set the value.	
(4)		Press the  key.	
(5)		The display returns to the screen on the right.	

## 10.5.13 Hold treatment setting (error hold)
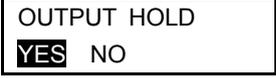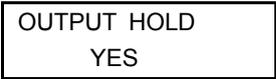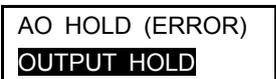
### Description

Using this function, you can set whether the analog output hold function is valid or invalid when an error occurs.

If the analog output hold function (error hold) is set to valid, analog output signal is held at the set value (see “10.5.14 Hold value setting (error hold)”) if an error occurs.

Procedure	Operation (example)	Setting the analog output hold function to valid	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key.	
(2)		Press the  key. The analog output hold setting screen appears.	
(3)	 	Use the  key to select the output hold valid (YES). Press the  key to set the value.	
(4)		Press the  key.	
(5)		The display returns to the screen on the right.	

### Note

If an error occurs while the analog output hold function (error hold) is set to “Valid,” error hold processing is prioritized.

Analog output signal during warm-up is held at 0% (4 mA/0 V).

## 10.5.14 Hold value setting (error hold)

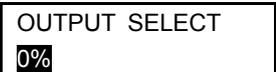
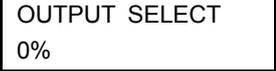
### Description

Using this function, you can set (select) the output value of analog output signal when the analog output hold function (error hold) is enabled.

If the maintenance mode is set to “Valid,” analog output signal is held at the value set in this procedure.

Settable range: Select one of the following.

- (1) [0%] : Held at 0% (4 mA/0 V).
- (2) [100%] : Held at 100% (20 mA/1 V).
- (3) [Last value] : Held at the value immediately before the value for analog hold.
- (4) [Setting value] : Held at the value set as the “10.5.15 Setting of hold setting value (error hold)”.

Procedure	Operation (example)	Setting the output value of analog output hold to “0%”	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key.	
(2)	 	Press the  key to display the screen on the right and press the  key. The analog output hold value setting screen appears.	
(3)	 	Use the  key to select the hold value. Press the  key to set the value.	
(4)		Press the  key.	
(5)		Press the  key to return to the screen on the right.	

## 10.5.15 Setting of hold setting value (error hold)

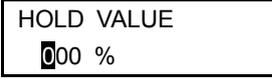
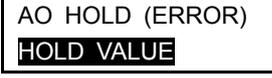
### Description

Using this function, you can set the output value of analog output signal to an arbitrary value when the analog output hold function (error hold) is enabled.

This function is enabled if “Setting value” is set at “10.5.14 Hold value setting (error hold).”

Set the output value of analog output signal as a percentage (%) of the full-scale value of the display range. 0% is equivalent to 0 vol% (4 mA/0 V) and 100 % is to the full-scale value (20 mA/1 V).

Settable range: 0 to 100 %

Procedure	Operation (example)	Setting the output value of analog output hold to “000%”	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key.	
(2)	 	Press the  key to display the screen on the right and press the  key. The hold setting value setting screen appears.	
(3)	  	Use the  and  key to set the hold value. Press the  key to set the value.	
(4)		Press the  key.	
(5)		Press the  key to return to the screen on the right.	

## 10.5.16 Setting of key lock

### Description

Authorized person can set if the key lock is valid or invalid using this function.

You need a “password” to make a setting if the key lock is valid or invalid.

Note: Refer to “Password setting” (Paragraph “10.4.13”).

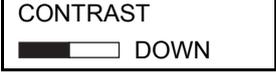
If the key lock is valid, you cannot make settings and manual operation (manual calibration, manual browdown, etc.). However, you can see the screen transition and set values.

Procedure	Operation (example)	Setting the key lock to valid (Password is assumed to be “0123”).	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key.	<div style="border: 1px solid black; padding: 5px;">           PARAMETER MENU  <b>KEY LOCK</b> </div>
(2)		Use the  key to select the key lock valid (YES) or invalid (No).	<div style="border: 1px solid black; padding: 5px;">           KEY LOCK  <b>YES</b> NO         </div>
(3)		Press the  key.	<div style="border: 1px solid black; padding: 5px;">           INPUT PASSWORD            0000         </div>
(4)	 	Use the  key and the  key to input the password.	<div style="border: 1px solid black; padding: 5px;">           INPUT PASSWORD            0123         </div>
(5)		Press the  key.	<div style="border: 1px solid black; padding: 5px;">           KEY LOCK            YES         </div>
(6)		Press the  key to return to the screen on the right.	<div style="border: 1px solid black; padding: 5px;">           PARAMETER MENU  <b>KEY LOCK</b> </div>

## 10.5.17 LCD brightness adjustment

### Description

You can adjust the brightness of the screen (LCD) using this function.  
Settable range: 0 to 100 %

Procedure	Operation (example)	Setting the brightness of the screen (LCD)	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key.	
(2)	 	The LCD brightness adjustment screen appears. Switch between “DOWN” and “UP” with the  key. Use the  key to adjust the brightness. Use the both key to adjust the brightness that sees easily.	
(3)	 	Press the  key. Press the  key.	
(4)		The display returns to the screen on the right.	

## 10.5.18 Setting of automatic OFF time

### Description

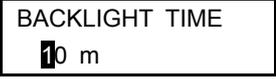
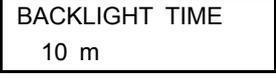
You can set the time for automatically turning off the backlight of the LCD (screen) using this function.

When the time set for turning off the backlight elapses after the last operation, the backlight is turned off.

(Press any key to turn on the backlight.)

If 00 minutes is set, the backlight is not turned off.


Settable range: 0 to 99 min.

Procedure	Operation (example)	Setting the time for automatically turning off the backlight to 10 minutes	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key.	
(2)	  	Use the  and  key to set the automatic OFF time. Press the  key to set the value.	
(3)		Press the  key.	
(4)		The display returns to the screen on the right.	

## 10.5.19 Station number setting
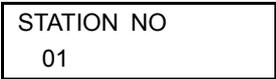
### Description


You can set the station number of the unit for MODBUS communication using this function.  
Settable range: 0 to 99

Procedure	Operation (example)	Setting the station number to 01	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key.	
(2)	  	Use the  and  key to set the station number. Press the  key to set the value.	
(3)		Press the  key.	
(4)		The display returns to the screen on the right.	

## 10.5.20 Adjustment screen for analog output 0%
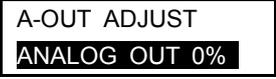
### Description

You can adjust the analog output 0% using this function.

Procedure	Operation (example)	Adjusting the analog output 0% (4 mA)	
	Key operation	Description	Displayed message (LCD)
(1)		Connect the ammeter to the analog output terminals (5) – (6).	
(2)		Display the screen on the right in accordance with the key operation summary and press the  key.	
(3)		Press the  key. The analog output 0% adjustment screen appears.	
(4)	 	Adjust the analog output with the  and  keys. Switch between “DOWN” and “UP” with the  key. Adjust the value to 4 mA with the  key, checking the analog output with the ammeter.	
(5)		Press the  key to set the value.  The display returns to the screen on the right.	
(6)		Remove the ammeter connected to the analog output terminals (5) – (6).	

## 10.5.21 Adjustment screen for analog output 100%

### Description

You can adjust the analog output 100% using this function.

Procedure	Operation (example)	Adjusting the analog output 100% (20 mA)	
	Key operation	Description	Displayed message (LCD)
(1)		Connect the ammeter to the analog output terminals (5) – (6).	
(2)		Display the screen on the right in accordance with the key operation summary and press the  key.	
(3)		Press the  key. The analog output adjustment screen appears.	
(4)	 	Press the  key. Press the  key. The analog output 100% adjustment screen appears.	
(5)	   	Adjust the analog output with the  and  keys. Switch between “DOWN” and “UP” with the  key. Adjust the value to 20 mA with the  key, checking the analog output with the ammeter. Press the  key to set the value.	
(6)		The display returns to the screen on the right.	
(7)		Remove the ammeter connected to the analog output terminals (5) – (6).	

## 10.5.22 Fuel coefficient setting (option)

### Description

You can set the fuel coefficient [k], which is for calculation of combustion efficiency, using this function.

Settable range : 0.00 to 1.99

Procedure	Operation (example)	Setting the fuel coefficient [k] to 0.73.	
	Key operation	Description	Displayed message (LCD)
(1)		Display the screen on the right in accordance with the key operation summary and press the  key.	
(2)		Use the  key and the  key to input the fuel coefficient.	
(3)		Press the  key to fix.	
(4)		Press the  key to return to the screen on the right.	

### Calculation and display of combustion efficiency

Using the following formula, calculate the combustion efficiency E.

$$\text{Combustion efficiency } E [\%] = 100 - \frac{\text{Fuel coefficient [k]} \times \text{Temperature of flue gases [K]} \times (\text{Standard oxygen concentration value [vol\%]} - \text{Measured oxygen concentration value [vol\%]})}{\text{Standard oxygen concentration value [vol\%]} - \text{Measured oxygen concentration value [vol\%]}}$$

Note 1: Fuel coefficient [k] is according to the fuel used.  
Refer to the table below.

Note 2: Temperature of flue gases should be measured separately.  
Connect the electromotive force signal of the thermocouple type temperature detector (R-type) to this unit.

Note 3: The standard oxygen concentration value is to be 20.8 [vol%].

Note 4: When the internal calculation result of the combustion efficiency [E] exceeds  $0 [\%] \leq E \leq 100 [\%]$ , \*\*\*\*% is displayed.

Natural gas	k = 0.66
Oil	k = 0.7
Bituminous coal	k = 0.73

---

## 10.6 Factory menu

---

### 10.6.1 Password setting screen

Description

You can input the password for authorization authentication in this screen in order to execute the factory setting menu.

Customers cannot execute the factory setting menu.

# 11. HOW TO CHANGE THE SETTING

---

## 11.1 How to change the setting of converter ZKM depending on detector type

---

You do not need to change the setting of the converter for ZFK2 (thermocouple R).

The detectors for ZFK5 and thermocouple K cannot be used.

If you need to change the setting, please contact our service representatives.

**Note**

A wrong operation may alter the factory-adjustment value to disable measurement. Therefore, carry out operations while observing the cautionary instructions.

# 12. SPECIFICATIONS

## 12.1 Specifications

### General Specifications

**Measuring object:** Oxygen in noncombustible gas  
**Measuring method:** Directly insert type zirconia system  
**Measuring range:** 0 to 2 ... setting the arbitrary 2 ranges in 50vol%O<sub>2</sub> (in 1 vol% O<sub>2</sub> steps)  
**Repeatability:** Within ±0.5%FS  
**Linearity:** Within ±2%FS  
**Response time:** Within 4 to 7 sec, for 90% (from calibration gas inlet)  
**Warm-up time:** More than 10 min  
**Analog output:** 4 to 20mA DC (allowable load resistance less than 500Ω) or 0 to 1V DC (output resistance more than 100Ω)  
**Power supply:** Rated voltage; 100 to 120V AC (operating voltage 90 to 132V AC) 200 to 240V AC (operating voltage 190 to 264V AC) Rated frequency; 50/60Hz  
**Power consumption:** Maximum 240VA (Detector; approx. 200VA, Converter; approx. 40VA) Typical 70VA (Detector; approx. 50VA, Converter; approx. 20VA)

### Detector Specifications (ZFK)

**Measured gas temperature:** Flow guide tube system; -20 to +600°C (for general-use, corrosive gas) Ejector system; -20 to +1500°C (for high-temperature gas) -20 to +800°C (for general-use)  
**Measured gas pressure:** -3 to +3kPa  
**Flow guide tube:** With or without blow-down nozzle Flange; JIS5K 65A FF (JIS5K-80AFF for high particulate gas) Insertion length; 0.3, 0.5, 0.75, 1m (0.8m for high particulate gas)  
• For high particulate (with blowdown nozzle) without/with cover Flange; JIS5K 80A FF Insertion length; 0.8m (standard)  
**Ejector (general-use):** Probe for guiding measured gas to detector Flange; JIS10K 65A RF Insertion length; 0.5, 0.75, 1, 1.5m (according to customer's specification)  
**Operating temperature:** -20 to +60°C for detector -5 to +100°C for ejector section 125°C or less at detector flange surface with power applied  
**Storage temperature:** Detector; -30 to +70°C Ejector; -10 to +100°C  
**Structure:** Dust/rain-proof structure (IEC IP66 equivalent except a filter on edge)

**Filter:** Alumina (filtering accuracy 50μm) and quartz paper  
**Main materials of gas-contacting parts:** Detector; Zirconia, SCS14 (SUS316 equivalent), platinum, SUS304 Flow guide tube; SUS304 or SUS316 Ejector (general use); SUS316, SUS304 Ejector; (for high temperature) SiC, SUS316, SUS304  
**Calibration gas inlet:** Joint for Φ6mm tube or Φ1/4inch tube (as specified) It is used for when a reference gas concentration changes.  
**Reference air inlet (option):** Φ6mm tube joint or Φ1/4-inch tube joint (as specified)  
**Detector mounting:** Horizontal plane ±45°, ambient surrounding air should be clean.  
**Outer dimensions:** (L × max. dia.) 210mm × 100mm (detector)  
**Mass (approx.) {weight}:** Detector; 1.6kg Ejector; 15kg (insertion length 1m) Flow guide tube (general-use, 1m); 5kg  
**Finish color:** Silver and SUS metallic color  
**Ejector air inlet flow rate:** 5 to 10 L/min  
**Calibration gas flow:** 1.5 to 2 L/min  
**Blowdown air inlet pressure:** 200 to 300kPa  
**Ejector exhaust gas processing:** Within furnace, returned to flue  
**Heater temperature drop alarm output (ejector):** Alarm output when below 100 °C Mechanical thermostat N.O. (1a) contact, 200V AC, 2A

### Converter specification (ZKM)

**Concentration value indication:** Digital indication in 4 digits  
**Contact output signal:** (1) Contact specification; 6 points, 1a 250V AC/3A or 30V DC/3A (2) Contact function;  
• Under maintenance  
• Under blowdown Note3)  
• Span calibrating gas  
• Zero calibration gas  
• Instrument anomalies Note1)  
• Alarm Note2)  
Note1) The following Instrument errors (1) Thermocouples break (2) Sensor break (3) Temperature fault (4) Calibration fault (5) Zero/span adjustment fault (6) Output error turn the contact-ON  
Note2) Alarm selects just one as mentioned below (1) High (2) Lower (3) High and Lower (4) High-high (5) Low-low, it turns ON while operating.  
Note3) Under blow down is available in case of option, and it turns ON while operating.

**Contact input signal:**

(1) Contact specification;  
3points (the following option)  
ON; 0V (10mA or less), OFF; 5V

(2) Contact function;  
• External hold  
• Calculation reset  
• Heater OFF  
• Blow down (option)  
• Inhibition of calibration  
• Calibration start  
• Range change

**Calibration method:**

(a) Manual calibration with key operation  
(b) Auto. calibration (option)  
Calibration cycle; 00 day 00 hour to  
99 days 23 hours  
(c) All calibration

**Calibration gas:**  
• Range settings  
Zero gas; 0.010 to 25.00% O<sub>2</sub>  
Span gas; 0.010 to 50.00% O<sub>2</sub>  
• Recommended calibration gas concentration  
Zero gas; 0.25 to 2.0% O<sub>2</sub>  
Span gas; 20.6 to 21.0% O<sub>2</sub>  
(oxygen concentration in the  
air)

**Blowdown:  
(option)** A function for blowing out dust that has  
deposited in the flow guide tube with  
compressed air. Blowdown can be per-  
formed for a predetermined time and at  
predetermined intervals.  
Blowdown cycle; 00 hour 00 minute to 99  
hours 59 minutes  
Blowdown time; 0 minute 00 second to 0  
minutes 999  
seconds

**Output hold:** Output signal is held during manual/auto  
calibration, blowdown, sensor recovery  
process, and warm-up. The hold function  
can also be released.

**Cock (option):** Selects zero or span gas during manual  
zero or span calibration. Mounted on the  
side of the converter.

**Communication function:**

RS232C (MODBUS) standard specifica-  
tion  
RS485 (MODBUS) (option)

**Combustion efficiency display (option):**

When you select this display, "rich mode  
display" will be an simultaneous display.  
This function calculates and displays  
combustion efficiency from oxygen con-  
centration and measured gas tempera-  
ture.  
Thermocouple (R) is required for tem-  
perature measurement.

**Operating temperature:** -20 to +55°C

**Operating humidity:** 95% RH or less, non condensing

**Pollution degree:** 2

**Installation category:** II

**Storage temperature:** -30 to +70°C

**Storage humidity:** 95% RH or less, non condensing

**Construction:** Dust-proof, rainproof construction (corre-  
sponding to IP66 or IP67 of IEC)

**Material:** Aluminum case

**Outer dimensions (H × W × D):**

170 × 159 × 70mm (IP66)

220 × 230 × 95mm (IP67)

**Mass {weight}:** IP66; Approx. 2kg (excluding cable and  
detector)  
IP67; Approx. 4.5kg (excluding cable and  
detector)

**Finish color:** Small case (IP66)  
Case; Silver  
Cover; Pantone Cool Gray IC-F  
Large case (IP67)  
Case; Munsell 6PB 3.5/10.5 (blue)  
Cover; Silver

**Mounting method:**

Mounted flush on panel or on pipe

**Electrical Safety:**

**Overvoltage category**  
; II power supply input  
; I relay interfaces  
(IEC1010-1)  
**External overcurrent protective device**  
; 10A  
**Equipment interfaces are safety sepa-  
rated (SELV)**

**EC Directive Compliance**

The product conforms to the requirements of the Low Volt-  
age Directive 2006/95/EC and EMC directive 89/336/EEC (as  
amended by Directive 92/31/EEC), both as amended by Direc-  
tive 93/68/EEC.

It conforms to following standards for product safety and  
electromagnetic compatibility:

**EN61010-1** : 2010, **EN62311: 2008**  
Safety requirements for electrical equipment  
for measurement, control and laboratory use.  
"Installation Category II"  
"Pollution Degree 2"  
"Altitude up to 2187 yard (2,000 m)"  
**EN61326-1** : 2006, **EN61326-2-3: 2006**  
**EN61000-3-2** : 2006, **A1: 2009, A2: 2009**  
**EN61000-3-3** : 2008  
Electrical equipment for measurement, control  
and laboratory use. EMS requirements.



ZFK, ZKM

## 12.2 Code symbols

<Converter>

Description													
1	2	3	4	5	6	7	8	9	10	11	12		
Z	K	M					1	-			1		
												Construction	
												1	IP66
												2	IP67
												3	Bench type
												B	Output signal
												E	4 to 20mA DC
												Z	0 to 1V DC
													Other
												1	Communication function
												2	RS-232C
													RS-485
												Y	Mounting bracket
													None (Specify "None" when the bench type is selected)
												1	Mounting on panel surface
												2	Pipe mounting
												Y	Optional Functions
												1	None
												2	Combustion efficiency display function Note4)
												3	Blowdown
												4	Auto calibration
												5	Combustion efficiency display + Blowdown Note4)
												6	Combustion efficiency display + Auto calibration Note4)
												7	Blowdown + Auto calibration
													Combustion efficiency display + Blowdown + Auto calibration Note4)
												J	Display language
												E	Japanese
												C	English
													Chinese
												Y	Option
												1	None (Specify none when the converter has auto calibration function)
												2	With valve
													With valve + flowmeter

Note4) When you select this display, rich mode will be a simultaneous display.

<Detector>

4 5 6 7 8		9 10 11 12 13				14 15 16		Description
ZFK	8	R		5				
	1							Cal. gas inlet
	2							For f6mm tube
	3							For f1/4 inch tube
								Ball valve
	1							Power supply
	3							100 to 120VAC 50/60Hz
								200 to 240VAC 50/60Hz <b>CE</b>
								Flow guide tube
								flange application length
								Flow guide tube None None
								5 A 3 SUS304 general use 300mm
								5 A 5 SUS304 general use 500mm
								5 A 7 SUS304 general use 750mm
								5 A 1 SUS304 general use 1000mm
								5 B 3 SUS316 for corrosive gas 300mm
								5 B 5 SUS316 for corrosive gas 500mm
								5 B 7 SUS316 for corrosive gas 750mm
								5 B 1 SUS316 for corrosive gas 1000mm
								5 C 3 SUS316 with blow-down nozzle 300mm
								5 C 5 SUS316 with blow-down nozzle 500mm
								5 C 7 SUS316 with blow-down nozzle 750mm
								5 C 1 SUS316 with blow-down nozzle 1000mm
								6 D 8 SUS316 for high particulate 800mm
								6 E 8 SUS316 for high particulate with 800mm
								cover
								Z Z Z Others Others Others
								Note) Standard flange size is JIS5K-65A FF, but flange size for high particulate is JIS5K-80A FF.
								Protection cover
								Without
								A With
								Reference air inlet
								Y Non
								A For f6mm tube
								B For f1/4 inch tube
								Instruction manual language
								J Japanese
								E English
								C Chinese
								Specification name plate
								1 Standard (100 to 120V AC 50/60Hz)
								2 Standard (200 to 240V AC 50/60Hz)

<Ejector>

1 2 3 4 5 6 7 8								Description	
Z	T	A		1			1		Measured gas temperature
				1					For high temperatures (+1500°C max.)
				2					General-use (+800°C max.)
								B	Insertion length [mm]
								C	500
								D	750
								E	1000
									1500
									Power supply
								1	100V/115V AC 50/60Hz
								3	200V/220V AC 50/60Hz
								5	230VAC 50/60Hz

<Exclusive cable>

1 2 3 4 5 6 7 8 9									Description	
Z	R	Z	K	R			1			Connectable devices
			K							For ZKM
										Types
				R						For R thermocouple
									YA	Conduit length
									YB	Cable length
									YC	None
									YD	6m
									YE	None
									YF	10m
									YG	15m
									YH	20m
									YI	30m
									YJ	40m
									YK	50m
									YL	60m
									YM	70m
									AA	80m
									BB	90m
									CC	100m
									DD	None
										6m
										10m
										15m
										20m
										Note5
										6m
										10m
										15m
										20m
										Cable end treatment
									0	None
									1	One side (detector side)
									2	Both sides

Note5) For connection between detector and converter, the conduit to be used should be rainproof flexible type.

---

## **Fuji Electric Co., Ltd.**

### **International Sales Div**

#### **Sales Group**

Gate City Ohsaki, East Tower, 11-2, Osaki 1-chome,  
Shinagawa-ku, Tokyo 141-0032, Japan

<http://www.fujielectric.com>

Phone: 81-3-5435-7280, 7281 Fax: 81-3-5435-7425

<http://www.fujielectric.com/products/instruments/>

---